

AC Current sensor



Introduction

Use the AC Current sensor to measure and visualise the solar production of a PV Inverter. The measurements will be visible on the [Venus-device](#) and on the [VRM Portal](#).

The sensor is a simple external current sensor, which measures AC Current. Together with the voltage measurements is calculated into Apparent Power (VA) and Energy (kWh). The sensor can be wired to either the AUX input or the Temperature-input of Multi and Quattro inverter/chargers.

The AC Current Sensor is one out of multiple options to visualise the solar yield in a Victron system. See [here](#) for an overview.

Specifications


Power range	1.5 kW	3 kW	5 kW	7 kW	unit
Power step size Approx depends on input voltage (230V AC)	9	17	30	35	W
Power step size Approx depends on input voltage (120V AC)	4.5	8.5	15	17.5	W
Max measured Current	8	16	25	30.5	A
Max Input current	9	18	30	40	A
Dipswitch	all off	1	1,2	1,2,3	
Max # of sensors in one system	9				
Protection category	IP54				

Multi and Quattro hardware requirements

1. The Multi or Quattro needs to have the new microprocessor: make sure that the 7 digit firmware version number, as written on the microprocessor, starts with 26 or 27. Old, and therefore incompatible, control boards will have a firmware version starting with 19 or 20.
2. The TEMP-sense input of all Multi's and Quattro's is suitable for the AC Current Sensor.

3. The AUX-input however is not, see serial number list below to check your hardware.
4. The Multi or Quattro needs to be connected on the VE.Bus port of the Color Control GX: readout will not work when connected on the VE.Can port using a [VE.Bus to VE.Can interface cable](#).
1. On the Multiplus-II hardware revision 0 to 8, the AUX input is on the RJ12 connector, pin 1 and 5. Refer to appendix A of the Multiplus-II manual. In later revisions the AUX input is available as a normal terminal again.
2. This AC Current sensor (CSE000100000) should not be confused with the specific Current Transformer 100A:50mA accessory for MultiPlus-II (part number CTR110000500).

Installation

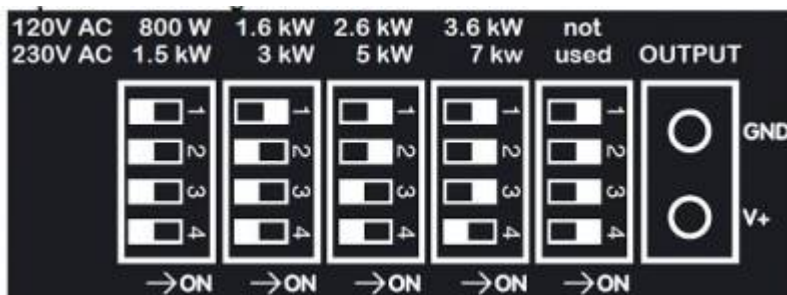

1. Pull one of the AC wires of the PV inverter through the AC Current sensor.
2. Connect the sensor to the AUX or TEMP-sense input of an Inverter, Multi or Quattro in the same phase as being measured by that current sensor.
3. Configure the power range with the dipswitches. Select the power equal or higher than the maximum expected power. For example, with a 4kW PV installation, the correct dipswitch setting is 5kW.
4. Multi-phase installations: add one AC current sensor for each phase of the PV inverter. Wire it to the Multi in the same phase.

Configuration

1. Make sure the firmware in the inverter/charger is 2xx or later. Instructions [here](#).
2. Parallel and three-phase systems: configure parallel or three-phase operation first.
3. Then use the VEConfigure3 to add and configure the 'AC Current sensor' assistant.
4. Parallel and three-phase systems: add the assistant to each Multi or Quattro that has an AC Current sensor connected to it.
5. Whilst the minimum required firmware in the [Venus-device](#) is v1.30, we require running on a more recent version.
6. Select the correct profile on the [Venus-device](#): Settings → System setup.

Compatibility list

Supported models		AUX input	TEMP input
Product code	Description	Minimum SN#	Minimum SN#
PMP123021010	MultiPlus 12/3000/120-50 - 230V	HQ1352	All serial numbers
PMP123021102	MultiPlus 12/3000/120-50 120V	HQ1322	All serial numbers
PMP243021010	MultiPlus 24/3000/70-50 230V	HQ1350	All serial numbers

Supported models		AUX input	TEMP input
Product code	Description	Minimum SN#	Minimum SN#
PMP243021102	MultiPlus 24/3000/70-50 120V	HQ1347	All serial numbers
PMP245021010	MultiPlus 24/5000/120-100 230V	HQ1326	All serial numbers
PMP485021010	MultiPlus 48/5000/70-100 230V	HQ1326	All serial numbers
-			
QUA123020010	Quattro 12/3000/120-50/50-230V	HQ1332	All serial numbers
QUA125020000	Quattro 12/5000/220-100/100-230V	HQ1347	All serial numbers
QUA125021100	Quattro 12/5000/220-100/100-120V	HQ1329	All serial numbers
QUA243020010	Quattro 24/3000/70-50/50-230V	HQ1341	All serial numbers
QUA245021010	Quattro 24/5000/120-100/100-230V +50A aux.	HQ1326	All serial numbers
QUA243020010	Quattro 24/3000/70-50/50-230V	HQ1341	All serial numbers
QUA245021010	Quattro 24/5000/120-100/100-230V +50A aux.	HQ1326	All serial numbers
QUA248020010	Quattro 24/8000/200-100/100-230V +50A aux.	HQ1333	All serial numbers
QUA483021100	Quattro 48/3000/35-50/50 120V	HQ1329	All serial numbers
QUA485021010	Quattro 48/5000/70-100/100-230V +50A aux.	HQ1330	All serial numbers
QUA485021100	Quattro 48/5000/70-100/100-120V/60Hz +50A aux	HQ1341	All serial numbers
QUA488020000	Quattro 48/8000/110-100/100 230V.	HQ1327	All serial numbers
QUA481030010	Quattro 48/10000/140-100/100 230V +50A aux	HQ1326	All serial numbers
QUA488020000	Quattro 48/8000/110-100/100 230V	HQ1327	All serial numbers
QUA481030010	Quattro 48/10000/140-100/100 230V +50A aux.	HQ1326	All serial numbers
-			
PMP243021014	Multi-G 24/3000/70-50	All serial numbers	All serial numbers
PMP245021014	Multi-G 24/5000/120-100	All serial numbers	All serial numbers
PMP485021014	Multi-G 48/5000/70-100	All serial numbers	All serial numbers
-			
Other models		All serial numbers	All serial numbers

DISQUS

~~DISQUS~~

From:
<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:
https://www.victronenergy.com/live/ac_current_sensor:start?rev=1544104321

Last update: **2018-12-06 14:52**

