

Victron & BMZ ESS 3.0 / ESS 7.0

1. Introduction


1.1 Compatible Victron products

All 48V Multis and Quattros. And always a Color Control GX is necessary in the system, since that has the canbus port which is used for the (required!) communication between the ESS battery and the Victron system.

1.2 Notes

- BMZ batteries can only be used in a [Victron ESS installation](#) installation that uses the ESS Assistant.
- Paralleling multiple BMZ ESS batteries to expand capacity is possible. Contact BMZ for more information.
- Derating, based on the dynamic BMZ ESS charge- and discharge limits:
 - Minimum CCGX version is v1.72
 - The derating mechanism is not very precise yet. In other words, do not expect a discharge limit of 30A to result in a precise discharge of 30A.
 - Actual charge- and discharge limits are visible in the Parameters page. See screenshot below in Chapter 4.

1.3 System diagram

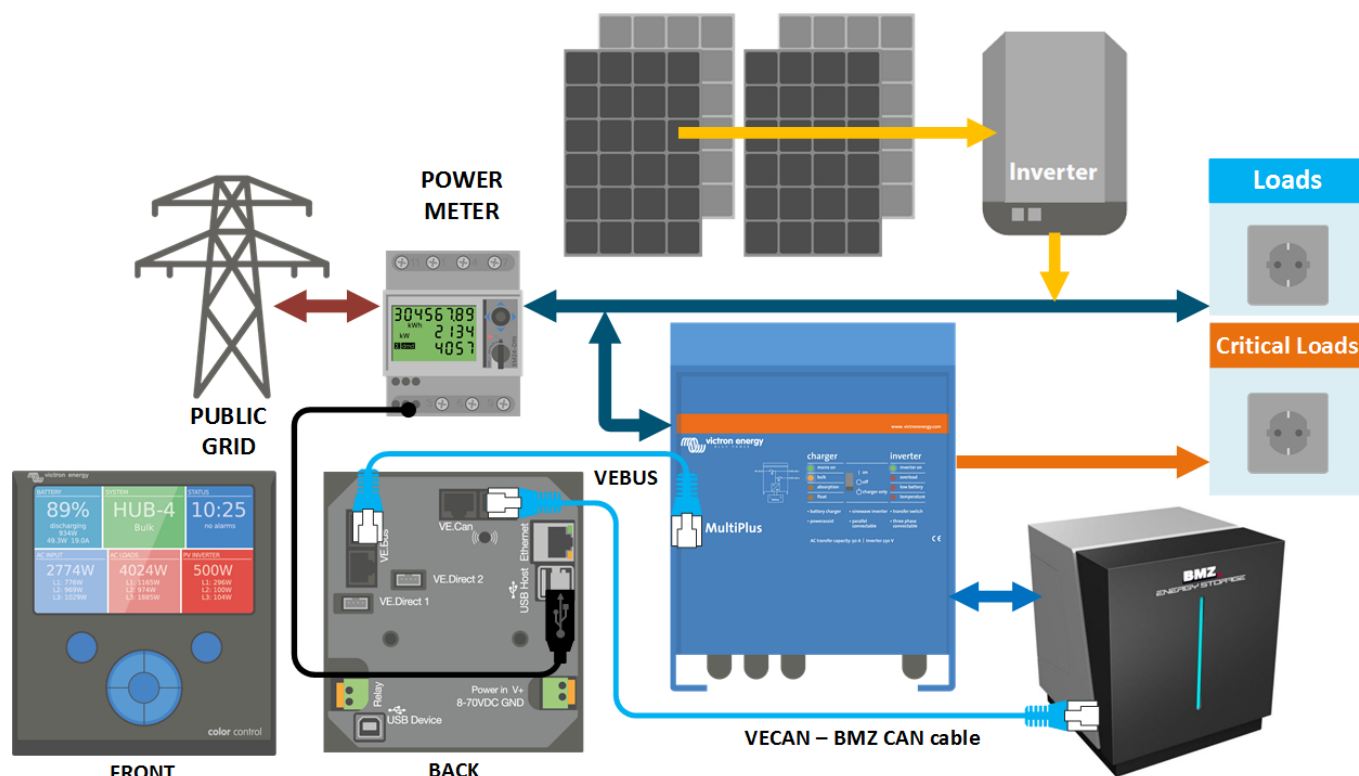

2. Wiring of communication cables

To use the BMZ ESS in Victron system, it is necessary to use a Color Control GX. The Color Control GX takes care of sending the necessary canbus keep-a-live message to the ESS battery. Without it, the battery will open its internal emergency relay after 10 minutes.

A special RJ-45 cable is necessary to connect the battery to the Color Control GX. Pinout:

| Function | VE.Can RJ-45 | BMZ ESS RJ-45 |
|----------|--------------|---------------|
| GND | Pin 3 | Pin 2 |
| CAN-L | Pin 8 | Pin 5 |
| CAN-H | Pin 7 | Pin 4 |

Place a VE.Can terminator in the empty socket on the CCGX

3. VEConfigure settings

3.1 Charge tab


| Parameter | Setting |
|--------------------|---------|
| Battery type | Lithium |
| Charge curve | Fixed |
| Absorption voltage | 56.8 V |
| Float voltage | 56.7 V |
| Absorption time | 1 Hr |

Note: make sure to double check the float voltage after completing Assistants, and if necessary set it

back to 56.7 V.

3.2 ESS Assistant

Select the fourth battery type:

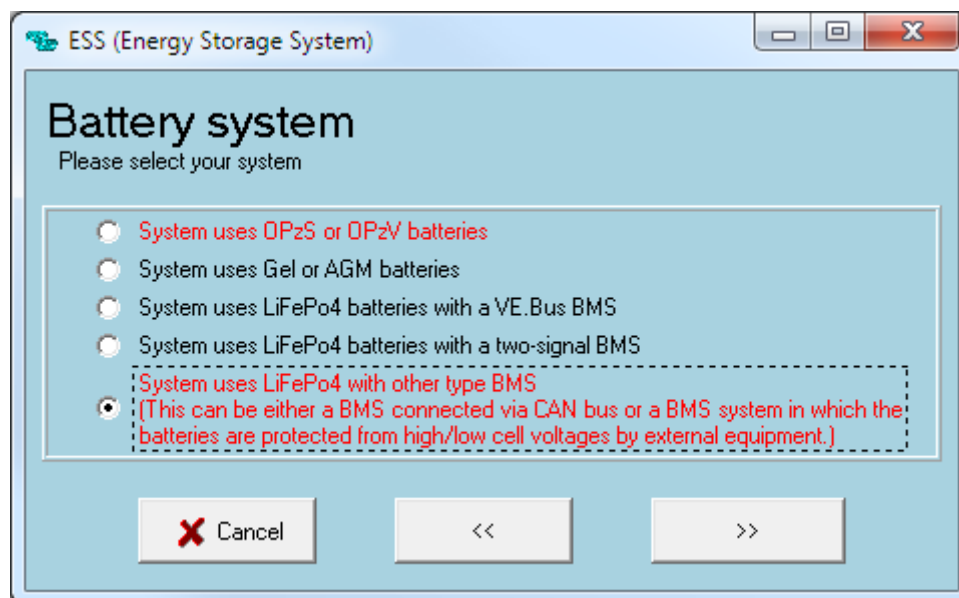

Then:

1. Enter the battery capacity:
 1. BMZ ESS 3.0 - 121.5 Ah
 2. BMZ ESS 7.0 - 121.5 Ah
2. Do not change the dynamic cut-off values, they have already been set correctly after selecting the lithium battery type.
3. Same for the restart offset: do not change that.

4. Color Control GX Configuration

- Enable the CAN-bus BMS Service in the CCGX. Menu path: *Settings* → *Services* → *CAN-bus BMS*. Note that this changes the function of a VE.Can port: it is not possible to connect both VE.Can products and a BMZ battery together.
- After properly wiring and setting up, the BMZ ESS will be visible as a battery in the device list:



- The parameters option within the battery page shows the actual battery charge and discharge

limits:

| Parameters | | 16:15 |
|-----------------------|--|-------|
| Max Charge Current | | 55.0A |
| Max Charge Voltage | | 58.1V |
| Battery Low Voltage | | -- |
| Max Discharge Current | | 16.0A |
| | | |
| Pages | | Menu |

- Make sure to enable the *Synchronize VE.Bus SOC with battery* setting in the System Setup page in the CCGX: it will copy the State of Charge as reported by the BMZ ESS to the Multi or Quattro, making Hub-4 work with that SOC.

DISQUS

~~DISQUS~~

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/battery_compatibility:bmz_ess?rev=1481441217

Last update: **2016-12-11 08:26**

