

Victron & Pylontech US2000B and Phantom-S

Compatible Victron products

All 48V Multis and Quattros. And always a [Venus-device](#) is necessary in the system, since that has the canbus port which is used for the (required!) communication between the Pylontech battery and the Victron system.

Notes

- PylonTech batteries can be used in either an [Victron ESS installation](#) or an off-grid system.
- It is necessary to have Distributed Voltage and Current Control (DVCC) enabled.
- Derating, based on the dynamic Pylontech charge- and discharge limits:
 - Minimum CCGX version is v2.20
 - The derating mechanism is not precise. In other words, do not expect a discharge limit of 30A to result in a precise discharge of 30A.
 - Actual charge- and discharge limits are visible in the Parameters page. See screenshot below.
- Pylon batteries and MPPT Solar Chargers with a VE.Can communication port cannot be both connected to the CCGX, because of different canbus speeds. Use Solar Chargers with a VE.Direct comm. port instead.

Venus-device needed

To use the BMZ ESS in Victron system, it is necessary to use a [Venus-device](#) eg [Color Control GX](#) or Venus GX. The [Venus-device](#) takes care of sending the necessary canbus keep-alive message to the ESS battery. Without it, the battery will open its internal emergency relay after 10 minutes.

Wiring of communication cables

This requires a specially wired cable to connect the battery to the [Venus-device](#). We strongly recommend buying the pre-made *VE.Can to CAN-bus BMS type B Cable*, part number ASS030720018 to reduce potential communication issues. Plug the side which is labeled Battery BMS into the Pylontech BMS. Plug the side labeled Victron VE.Can into the Venus-device.

Then, plug a [VE.Can terminator](#) in the other VE.Can socket on the [Venus-device](#). Two VE.Can terminators are included with the package of the CCGX as an accessory, only one is used. Keep the other one as a spare.

More information about the cable can be found in [its manual](#).

Without properly connecting this cable, the battery will stop charging/discharging after several minutes. Also, the battery will not show up on the display of the [Venus-device](#).


Multiple batteries

Chain the batteries using the RJ-45 cable supplied by Pylontech using the link ports on the battery:

The system auto configures itself: no software changes necessary.

The battery with the empty link port 0 is the master battery. Connect the master battery to the CCGX.

(2) The one with **emptyLink Port 0** is the **Master Battery Module**, others are slaves:

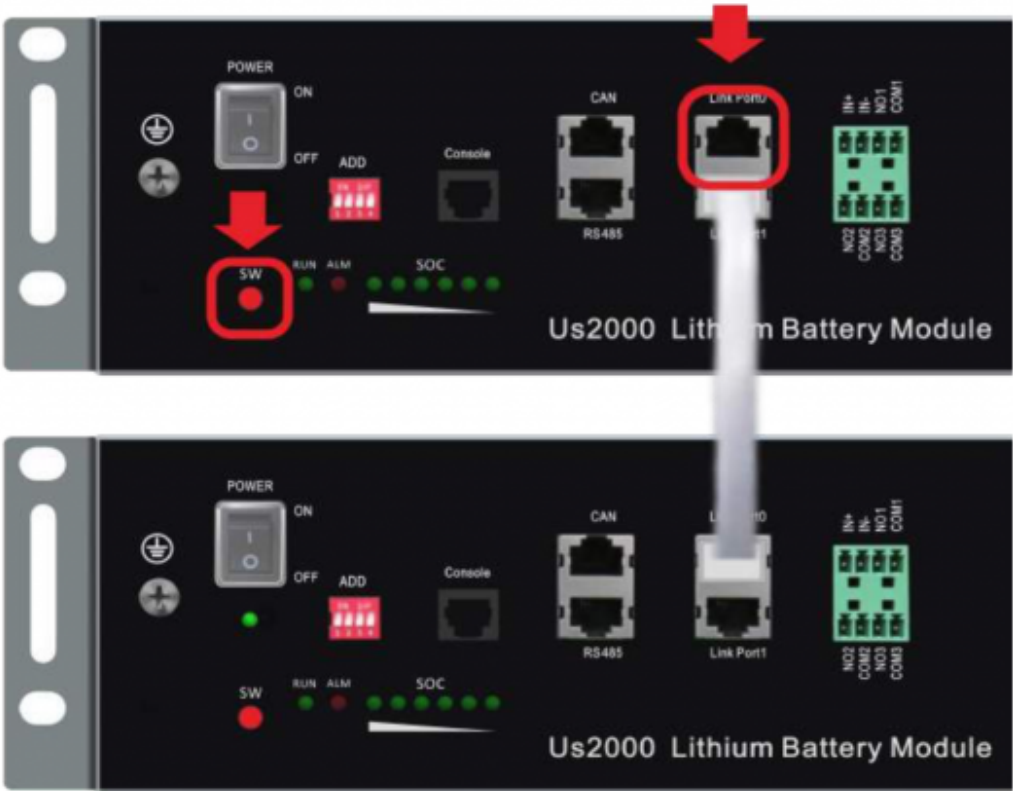

VEConfigure settings

General tab

- 1. Check “Enable battery monitor”
- 2. Set the battery capacity to 50Ah times the number of battery modules.
- 3. The other parameters (“State of charge when bulk finished” and “Charge efficiency”) can be left to their default setting. They are not used in this setup.

Charger tab

Parameter	Setting
Battery type	Lithium
Charge curve	Fixed
Absorption voltage	53.2 V


Parameter	Setting
Float voltage	53.0 V
Absorption time	1 Hr

Note: make sure to double check the float voltage after completing Assistants, and if necessary set it back to 53.0 V.

ESS Assistant

If you are using the battery as part of a grid connected ESS system - run the ESS Assistant in VEConfigure.

Select the fourth battery type:

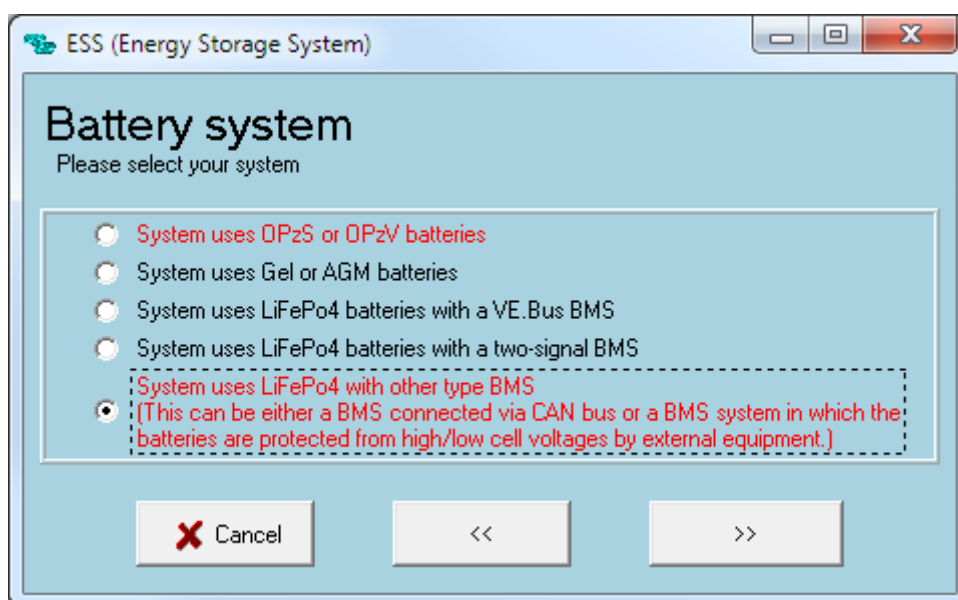

Then:

1. Sustain: 50.0V
2. Dynamic cut-off values: 47.0V
3. Restart offset: do not change

Venus-device Configuration

- Select the *CAN-bus BMS (500 kbits/s)* CAN-profile in the CCGX. Menu path: *Settings* → *Services* → *CAN-profile*. Note that this changes the function of a VE.Can port: it is not possible to connect both VE.Can products and an Pylontech battery together on a Color Control GX. Is is possible on a Venus GX
- After properly wiring and setting up, the Pylontech will be visible as a battery in the device list

Device List				16:18
Pylontech battery	41%	48.48V	-0.6A	>
BlueSolar Charger MPPT 150/70			10W	>
MultiPlus 48/5000/70-100			Bulk	>
Notifications			1	>
Settings				>
Pages				Menu

(if you have multiple batteries a single entry will show up, which represents all batteries).

- The parameters option within the battery page shows the actual battery charge and discharge limits:

<	Parameters	16:15
	Max Charge Current	75.0A
	Max Charge Voltage	53.2V
	Battery Low Voltage	--
	Max Discharge Current	75.0A
Pages		Menu

FAQ

The maximum charge and discharge current is limited to 25A, but the data sheet tells me the maximum is 100A.

The maximum current is limited to keep the battery healthy and reach the 10 year guarantee. In off-grid, the inverter can draw more than the 25A limit to run the loads, make sure you have sufficient batteries installed to keep the load per battery around this limit.

After charging the battery the charge current often changes between 0A and 25A.

This is caused by cell balancing inside the battery. This happens with new batteries and after a deep discharge.

DISQUS

~~DISQUS~~

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/battery_compatibility:pylontech_phantom?rev=1544100492

Last update: **2018-12-06 13:48**

