

Victron & Pylontech UP2500, US2000, US3000, US2000C, US3000C, UP5000, Phantom-S & Force-L1

The combination of Victron products with Pylontech lithium batteries has been tested and certified by the Victron and Pylontech R&D departments.

General information about the battery is found in Pylontech's documentation.

This manual is intended to be used in conjunction with the product manual supplied by Pylontech. It provides additional and specific information regarding integration with Victron systems.

The Pylontech includes a Battery Management System (BMS) with each battery module. This interfaces with the Victron [GX device](#) and can support multiple battery modules connected in parallel.

1. Product & system compatibility



Battery	UP2500*	US2000 (Plus/C)	US3000(C)	UP5000	Force-L1
Nominal voltage	24V	48V	48V	48V	48V
Module capacity	2.55 kWh	2.4 kWh	3.5 kWh	4.8 kwh	3.55 kWh

* Note that UP2500 came in two versions, UP2500NA01V00101 does not have a CANBUS port, and IS NOT supported by Victron. UP2500NB01V00101 released April 2020 has the CANBUS port and IS supported.

1.1 Offgrid, Backup and Energy Storage Systems are possible

Victron + Pylontech can be used for the following system types:

- Off-grid ([DVCC](#))
- Grid Backup ([DVCC](#) or [ESS](#))
- Energy Storage Systems (ESS) - Self Consumption ([ESS - Start page](#))

1.2 A GX-device is required, eg Cerbo GX or Venus GX (VGX)

It is essential to use the CAN-bus connection of the [GX device](#) (e.g. Cerbo GX or CCGX) - this communicates the keep-alive signal, charge and discharge limits, error codes and state of charge (SOC %) between the batteries and the system.

For new systems, the minimum required firmware version for the [GX Device](#) (e.g. Cerbo GX is v2.42. It is highly recommended to use the latest firmware version on all connected devices, including the GX device Inverter/Charger and MPPTs. There are regular updates to improve performance and reliability.

Legacy systems installed with v2.15 can continue to be used without upgrade as long as they do not present any issues.

1.3 All Multi, MultiPlus, MultiGrid and Quattro are compatible

As long as you are using the appropriate model for the nominal battery voltage, all VE.Bus inverters and inverter/chargers are compatible.

The minimum firmware version for new installations is 469. Though [updating to the latest firmware](#) is recommended where possible, and a necessary first step when troubleshooting issues.

These inverter/charger units must be connected to the [GX device](#) via the VE.Bus connection port.

Legacy systems installed with VE.Bus firmware 422 can continue to be used without upgrade as long as they do not present any issues.

1.4 All VE.Direct BlueSolar and SmartSolar MPPT Chargers are compatible

For proper operation, the Pylontech battery needs to be able to control the charge current. Therefore it is recommended to use Victron 48V compatible MPPTs models with VE.Direct port for charging.

MPPTs with a VE.Direct port

MPPTs are controlled via the [GX device](#). Make sure the [GX device](#) runs v2.15 or later, and the MPPTs to 1.37 or the latest available version.

The MPPT requires connection to the [GX device](#) to regulate charge currents as the batteries require (due to temperature, etc) To test operation, try disconnecting the [GX device](#) from the MPPT. After a time-out, the MPPT will stop charging and flash an error code on its LEDs. The error code is [error #67: no BMS](#).

MPPTs with a VE.Can port

New Model (2019 and later) VE.Can MPPTs are also supported from firmware version 1.06 and above. Be aware that some GX devices (e.g. CCGX) only have a single CANBus interface, and that is required for the battery communications. So if you use a new VE.Can MPPT, it must also be with a GX device that has more than one CANbus interface, e.g. the Cerbo GX.

Old model VE.Can MPPTs (pre 2019) are not supported.

2. Minimum Battery Sizing Recommendations

The charge and discharge rates are managed automatically by the Pylontech battery and [GX device](#).

Using very large solar arrays with battery banks that are too small can exceed the limits of the batteries ability to charge and possibly lead to the BMS triggering over-current alarms.

You must have the minimum number of battery modules to supply the inverters startup inrush surge currents that charge the capacitors when the inverter is first connected, this occurs prior to any loads being connected. There is also the subsequent potential current demands of the loads connected to the inverter. It is much more desirable to have the inverter/charger overload than the battery, as the inverter will automatically recover, whereas the battery may require intervention once in a fault state.

Some suggested battery sizings for common Victron inverter/chargers are listed below. These are suggestions for reliable operation for single phase off grid and are not specified by Pylontech.

Using the above formula, an example of minimum system sizing based on the US2000 battery module is below. Each battery module is approximately 50Ah at 48V, can provide 25A continuous charge and discharge and 100A peak for 1 minute.

Inverter / Charger Model	Inv continuous watts @ 25 degrees	Inverter peak watts surge rating	Number of Pylontech modules	Battery continuous discharge watt rating	Battery peak discharge watt rating
Multiplus 48/500/6	430	900	1	1200	4800
Multiplus 48/800/9	700	1600	1	1200	4800
Multiplus 48/1200/13	1000	2400	1	1200	4800
Multiplus 48/3000/35	2400	6000	2	2400	9600
Multiplus 48/5000/70	4000	10000	4	4800	19200
Quattro 48/8000/110-100/100	6500	16000	6	7200	28800
Quattro 48/10000/140-100/100	8000	20000	7	8400	33600
Quattro 48/15000/200-100/100	12000	25000	10	12000	48000

3. CAN-bus Wiring



You can connect multiple battery modules together to form a single large battery by connecting the RJ-45 cable supplied by Pylontech using the link ports on the battery. This is shown in more detail in the [example wiring diagram](#) and Pylontech manual.

The communications for UP2500 can be paralleled up to 20 modules per string (and cannot use the LV-HUB). Other models can connect up to 8 battery modules (see Pylontech data sheets), in those models when using more than 8 parallel units, some limitations, additional configuration or equipment (e.g. Pylontech LV-Hub) may apply. See your Pylontech dealer, and Pylontech documentation for more details.

The batteries will automatically detect and link to each other, no adjustment of dip switches on the battery module are necessary.

The battery with the empty link port 0 is the master battery. You must use the *VE.Can to CAN-bus BMS type B Cable*, part number ASS030720018 for connection with US2000/US3000/UP2500; and *VE.Can to CAN-bus BMS type A Cable*, part number ASS030710018 for connection with US2000C/US3000C/UP5000/Force-L, you cannot use the cable supplied by Pylontech.

Plug the communication cable with the side which is labeled Battery BMS into the Pylontech CAN port of the master battery. Plug the side labeled Victron VE.Can into the [GX device](#).

Then, plug a [VE.Can terminator](#) in the other VE.Can socket on the [GX device](#). Two VE.Can terminators are included with the package of the [GX device](#) as an accessory, only one is used. Keep the other one as a spare.

More information about the cable can be found in [its manual](#).

Without properly connecting this cable, the battery will not show up on the display of the [GX device](#).

The battery will also turn itself off.


It is important to ensure this connection and display of the battery on the [GX device](#) display before attempting firmware updates or settings changes on other devices if they depend on the power supply from the battery. Without this connection, the battery may turn off unexpectedly.

4. GX Device Settings

On the [GX device](#),

- Select the *CAN-bus BMS (500 kbit/s)* CAN-profile in the CCGX. Menu path: *Settings* → *Services* → *CAN-profile*.

After properly wiring and setting the correct CAN-bus speed, the Pylontech will be visible as a battery in the device list. If you have multiple batteries a single entry will show up, which represents all batteries:

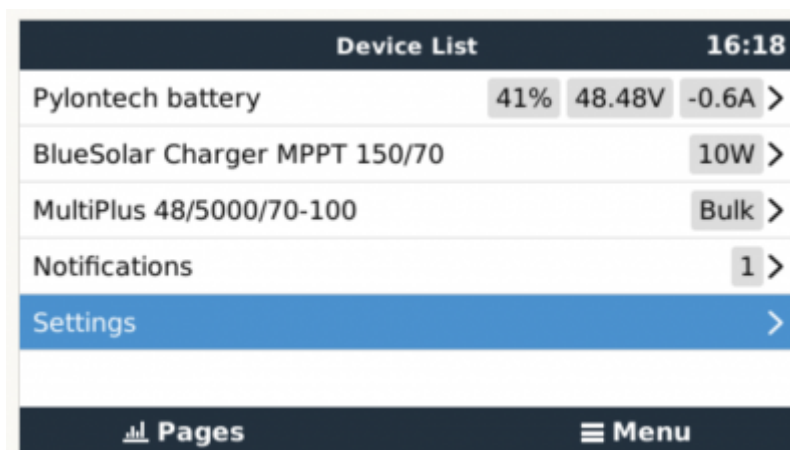


Device List			16:18
Pylontech battery	41%	48.48V -0.6A	>
BlueSolar Charger MPPT 150/70		10W	>
MultiPlus 48/5000/70-100		Bulk	>
Notifications		1	>
Settings			>
Pages		Menu	

When the battery is correctly connected this will also set the following values automatically:

Venus Settings → System Setup Parameter	Value
DVCC	ON
Shared Voltage Sense	OFF
Shared Temperature Sense	OFF

- The parameters option within the battery page shows the actual battery charge and discharge limits

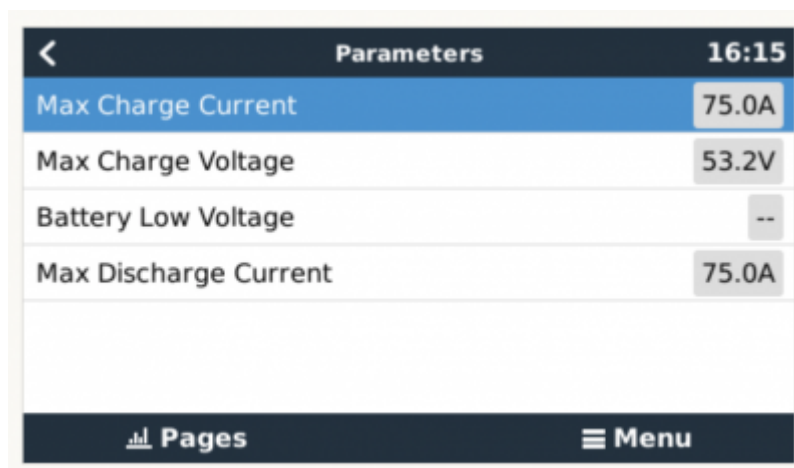

The screenshot shows a mobile application interface titled 'Parameters' with a back arrow on the left and the time '16:15' on the right. The interface lists four battery parameters with their current values in a table-like structure. Below the list is a 'Pages' button with a bar chart icon and a 'Menu' button with a hamburger icon.

Parameters		16:15
Max Charge Current	75.0A	
Max Charge Voltage	53.2V	
Battery Low Voltage	--	
Max Discharge Current	75.0A	

Pages Menu

This parameters page is also a good place to check that all batteries are connected and working properly. In see the individual battery data sheet for the normal working conditions, e.g. the current limit per cell. For example, If each battery is rated to 25A charge current, and the menu shows a 75A charge current limit ($75 / 25 = 3$) means there are 3 Pylontech battery modules connected.

Note that 'details' menu of the battery (e.g. Lowest and Highest cell voltages etc) is not currently supported by Pylontech.

5. VEConfigure Settings

When using the latest firmware on all compatible connected devices, and once the battery module has been detected by the GX device, battery charging parameters (e.g. Maximum Charge Current, Target Battery Voltage, etc) are automatically configured by the Pylontech BMU, and communicated to the rest of the Victron components in the system via [DVCC](#).

It is possible to override some of these automatic settings to provide additional limitations (e.g. reduce the total charge current that would be provided but the MultiPlus). The following information is provided for that purpose, though is not required for the safe operation of the system.

This section presumes familiarity with [VEConfigure software](#).

Voltages shown are for the 48V model, and should be scaled for the 24V model. The 24V model is an 8-series configuration while the 48V model is a 15-series configuration. Voltages should therefore be scaled by 8/15.

5.1 General tab

- Check the “Enable battery monitor” function
- Set the battery capacity to the total capacity of the battery: eg 50Ah times the number of battery modules for the US2000 model.
- The other parameters (“State of charge when bulk finished” and “Charge efficiency”) can be left to their default setting: They are ignored for a Pylontech installation.

5.2 Charge Settings

Charger tab

Parameter	Setting
Battery type	Lithium
Charge curve	Fixed
Absorption voltage	52.0 V
Float voltage	51.0 V
Absorption time	1 Hr

Note: make sure to double check the float voltage after completing Assistants, and if necessary set it back to 51.0 V.

Note For off-grid use: ignore the 'bms assistant required' warning.

5.3 Inverter Settings

In the Inverter tab of VEConfigure

VEConfigure Inverter Parameter	Setting
DC input low shut-down	44V
DC input low restart	48V
DC input low pre-alarm*	48V


* The pre-alarm setting is dependant on your preference and on site specific requirements. You may wish for this to be activated earlier in an off grid situation to allow time to start a backup generator.

ESS System Settings

If you are using the battery as part of a [grid connected ESS system](#), please review the [ESS Quickstart guide](#) and [Design and Installation Manual](#).

The settings that are specific to the Pylontech battery in the VEConfigure ESS Assistant are below:

Select the externally managed Lithium battery option

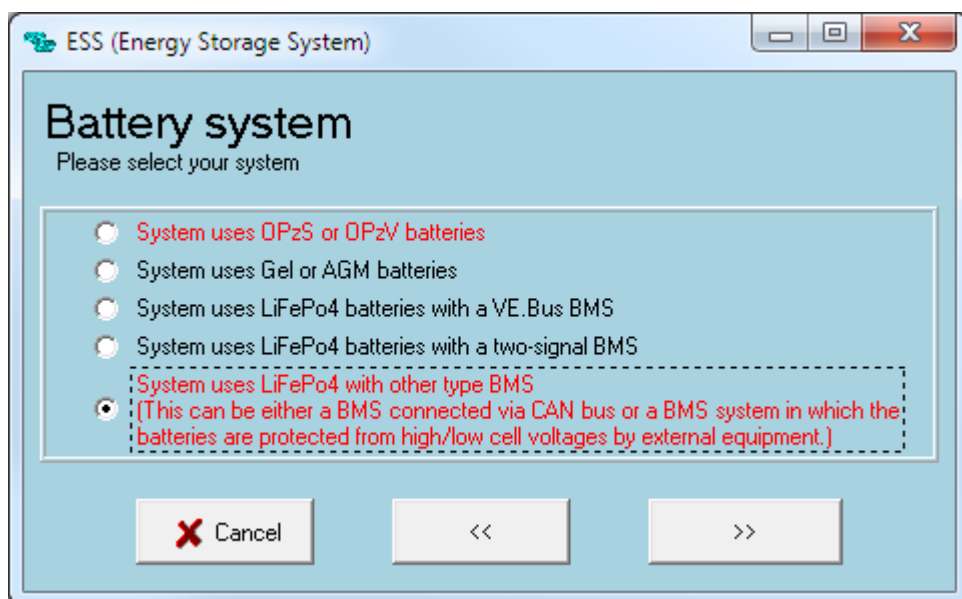

ESS Parameter	Settings
Sustain voltage.	48V
Dynamic cut-off values	set all values to 46V.
Restart offset:	1.2V (Default)

Due to the reliability of the grid supply and the behaviour of the sustain voltage threshold in ESS; you may wish to suppress the low voltage pre-alarm warning so that it does not trigger every day on its regular deep cycle. See [ESS FAQ Q5](#) - about suppressing the low-voltage alarm.

Hardware Protection Points

In normal operation, the charge parameter limits are set by the Pylontech battery and communicated through the system by the [GX device](#) to the inverter/charger and MPPT.

- Low Voltage: When the battery discharges to 44.5V or less, battery protection will turn on.
- High Voltage: If charging voltage above 54V, battery protection will turn on.
- Working discharge temperature range is from -10 to 50 degrees celsius.
- Charging temperature range is from 0 to 50 degrees celsius.
- Discharge Current Limit set to 0A at 47V, inverter will turn off.
- Over-charge and Over-discharge Current Limit 102A for 15 seconds, 200A for 0.1 seconds and 400A short circuit current.

If operation is attempted outside the operating range, the battery will disconnect to protect itself.

6. VE.Direct MPPT Settings

In normal operation the MPPT charge characteristics are governed by the [GX device](#) via DVCC, with instructions from the connected Pylontech battery.

This section presumes familiarity with [VictronConnect](#)

MPPT Parameter	Setting
Battery voltage.	48V
Absorption voltage	52V

This diagram illustrates a Victron Pylontech system configuration. The components and their connections are as follows:

- AC Supply:** Grid or Generator, No break loads, and Loads.
- MultiPlus-II:** The central inverter/charger. It has AC input (ACin) and two AC outputs (ACout1, ACout2) for AC distribution. It also has battery terminals (BAT+, BAT-) for DC distribution.
- Color Control GX:** A monitoring unit connected to the MultiPlus-II via a VE-Bus cable.
- CANbus Type B Cable:** Connects the Color Control GX to the MultiPlus-II.
- MPPT:** A Maximum Power Point Tracking charge controller connected to the PV Array and the MultiPlus-II battery terminals.
- PV Array:** Solar panels providing power to the MPPT.
- DC Distribution:** A busbar system that distributes power from the MultiPlus-II battery terminals to the Pylontech battery modules.
- 48V Pylontech Battery Modules:** Two modules shown, each with a CANbus Type B cable connected to the MultiPlus-II.
- Other Components:** A CANbus Terminator, Ethernet, and Internet connection are also shown.

The diagram includes the following text:

This diagram is intended to assist with installation and illustrate the connections that are required for operation.

Installations must always be completed by an authorised person in accordance with manufacturers specifications, local laws, standards and on-site conditions.

Grounding requirements vary according to your region. Victron advises making an earth connection to all metal enclosures as shown in this diagram.

Victron-Pylontech 2018 12-28-13 37

8. Troubleshooting


If the system is not operating correctly, go through these steps.

Step 0. If the Inverter/Charger or GX device does not switch on

As a safety precaution, the inverter/charger will not switch on if the [GX device](#) is not on. If you are unable to start the system due to a total system blackout / battery shutdown due to low voltage, you may need to disconnect the VE.BUS connection cable between the inverter/charger and [GX device](#).

You can then start the inverter/charger from an external charge source such as a generator or grid connection. Once the inverter/charger has started, it should supply power to the DC terminals and this should start the [GX device](#) and Pylontech battery again. You will need to then reconnect the VE.Bus Communications cable back to the inverter/charger and [GX device](#).

Step 1. Check that the Pylontech battery is visible on the GX device list

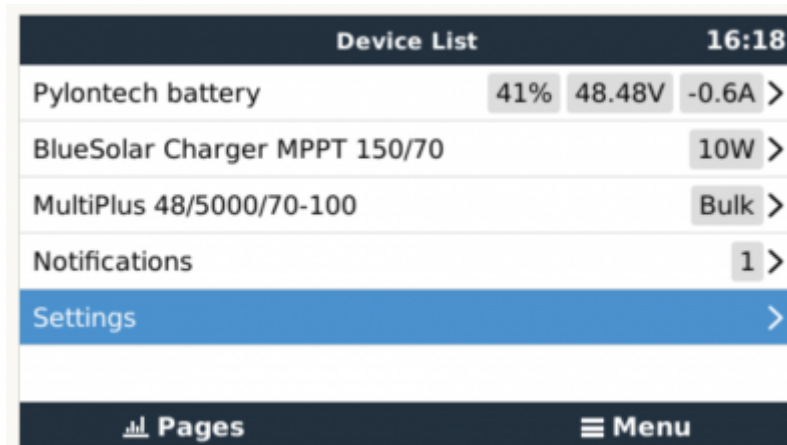

Device List				16:18
Pylontech battery	41%	48.48V	-0.6A	>
BlueSolar Charger MPPT 150/70			10W	>
MultiPlus 48/5000/70-100			Bulk	>
Notifications			1	>
Settings				>
Pages				Menu

If its not visible, check:

- [GX device](#) firmware version (update to latest version, v2.15 or later)
- CAN-bus communication cabling between Pylontech and Victron system. Make sure that it is in the right way around.
- Pylontech system is up and running (LEDs are on)

Step 2. Check that the Pylontech battery is ready for use

Check the Max Charge Voltage parameter. This voltage parameter is sent, together with the other three parameters, by the Pylontech system via the CAN-bus cable. They are visible on the [GX device](#): Device List → Pylontech battery → Parameters menu.

Step 3. Check the Pylontech manual

The Pylontech manual contains additional diagnostic and troubleshooting information, specifically around decoding any indicator LEDs.

9. FAQ and Known Issues

The maximum charge and discharge current is limited to 25A, but the data sheet tells me the maximum is 100A.

The maximum current is limited to keep the battery healthy and reach the 10 year guarantee. In off-grid, the inverter can draw more than the 25A limit to run the loads, make sure you have sufficient batteries installed to keep the load per battery around this limit.

After charging the battery the charge current often changes between 0A and 25A.

This is caused by cell balancing inside the battery. This happens with new batteries and after a deep discharge.

My system isn't charging at the rated capacity, or my PV is shutting down

Pylontech's BMS will restrict the Charge Current Limit of the battery in cold weather. The precise temperatures and limits are not published by Pylontech, but anecdotally from reports on [Victron Community](#) it would appear that batteries begin to be limited below 18 degree C, severely limited below 10 degrees C, and completely restricted from charging below 2 degrees C.

You can confirm if this is affecting your installation by entering the Pylontech Battery menu on your GX device, and then the Parameters Menu. This will report the Charge Current Limit (CCL) and Discharge Current Limit (DCL). This information is also logged in the advanced section of the VRM monitoring portal.

My system only charges the battery to 52.4V

When DVCC is enabled, the battery (via the CAN-bms) is responsible for the charge voltage. The Pylontech battery requests a charge voltage of 53.2V. We have however found that in practice this is too high.

The Pylontech battery has 15 cells in series, so 53.2V equates to 3.55V per cell. This is very highly charged and makes the system prone to go overvoltage.

It should also be noted that a LiFePO4 cell stores very little additional energy above 3.45V.

For this reason we opted to override the BMS and cap the voltage at 52.4V. This sacrifices almost

none of the capacity and greatly improves the stability of the system.

The battery won't charge to 100%

Also see the question above. The state of charge of the battery is estimated based on the overall voltage and on how well balanced the internal cells are. Because we cap the battery voltage at 52.4V, the state of charge will sometimes rise very slowly once it reaches the mid-90s. This is normal and usually resolves over time.

'Internal Error' shown on battery status

The 'Internal Error' shown in battery status is not a critical error. This only defines that within a battery system, some of the slave batteries are offline(which is due to these modules have been discharged to an extremely low SOC or being in idle mode for more than 72hrs), once the system is available for a charging activity such an error will be automatically eliminated.

'High voltage' warning or alarm shown on battery status

The 'high voltage' warning or alarm is normal on new batteries that are not yet balanced. To help the batteries balancing quickly, keep the batteries fully charged until the errors go away. In an ESS system, set it to 'keep batteries charged', in an off-grid system the fastest way is to either charge / balance the batterie before installation, or to fully charge with a generator if not enough solar is available to keep the batteries fully charged.

10. Further Information

For information about where to buy or find suitably qualified installers, visit the [Where to Buy Page](#).

Further community discussion about installing and using Pylontech and Victron can found at [Victron Community](#), use the topic label 'Pylontech'.

DISQUS

~~DISQUS~~

From:
<https://www.victronenergy.com/live/> - Victron Energy

Permanent link:
https://www.victronenergy.com/live/battery_compatibility:pylontech_phantom?rev=1615873446

Last update: 2021-03-16 06:44



