

# Victron & Pytes

## 1. Product & System compatibility


### 1.1 A GX device is required, eg Cerbo GX, etc

It is essential to use the BMS-Can (500 kbit/s) connection type of a [GX device](#) with these batteries for communication of charge and discharge limits, error codes and state of charge.

It is possible to use either the BMS-Can or VE.Can ports with this battery. Depending which one you use will require additional configuration on the batteries side, please see the documentation linked below for instructions.

The minimum supported firmware version is v3.31. It is recommended to use the latest firmware version on new installations and when trouble shooting issues.

Connecting a Pytes battery to the GX device will require enabling DVCC, and disabling SVS and STS.

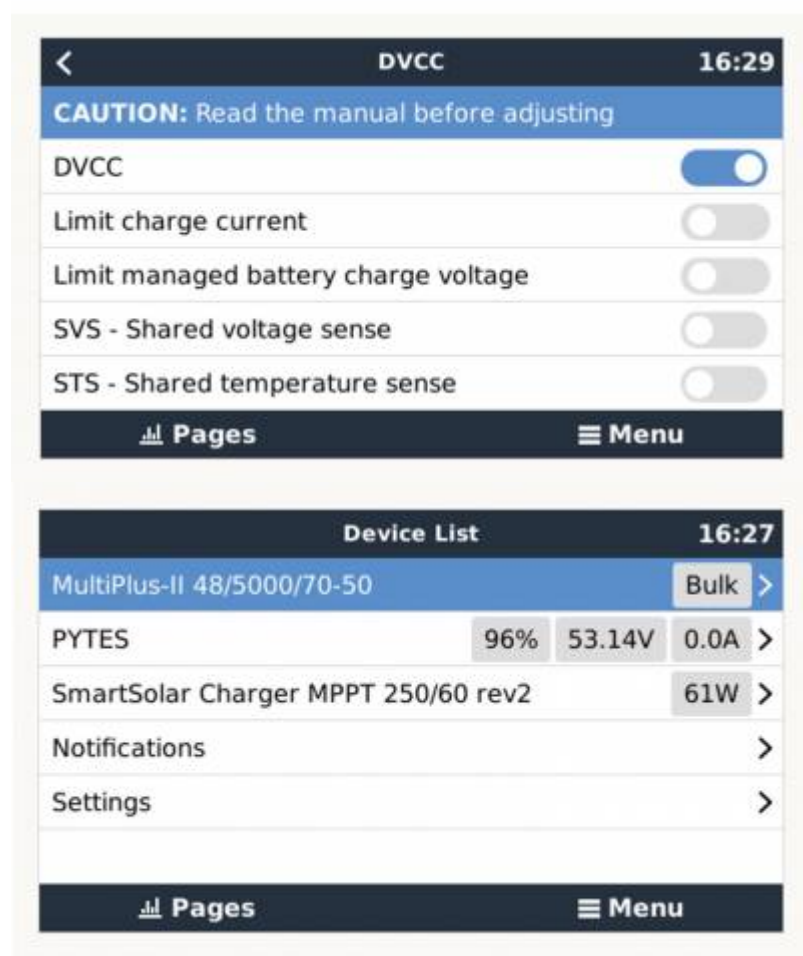

<

Details

16:28

Lowest cell voltage	0800	3.321V
Highest cell voltage	0500	3.327V
Minimum cell temperature	0000	26°C
Maximum cell temperature	0000	26°C
Battery modules	1 online	0 offline
Nr. of modules blocking charge / discharge	0	0

Pages

Menu

<


Parameters

16:28

Charge Voltage Limit (CVL)	53.8V
Charge Current Limit (CCL)	12.5A
Discharge Current Limit (DCL)	50.0A

Pages

Menu

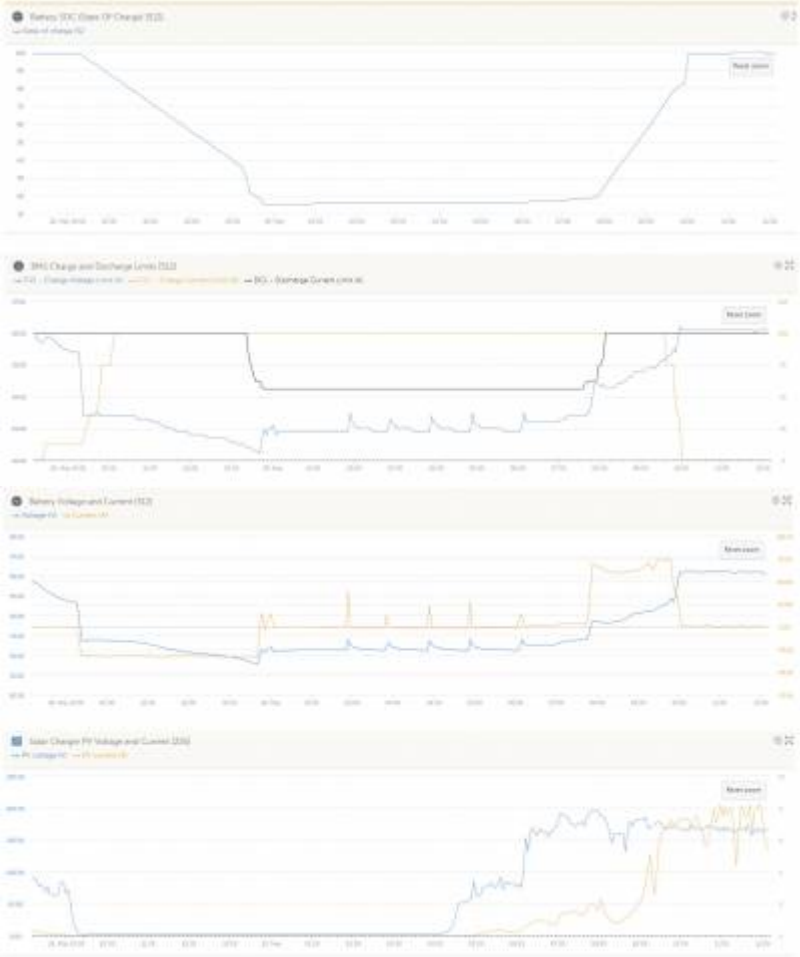

## 1.2 All 48V Multis, MultiPlus, Quattros and RS models are compatible

The minimum supported firmware version for VE.Bus models is 469. Minimum supported firmware for RS models is 1.16. Updating to the latest firmware is recommended for new installations, and troubleshooting issues.

These VE.Bus inverter/charger units must be connected to the [GX device](#) via the VE.Bus connection port.

In grid connected systems, advanced control functions are configurable in the ESS settings on the [GX device](#).

In off-grid systems, the control functions of the Battery Management System (BMS) are built into the latest version of the [GX device](#).

## 1.3 Solar Charger compatibility

All 48V BlueSolar and SmartSolar MPPT Chargers are compatible.

Some of our Solar Chargers feature a VE.Direct communication port, some feature a VE.Can communication port, and some feature both. Both of these types of communication ports can be used to connect the Solar charger to the GX Device. Such connection is mandatory, because it is used to regulate charge currents and voltages.

# 2. Minimum battery sizing

For reliable operation there are minimum numbers of batteries required for different Victron inverters. Please contact your battery supplier for these specifications.

# 3. Further system integration documentation

Installation and configuration manual with Victron Energy

Pytes Victron Guide

Victron VE.Configure3 settings with Pytes

Ebox Series manual

Further details about installation and configuration is available from your battery manufacturer.

## 4. Support

Support for this battery should first come from your battery supplier. Pytes has a service email at [ess\\_support@pytesgroup.com](mailto:ess_support@pytesgroup.com)

Support from Victron is limited our online [Victron Community](#) page.

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

[https://www.victronenergy.com/live/battery\\_compatibility:pytes?rev=1718743097](https://www.victronenergy.com/live/battery_compatibility:pytes?rev=1718743097)

Last update: **2024-06-18 22:38**

