

# CCGX & Fronius PV Inverters

By connecting a Fronius PV Inverter and [Color Control GX](#) (CCGX) together you be able to:

1. See Fronius information on the CCGX.
2. Monitor the Fronius on the VRM Portal.
3. Allow the Victron system to control the Fronius output power, Zero feed-in. See the [ESS manual](#), chapter 2.1.3 Fronius Zero feed-in for details.

This document describes how to setup the monitoring functions. For more information on using Fronius PV Inverters in a Victron system, see: [AC-coupled PV with Fronius PV Inverters](#).

## 1. Requirements

Model	Required accessory
Fronius Symo Light	Purchase and install the <a href="#">datamanager 2.0</a>
Fronius Symo	No accessory needed, datamanager card installed from factory
Fronius Galvo	No accessory needed, datamanager card installed from factory
Fronius Primo	No accessory needed, datamanager card installed from factory
Fronius IG Plus (*)	Purchase and install the <a href="#">datamanager 2.0</a>
Fronius Agilo	Purchase and install the <a href="#">datamanager box</a>

(\*) The Fronius Zero feed-in feature - which is part of an Energy Storage System [ESS](#) - will work on all the above models except the *IG Plus*.

All recent Fronius inverters - for example the Fronius Primo - will arrive fitted with a *datamanager 2.0*, as standard.

Both the Fronius and the CCGX need to be connected on the same LAN - either via Wi-Fi or Ethernet.

Note that the [Datalogger Web](#) is not supported. Contact your Fronius dealer to find out about the upgrading options.

## 2. Configuring

### 2.1 Setup Local Area Network (LAN) Configuration

In order to establish a data communication between the Fronius and the CCGX, you will have to setup a valid LAN IP address on the Fronius, using one of the following methods:

#### 2.1.1 DHCP addressing method

If you have a DHCP server running on the LAN the Fronius and CCGX are connected to, you don't need to manually configure your LAN IP addresses as the DHCP server does this for you. Make sure, that

the “IP Switch” is in “B” (default) position on the datamanager, to allow the Fronius to obtain it's IP address. It can be reviewed in the Address Lease Table of the DHCP server.

### 2.1.2 Link-local addressing method

When no DHCP server is present on the LAN and you only have one Fronius unit to connect, Link-local addressing can be used to establish data communication between the CCGX and the Fronius. This could be the case, if you use a WiFi Network for the CCGX to gain access to the Internet and have a Fronius connected to the wired LAN Interface of that CCGX.

Note, that no direct access to the internet will be possible for the Fronius in that configuration and therefore only communication to the CCGX is possible.

This method can only be used to configure a single Fronius unit within a LAN. Multiple Fronius devices in the same LAN must be configured with DHCP, or manual addressing method.

1. Make sure the “IP Switch” on the Fronius Datamanager is on position “A”

#### / IP switch

/ A - Specified IP address and opening the WLAN Access Point

/ B - Assigned IP address

**START IN THE 'A' POSITION FOR THIS PROCEDURE**



2. Connect both, the Fronius and the CCGX, on the same LAN network, either directly with a LAN cable or using a network switch.
3. The Fronius is now accessible and having a “Link-local” capable IP address configured: 169.254.0.180

### 2.1.3 manual addressing method

#### Markus

1. You will have to configure the IP address of the Fronius to be in the same subnet as the IP address of the CCGX. To do this, first have a look at the IP configuration your CCGX is using on that network. The IP configuration can be reviewed in Settings -> Ethernet. IP address and Subnet Mask, are the settings of importance. If the LAN IP address and Subnet Mask of the CCGX is not configured yet, you

will have to set it first. As an example, the IP address on the CCGX could be: 192.168.10.1 and the Subnet Mask: 255.255.255.0. Configuring the Fronius to the same subnet means setting a manual IP address to: 192.168.10.2 and the same Subnet Mask of 255.255.255.0 on the Fronius. It is important to say, that every device on your LAN has to have a unique (different) address and so the last segment (.1/.2) in this example has to differ on every device on the same LAN. The highest value, that can be set for this segment is 254. The subnet is described by the first 3 segments in this case and so they have to be the same. Configuring multiple devices with exactly the same IP addresses (same last segment) will lead to network errors and should be avoided at all events. Use different IP subnets for the WiFi and wired LAN interface. The IP address ranges used on each interface should differ in the third segment. As an example: 192.168.10.1-254 for LAN IP's and 192.168.11.1-254 for WiFi IP's.

2. Configure the Fronius Datamanager, referring to its operating manual, for using an IP address on the same subnet, as described above. If you have the possibility to access the internet from within your LAN and you want the Fronius to be able to use it, you have to set Gateway and DNS IP addresses on the Fronius too.

## GUY

You will have to configure the IP address of the Fronius to be in the same subnet as the IP address of the CCGX. To do this, first have a look at the IP configuration your CCGX is using on that network.

The IP configuration can be reviewed in Settings -> Ethernet. The important settings are the IP address and Subnet Mask.

If the LAN IP address and Subnet Mask of the CCGX is not configured yet, you will have to set it first.

As an example, the IP address on the CCGX could be: 192.168.10.1 and the Subnet Mask: 255.255.255.0.

Configuring the Fronius to the same subnet means setting a manual IP address to: 192.168.10.2 and the same Subnet Mask of 255.255.255.0 on the Fronius.

Every device on your LAN has to have a unique (different) IP address and so the last segment (.1/.2) in this example has to differ on every device on the same LAN. The highest value, that can be set for this segment is 254.

The subnet is described by the first 3 segments in this case and so they have to be the same. Configuring multiple devices with exactly the same IP addresses (same last segment) will lead to network errors. Use different IP subnets for the WiFi and wired LAN interface. The IP address ranges used on each interface should differ in the third segment.


As an example: 192.168.10.1-254 for LAN IP's and 192.168.11.1-254 for WiFi IP's.

Configure the Fronius Datamanager to use an IP address on the same subnet, as described above. You may need to refer to the Fronius operating manual for how this is done for your Fronius Inverter model,

If you would like to connect the Fronius to be able to use the internet connection of your Local network, you have to set Gateway and DNS IP addresses on the Fronius as well. They should be exactly the same as in the Settings -> Ethernet of the CCGX.

## 2.2 Adding Fronius to the CCGX

1. In the CCGX, navigate to *Settings* and then the *Fronius PV Inverters* section. You will see this menu:

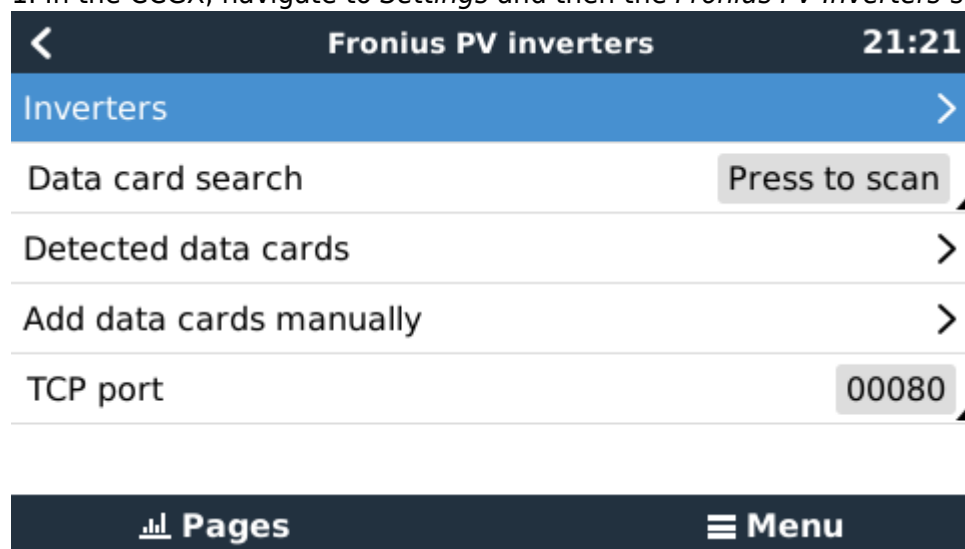

2. Select *Scan* in the CCGX menu, and after completion go into the Inverters submenu to see the results. If scanning does not find the inverter, manually add the IP address of the Fronius Datamanager from its card, or box.

3. Once located, you will see the Inverters listed in the menu. The name used will be the serial number of the inverter - which you will also find on the inverter itself:



4. Configure the *position* relative to the Multi or Quattro (is it: AC Input / AC Output); and the *phase* for each inverter in the list:

<

Fronius Symo 8.2-3-M

12:14

Position

Output

Phase

Multiphase

Show

Yes



- Position: = the position relative to the Multi or Quattro [AC Input 1 / AC Input 2 / AC Output]
- Phase: = the phase on which the PV Inverter installed. Disabled and set to Multi-phase for split- and three-phase PV Inverters
- Show: = show this device in the system or not. Use this feature when there are multiple, separate, energy systems on the same LAN.

5. Done!

## 2.3 Device scan details

As mentioned above the CCGX should find all Fronius inverters automatically. It will scan all IP-addresses in the local network (that is, all IP-addresses within the netmask assigned to the CCGX) to check whether or not they are *Fronius datamanager* cards. This scan will be performed during CCGX startup; whenever the CCGX loses connection to a data card; and a scan can also be initiated manually by selecting 'Press to scan'.

Usually a scan is completed within a minute - though if you have a large subnet it may take much more time. If you don't want to wait for completion, enter an IP-address manually.

All data cards found will be entered in the 'Detected data cards' list. The CCGX will regularly (once every minute) scan the IP-addresses in this list in order to find new data cards, or reconnect to data cards whenever the connection was lost.

If you changed to *TCP* port number on the data manager, you should change this setting on the CCGX, too (TCP port) - otherwise leave the setting at its default (80).

## 3. Monitoring CCGX




When the Fronius is detected and configured on the CCGX all PV inverters will be visible in the devicelist.

Device List		12:16
BMV-702		>
MultiPlus 48/5000/70-50		>
Fronius Symo 8.2-3-M		>
PV Inverter on output		>
Notifications		>
Settings		>
Pages		Menu

To see the device details, navigate to the menu. Here you can see the current state, current power generated, total power generated.

Fronius Symo 8.2-3-M		12:12
Status	Running	
Error Code	0	
AC Phase L1	228V	1.0A 225W
AC Phase L2	229V	1.0A 231W
AC Phase L3	228V	1.0A 229W
AC Totals	2.9A	685W
Pages		Menu
Fronius Symo 8.2-3-M		12:13
AC Totals	3.0A	704W
		1578.87kWh
Energy L1	522.37kWh	
Energy L2	532.77kWh	
Energy L3	523.74kWh	
Device	>	
Pages		Menu

For more details on each device navigate to the Device menu. Here you will find: IP address, Product name, product ID, and Serial number, etc.

<	Device	12:14
Connection	192.168.1.109 - 1	
Product	Fronius Symo 8.2-3-M	
Product ID	41282	
Firmware version	--	
Device instance	20	
Serial number	65915	
<div><div> Pages</div><div></div><div> Menu</div></div>		

## 4. Monitoring on the VRM Portal

To see the yield on the VRM site (in the *Advanced* tab), don't forget to enable the PV Inverter yield widget(s) in Settings → Advanced tab setup.

PV Inverter Status [20]			
Running			
Voltage			
L1 Voltage	L2 Voltage	L3 Voltage	
234.6 V	234.7 V	232.9 V	
Current			
L1 Current	L2 Current	L3 Current	
2.72 A	2.79 A	2.74 A	
Power			
L1 Power	L2 Power	L3 Power	
645 W	662 W	645 W	
Energy			
L1 Energy	L2 Energy	L3 Energy	
524.32 kWh	534.77 kWh	525.70 kWh	

From:  
<https://www.victronenergy.com/live/> - Victron Energy

Permanent link:  
[https://www.victronenergy.com/live/ccgx:ccgx\\_fronius?rev=1548065125](https://www.victronenergy.com/live/ccgx:ccgx_fronius?rev=1548065125)

Last update: 2019-01-21 11:05



