

# CCGX & Fischer Panda generators

Beginning with the release of [CCGX v2.07](#) it became possible to read data from your Fischer Panda generator. The generator needs to be connected to the VE.Can port of the CCGX, which requires a Fischer Panda SAE J1939 module.

## Requirements

- CCGX or Venus GX
- Fischer Panda generator, xControl or iGenerator
- Fischer Panda SAE J1939 CAN module (part number 0006107)
- Fischer Panda FP-Bus to VE.Can adapter (part number 0023441)


Fischer Panda Firmware requirements:

- iControl (for the iGenerator): v2.17 minimum
- iControl panel: no minimum requirement
- xControl (for the constant speed generators): 4V38 minimum
- xContr panel: 4V29
- Fischer Panda SAE J1939 CAN module: 2V05
- Fischer Panda three phase module: 4V0b

## Connecting


### xControl

The schematic below shows how to connect a Fischer Panda xControl generator.

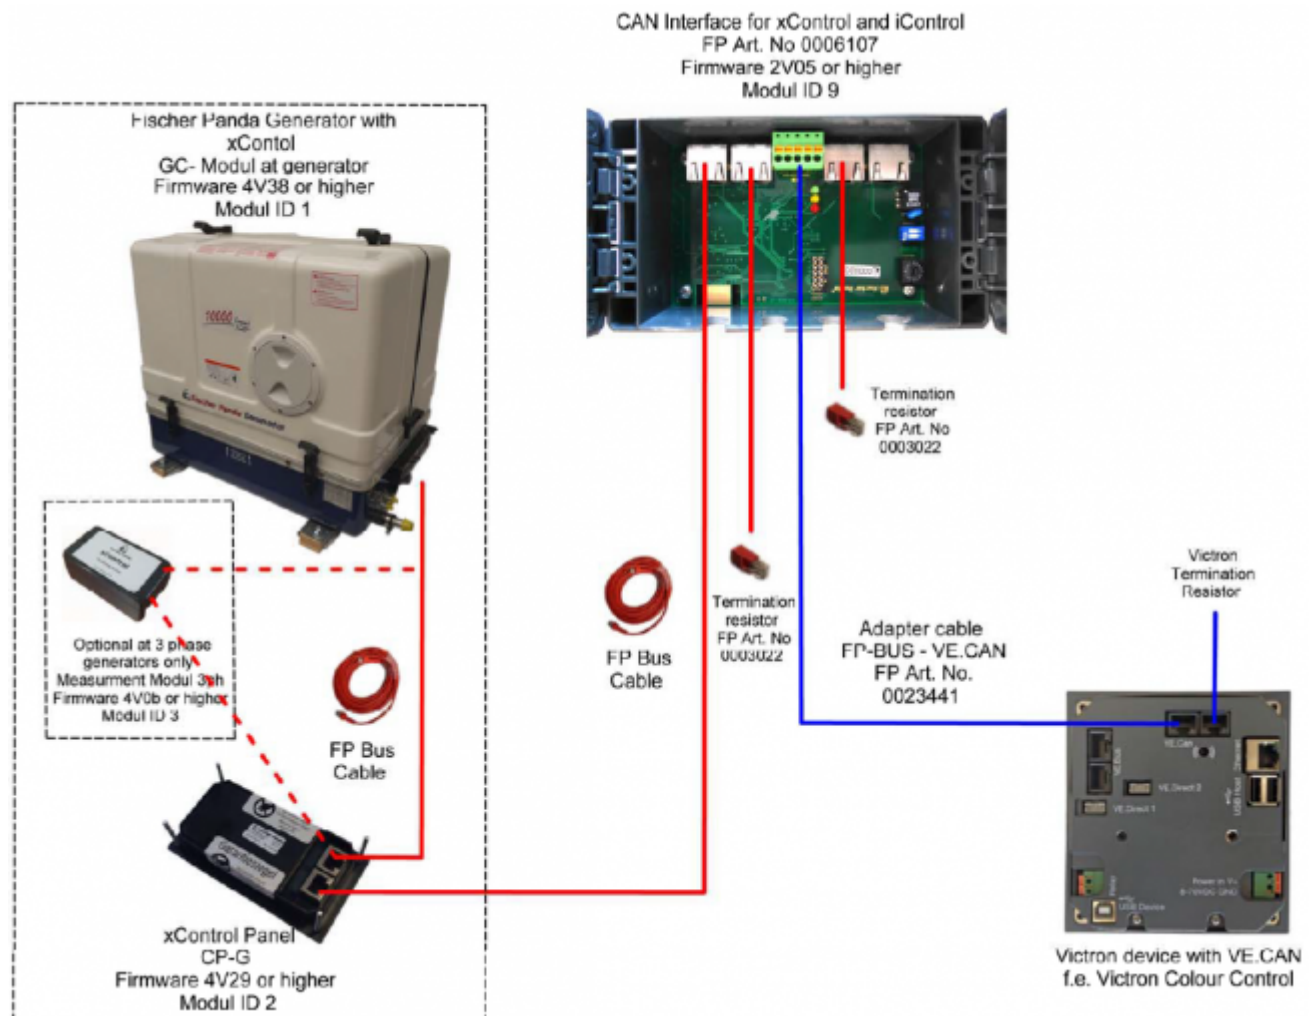

## iControl

The schematic below shows how to connect a Fischer Panda iControl generator.

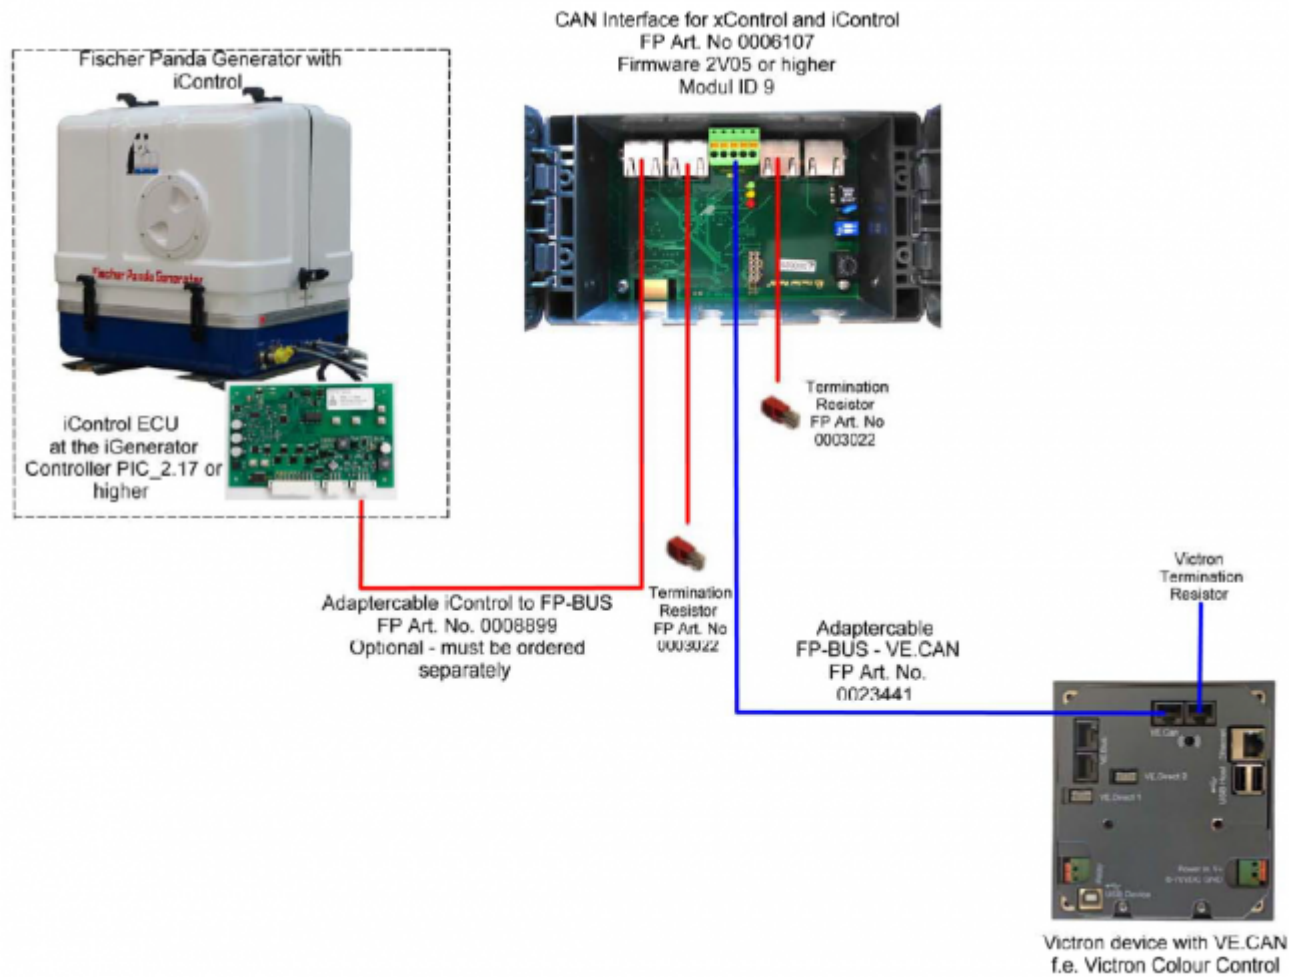

## Menu

When all wiring is complete and the setup has been correctly carried-out, the Fischer Panda will show up in the device list:

Device List				📍 13:51
BMV-702	100%	53.96V	0.2A	>
BlueSolar Charger MPPT 150/70			174W	>
Fischer Panda Genset	Running	19.87kW		>
MultiPlus 48/5000/70-50			Float	>
Fresh water tank			90%	>
Black water (sewage) tank			85%	>
📄 Pages				☰ Menu

Entering the Fischer Panda device on the menu reveals a page like this:

Fischer Panda Genset			13:49
Mode	<input checked="" type="checkbox"/> ON		
Status	Running		
Error Code	#0 No error		
AC	227V	104A	21.91kW
Engine	>		
Device	>		
Pages		Menu	


Notice that it features an on/off switch as well as displaying status information, and the main AC parameters: voltage, current and power.

Engine temperature, RPM and additional information are all available by entering the *Engine* sub menu item.

Engine		14:19
Speed	3000rpm	
Load	42%	
Coolant temperature	64°C	
Exhaust temperature	98°C	
Winding temperature	80°C	
Operating time	12d 16h	
Starter battery voltage	14.7V	
Pages		Menu

## Generator start/stop

In addition to the manual start/stop and monitoring, there is also an automatic start/stop feature. This has the same comprehensive range of options as the Generator start/stop feature associated with the CCGX relay. See [generator\\_start\\_stop](#) for the manual.

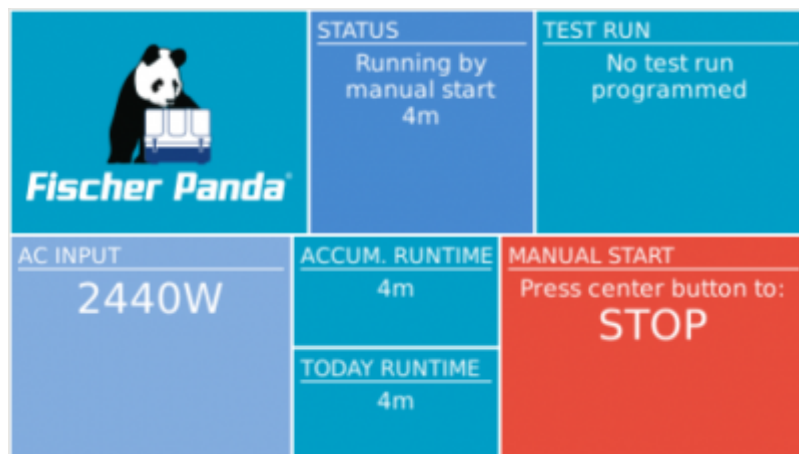

## Maintenance

Whenever performing maintenance on the generator, be sure to *stop* the generator from the Fischer Panda control panel. This will disable the Fischer Panda autostart feature, and ensures that the generator cannot be remotely started - by a CCGX, for example.


When the maintenance is completed, make sure you enable the autostart feature again. You can do this on the Fischer Panda control panel in the menu generator → autostart → turn on / off.

## Troubleshooting

**I've set the mode of the genset to 'On' or 'Auto start/stop' but the generator is not starting/running.**

Make sure the Fischer Panda autostart feature is on, this allows the CCGX control the remote on/off of the genset. You can find this option on the control panel in the menu generator → autostart → turn on / off.

If you're manually trying to start the genset, a toast message appears with the text AutoStart functionality is currently disabled, enable it on the genset panel in order to start the genset from this menu.

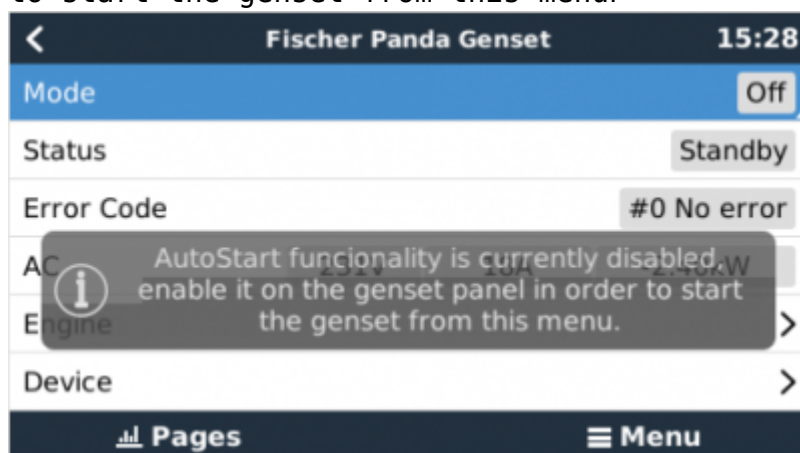

If the generator auto start/stop is enabled, it will show error #1 Remote switch control

< Auto start/stop 15:21	
State	Stopped
Error	#1 Remote switch control disabled
Total run time	21m
Manual start	>
Daily run time	>
Settings	>
Pages Menu	

disabled on the Auto start/stop page.

Disqus

~~DISQUS~~

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

[https://www.victronenergy.com/live/ccgx:fischer\\_panda?rev=1521629744](https://www.victronenergy.com/live/ccgx:fischer_panda?rev=1521629744)

Last update:

**2018-03-21 11:55**

