

Pump auto start/stop with Color Control GX

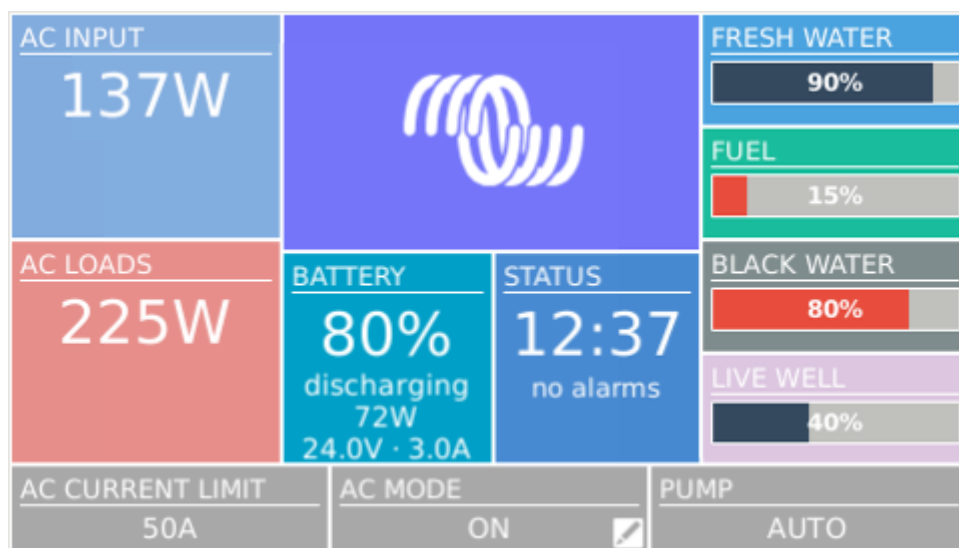
Introduction

The CCGX has a relay - switch - which can automatically start a pump. The switch is triggered by 'tank level' data, received from a tank-sender. The level at which the switch is automatically tripped is user-definable.

Boat & Motorhome overview


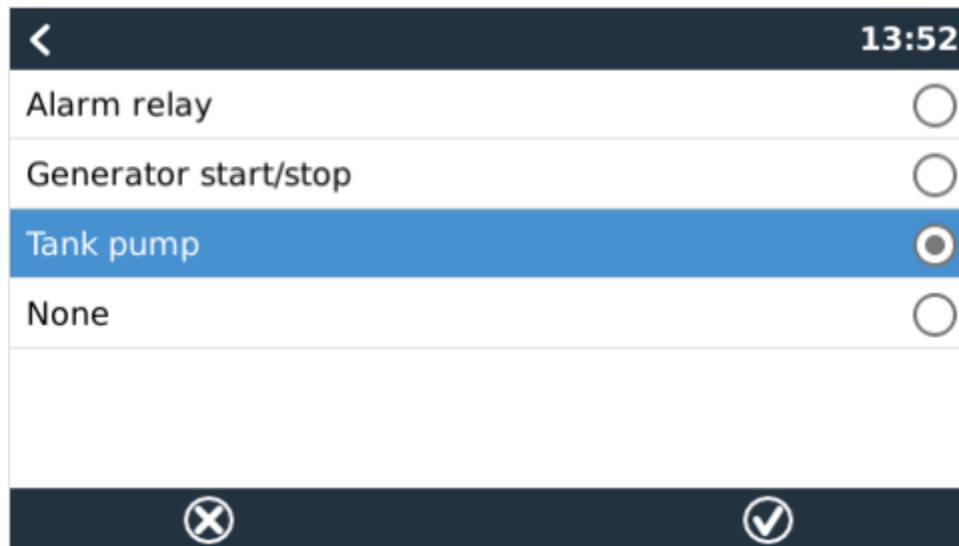
An additional Overview page is available which shows at-a-glance status information from all tanks connected to the CCGX. To enable the tank overview page from the main menu go to: Settings → Display and language → Show boat and motorhome overview. You will now find that 'Mobile' has been added to CCGX 'homepage showing: 'Overview' and 'Tiles'.

It is also possible to change Multi/Quattro AC current limit and mode when those functions are available.



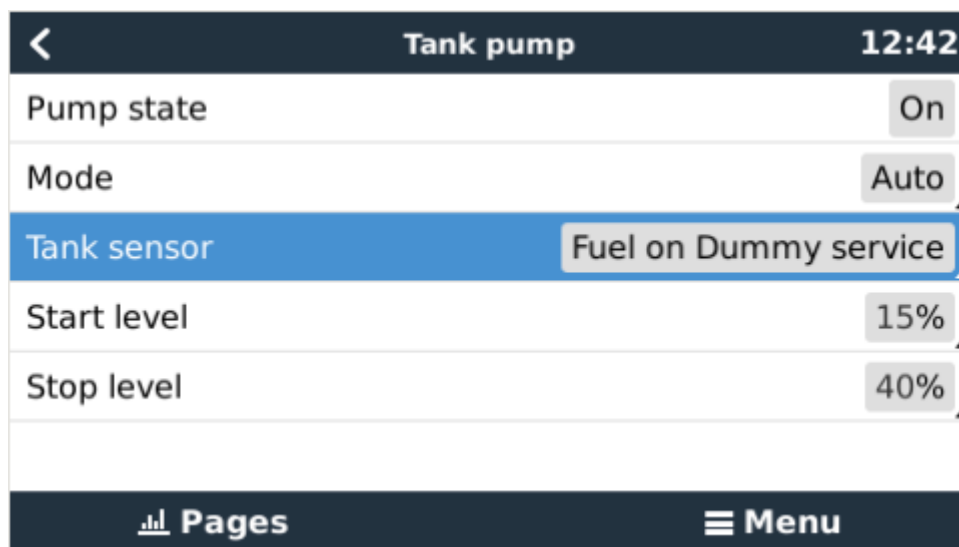

Enable pump start/stop

To enable the pump start/stop functionality go to Settings → Relay; and set the function to "Tank pump".

<	13:52
Alarm relay	<input type="radio"/>
Generator start/stop	<input type="radio"/>
Tank pump	<input checked="" type="radio"/>
None	<input type="radio"/>
<div></div>	

Configuration

Once enabled the tank pump configuration page will be found at: Main Menu →Settings →Tank pump.

<	Tank pump	12:42
Pump state	On	
Mode	Auto	
Tank sensor	Fuel on Dummy service	
Start level	15%	
Stop level	40%	
 Pages	 Menu	

Mode

- **Auto:** Start and stop the pump based on level settings
- **On:** Pump always on
- **Off:** Pump always off

<	13:59
Auto	<input checked="" type="radio"/>
On	<input type="radio"/>
Off	<input type="radio"/>

Tank sensor

Select which sensor will be monitored to start/stop the pump when the “Auto” mode is enabled.

<	12:38
Fresh water on Dummy service	<input type="radio"/>
Live well on Dummy service	<input type="radio"/>
Black water on Dummy service	<input type="radio"/>
Fuel on Dummy service	<input type="radio"/>
No tank sensor	<input checked="" type="radio"/>

Pump auto-start levels

Start level: When the tank level reaches this value the pump will be started.

Stop level: When the tank level reaches this value the pump will be stopped.

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/ccgx:pump_start_stop

Last update: **2019-01-22 10:42**

