

# Pump auto start/stop with Color Control GX


## Introduction

The CCGX has a relay - switch - which can automatically start a pump. The switch is triggered by 'tank level' data, received from a tank-sender. The level at which the switch is automatically tripped is user-definable.

## Boat & Motorhome overview


An additional Overview page is available which shows at-a-glance status information from all tanks connected to the CCGX. To enable the tank overview page from the main menu go to: Settings → Display and language → Show boat and motorhome overview. You will now find that 'Mobile' has been added to CCGX 'homepage showing: 'Overview' and 'Tiles'.

It is also possible to change Multi/Quattro AC current limit and mode when those functions are available.

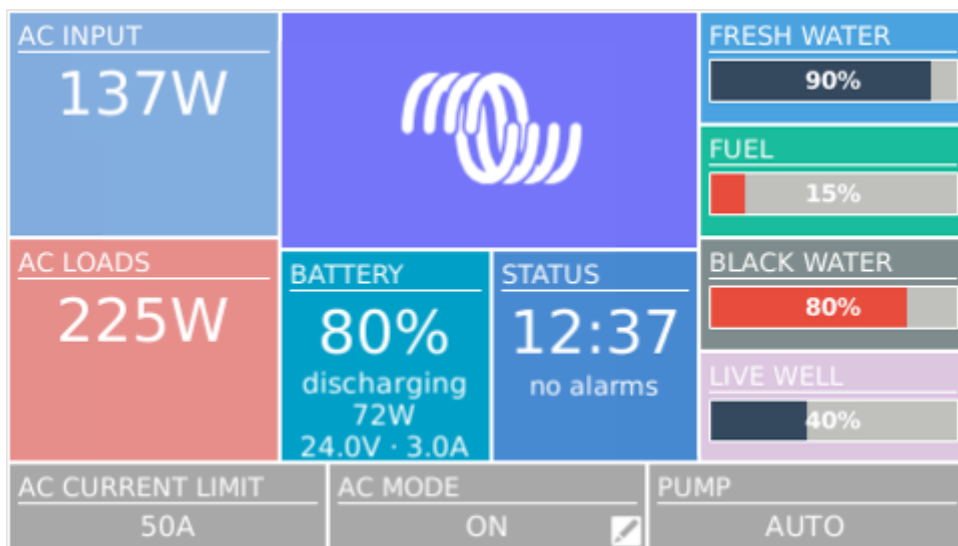


## Enable pump start/stop

To enable the pump start/stop functionality go to Settings →Relay; and set the function to “Tank pump”.

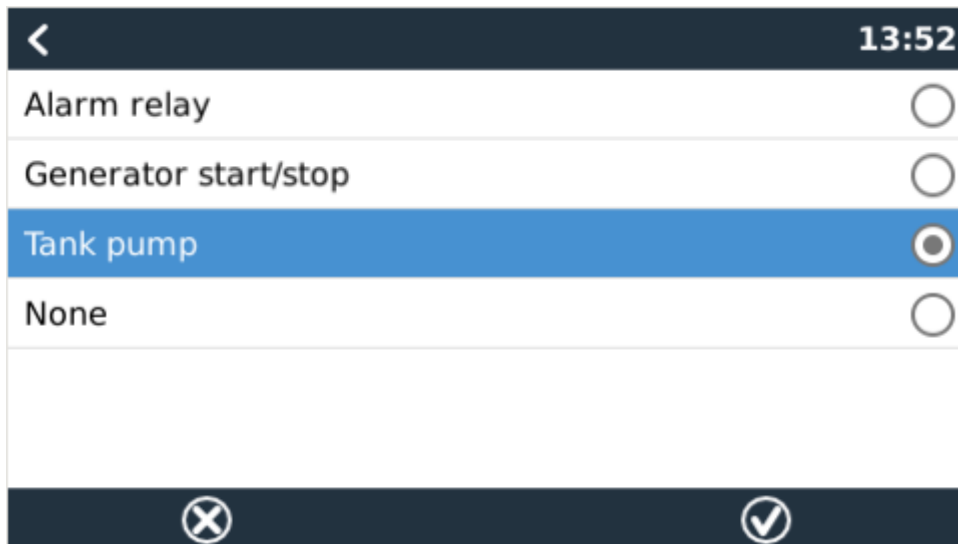


## Configuration

Once enabled the tank pump configuration page will be found at: Main Menu →Settings →Tank pump.

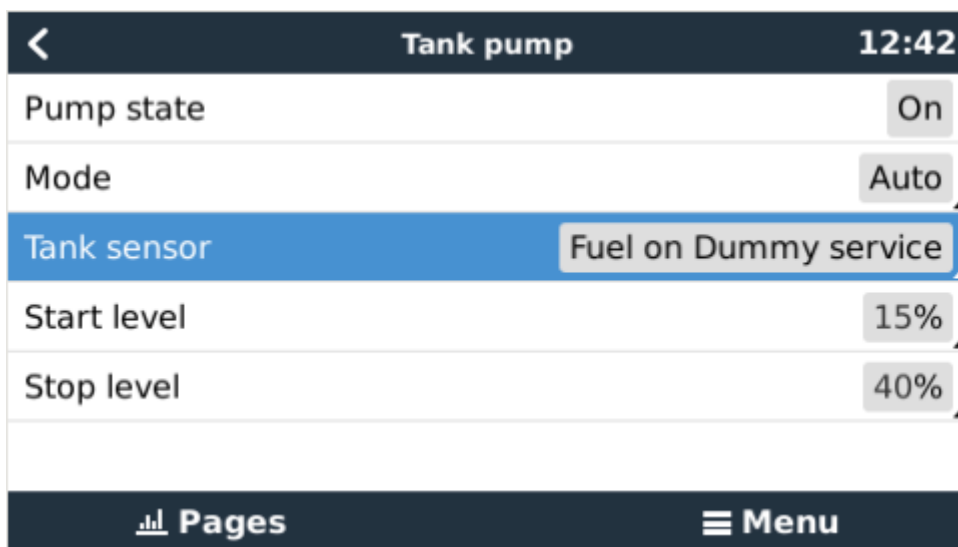


## Mode

- **Auto:** Start and stop the pump based on level settings
- **On:** Pump always on
- **Off:** Pump always off

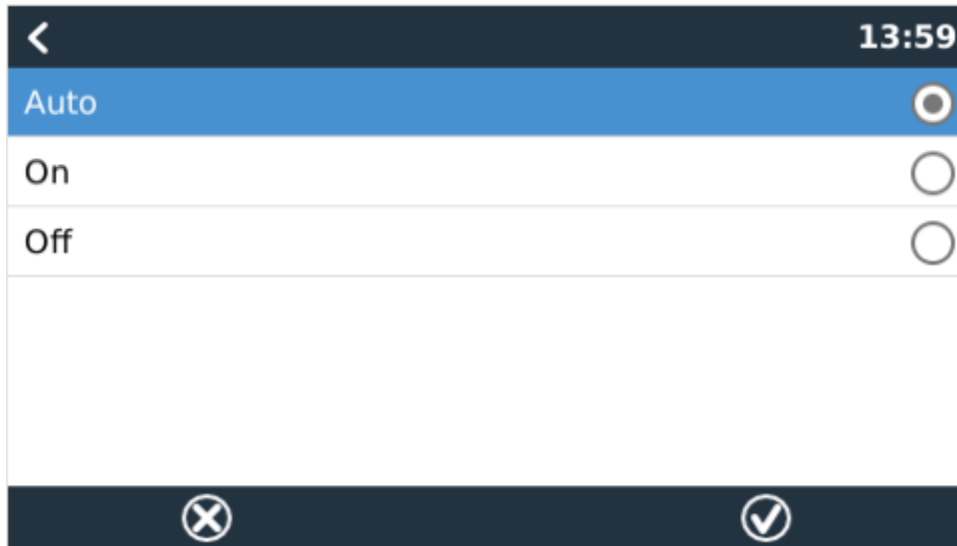

### Tank sensor

Select which sensor will be monitored to start/stop the pump when the “Auto” mode is enabled.

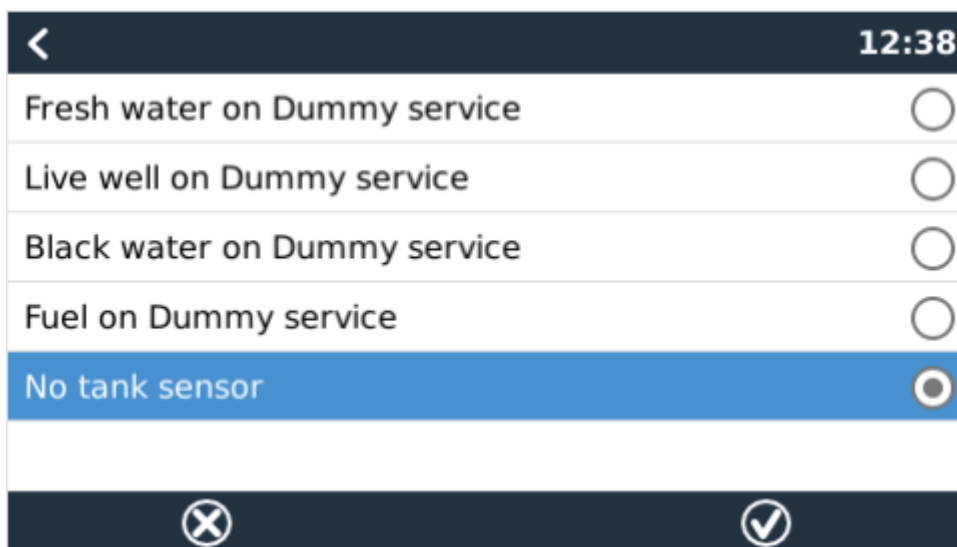

### Pump auto-start levels

**Start level:** When the tank level reaches this value the pump will be started.

**Stop level:** When the tank level reaches this value the pump will be stopped.

From: <https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link: [https://www.victronenergy.com/live/ccgx:pump\\_start\\_stop](https://www.victronenergy.com/live/ccgx:pump_start_stop)

Last update: **2019-01-22 10:42**

