

Pump auto start/stop with Color Control GX

Introduction

The CCGX internal relay can be used to start a pump. With this functionality you can open or close the relay based on a tank level.

Mobile/automotive overview

On this overview you can easily see all the attached tank sensors level and control a pump.

Enable pump start/stop

To enable the pump start/stop functionality go Settings→ Relay and set the function to “Tank pump”
Once enabled the tank pump configuration page will be available.

Configuration

Pump start/stop configuration page is located in Settings → Tank pump.

Mode:

- **Auto:** Start and stop the pump based on the configured levels
- **On:** Pump always on
- **Off:** Pump always off

Tank sensor: Select which sensor will be monitored to start/stop the pump the the “Auto” mode is enabled.

Start level: When the tank level reaches this value the pump will be started.

Stop level: When the tank level reaches this value the pump will be stopped.

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/ccgx:pump_start_stop?rev=1469012802

Last update: **2016-07-20 13:06**

