


Pump auto start/stop with Color Control GX

Introduction

The CCGX internal relay can be used to start a pump. With this functionality you can open or close the relay based on a tank level.

Mobile/automotive overview

On this overview you can easily see all the attached tank sensors levels and control a pump. It is also possible to change Multi/Quattro AC current limit and mode when available.

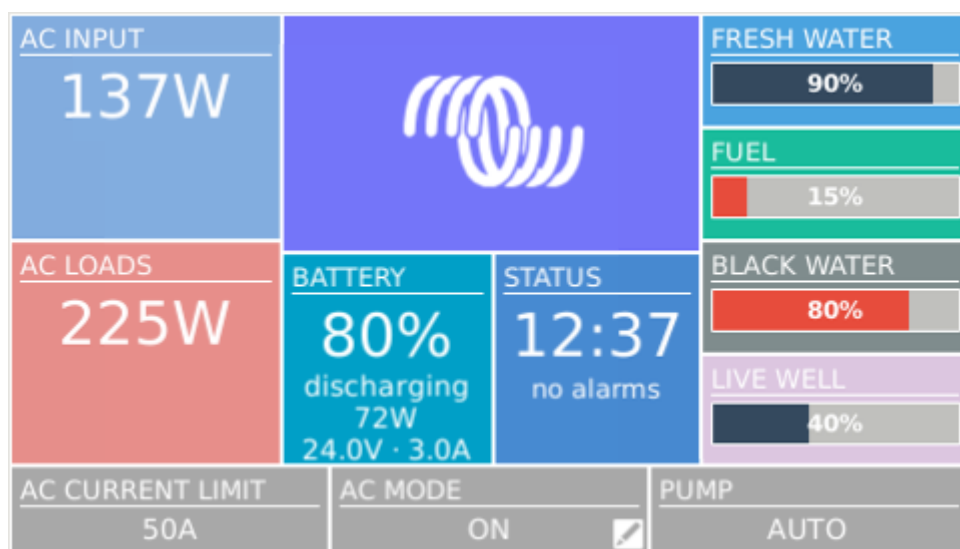

Enable pump start/stop

To enable the pump start/stop functionality go to Settings→ Relay and set the function to “Tank pump”, once enabled the tank pump configuration page will be available.

The settings menu shows the following options:

- Alarm relay
- Generator start/stop
- Tank pump** (selected)
- None

Navigation icons: back (X) and confirm (checkmark).

Configuration

Pump start/stop configuration page is located in Settings → Tank pump.

<	Tank pump	12:42
Pump state	On	
Mode	Auto	
Tank sensor	Fuel on Dummy service	
Start level	15%	
Stop level	40%	
<div>PagesMenu</div>		
<		13:59
Auto	<input checked="" type="radio"/>	
On	<input type="radio"/>	
Off	<input type="radio"/>	
<div>⊗⊙</div>		
<		12:38
Fresh water on Dummy service	<input type="radio"/>	
Live well on Dummy service	<input type="radio"/>	
Black water on Dummy service	<input type="radio"/>	
Fuel on Dummy service	<input type="radio"/>	
No tank sensor	<input checked="" type="radio"/>	
<div>⊗⊙</div>		

Mode:

- **Auto:** Start and stop the pump based on level settings
- **On:** Pump always on

- **Off:** Pump always off

Tank sensor: Select which sensor will be monitored to start/stop the pump when the “Auto” mode is enabled.

Start level: When the tank level reaches this value the pump will be started.

Stop level: When the tank level reaches this value the pump will be stopped.

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/ccgx:pump_start_stop?rev=1470663499

Last update: **2016-08-08 15:38**

