


# Pump auto start/stop with Color Control GX

## Introduction

The CCGX internal relay can be used to start a pump. With this functionality you can open or close the relay based on a tank level.

## Marine & Mobile/automotive overview


On this overview you can easily see all the attached tank sensors levels and control a pump. It is also possible to change Multi/Quattro AC current limit and mode when available.

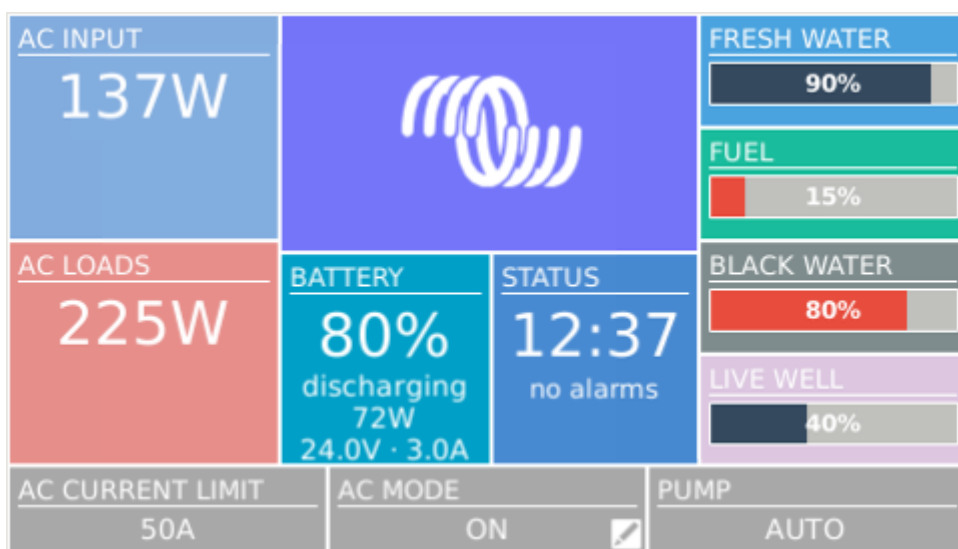

To enable this overview, go to Settings → Display & Language


## Enable pump start/stop


To enable the pump start/stop functionality go to Settings→ Relay and set the function to “Tank pump”, once enabled the tank pump configuration page will be available.

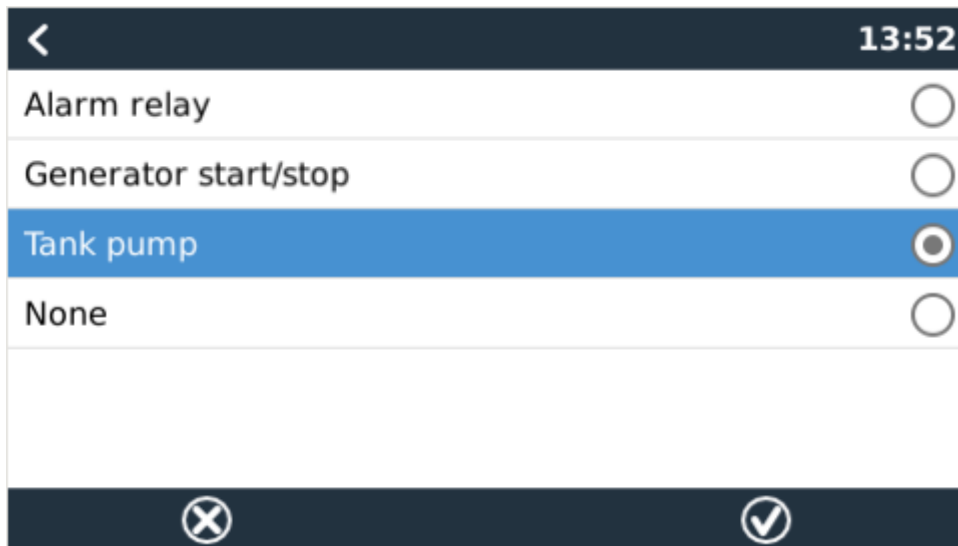

### Configuration

Pump start/stop configuration page is located in Settings → Tank pump.

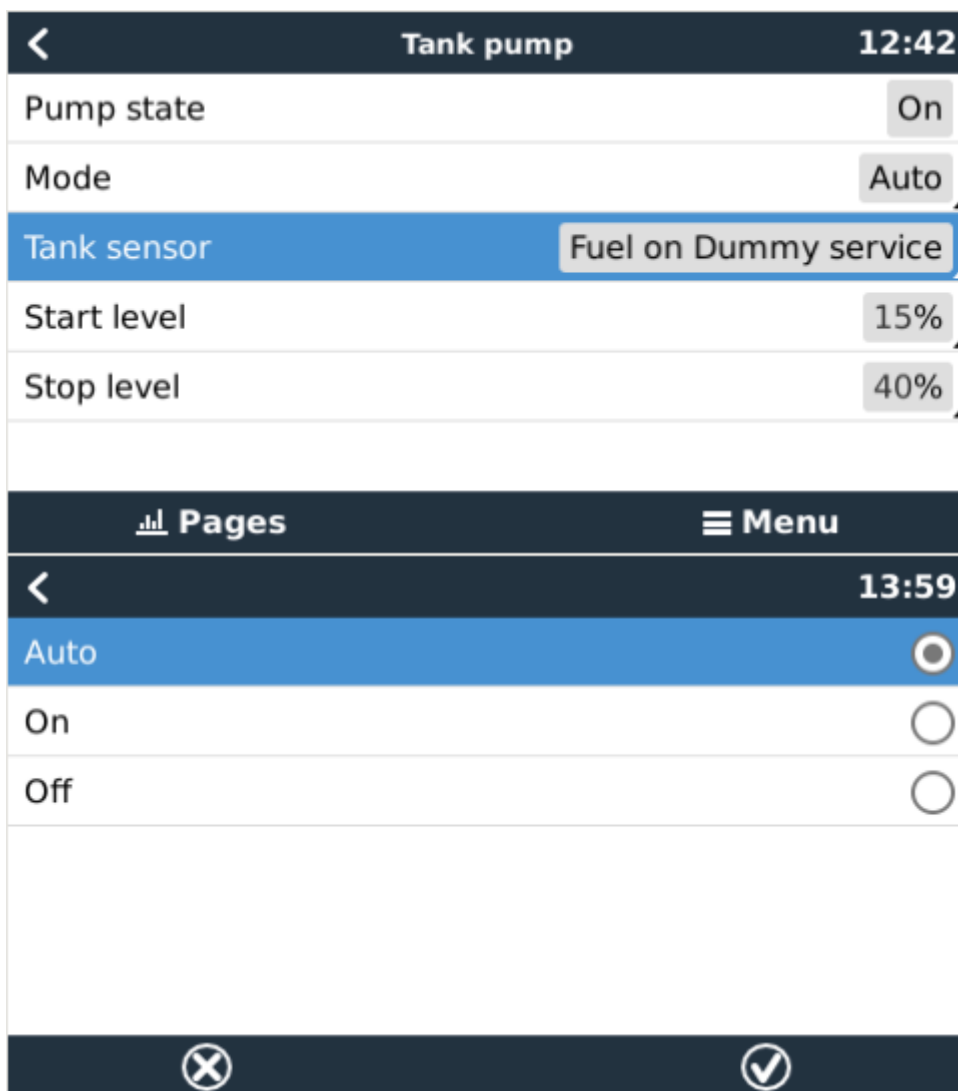

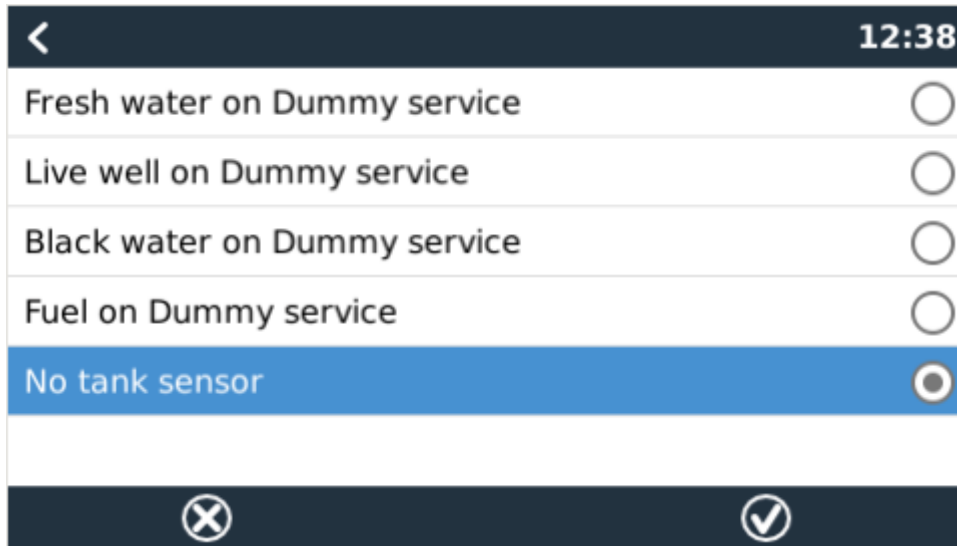

**Mode:**

- **Auto:** Start and stop the pump based on level settings
- **On:** Pump always on
- **Off:** Pump always off

**Tank sensor:** Select which sensor will be monitored to start/stop the pump when the “Auto” mode is enabled.

**Start level:** When the tank level reaches this value the pump will be started.

**Stop level:** When the tank level reaches this value the pump will be stopped.

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

[https://www.victronenergy.com/live/ccgx:pump\\_start\\_stop?rev=1470666355](https://www.victronenergy.com/live/ccgx:pump_start_stop?rev=1470666355)

Last update: **2016-08-08 16:25**

