

# MultiPlus DC-Solar 1600VA / 12 volt

## Introduction


Short story

## Parts

- 1x - CMP121620000 - [MultiPlus Compact 12/1600/70-16 230V VE.Bus Inverter/Charger](#)
- 1x - SCC010050200 - [BlueSolar MPPT 100/50 \(12/24V-50A\)](#)
- 1x - BAM010700000 - [Battery Monitor BMV700](#)
- 2x - BAT412201080 - [12V/220Ah AGM Deep Cycle Battery](#)
- or - BAT412201100 - [12V/220Ah Gel Deep Cycle Battery](#)
- 2x - Battery link cables
- [http://www.victronenergy.com/live/drafts:sa\\_system:dcsolar1600-mp?do=edit](http://www.victronenergy.com/live/drafts:sa_system:dcsolar1600-mp?do=edit)

## optional

- DMC000200000R - Digital Multi Control 200/200A GX (90° RJ45) Retail
- BPP000300100R - Color Control GX Retail
- ASS030530218 - VE.Direct Cable 1,8m

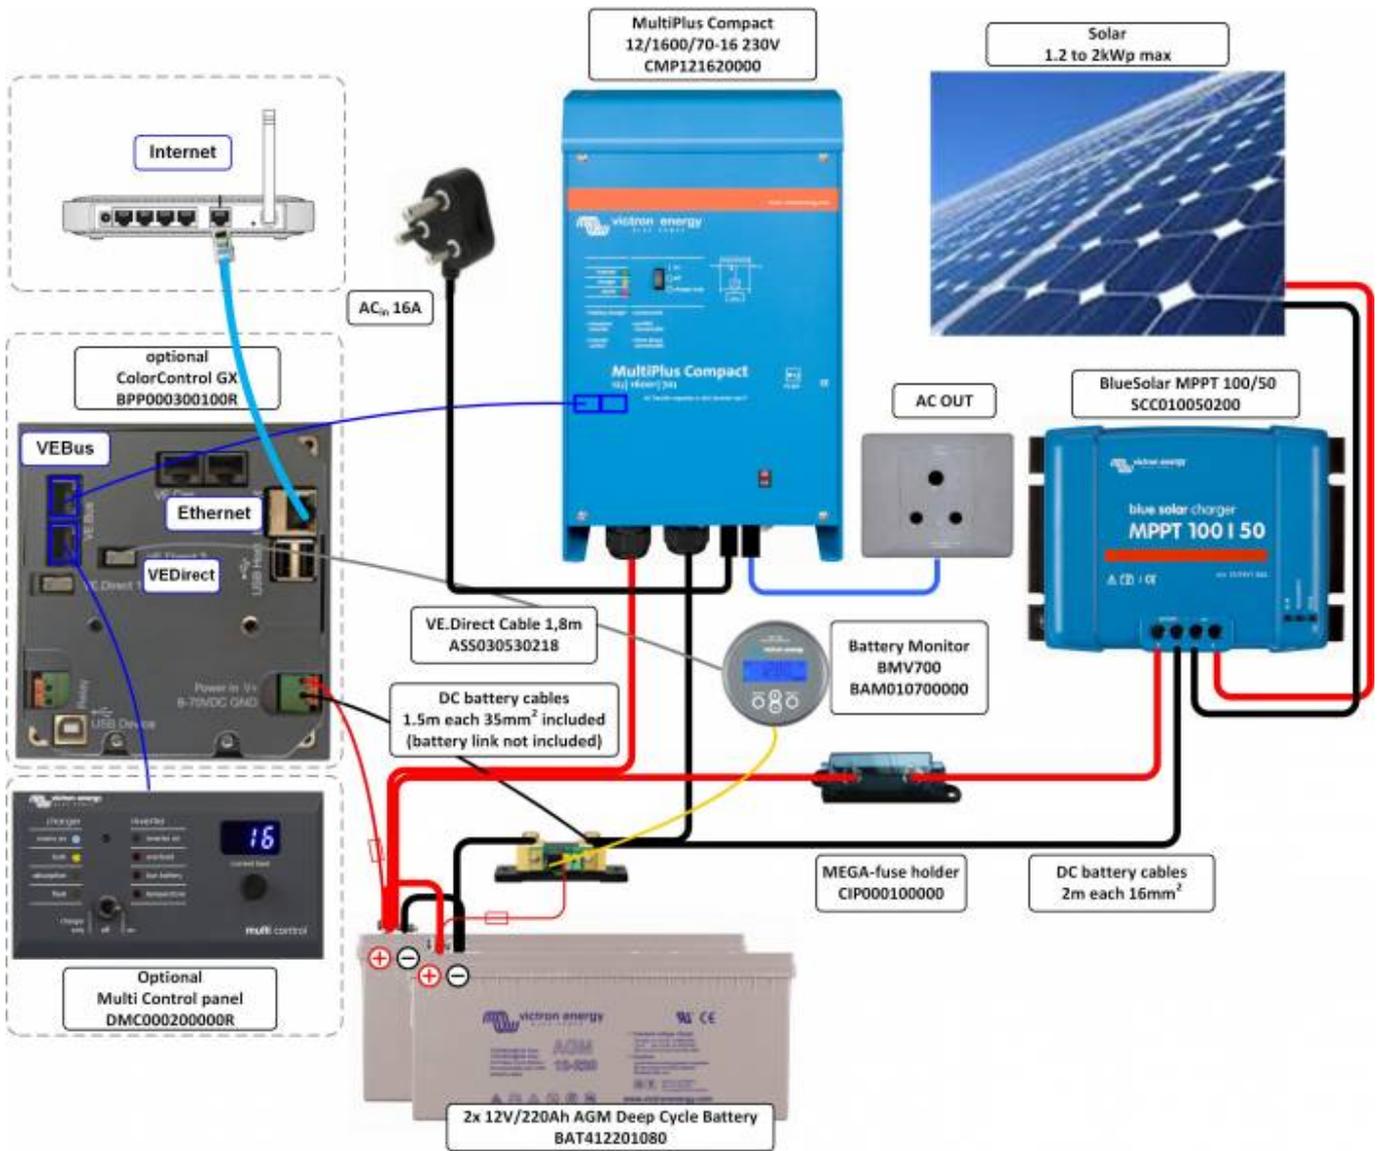

### How long is the backup time?

Explain what it solves:

- Load shedding period: High power 1000W DoD 50% SoC about 2 hours
- At night: Low power 250W DoD 50% SoC about 8 hours

### Notes for batteries:

- We recommend deep-cycle GEL or AGM batteries. At least 200Ah per block.
- Cable cross section: xxxx mm<sup>2</sup> MCO: welke mm<sup>2</sup> / stroom rating welke lengte


### VE.Configure Settings

plaatjes toevoegen!!

## software download VE.Configure Updating VE.Bus products

settings:

- Disable overrule by remote
- Change DC input low shutdown to 10.8 volts
- Change DC input low restart to 11.8 volts
- Change DC input low pre-alarm to ???.? volts
- Charge current can be left at standard setting.
- Enable battery monitor and set correct Battery capacity

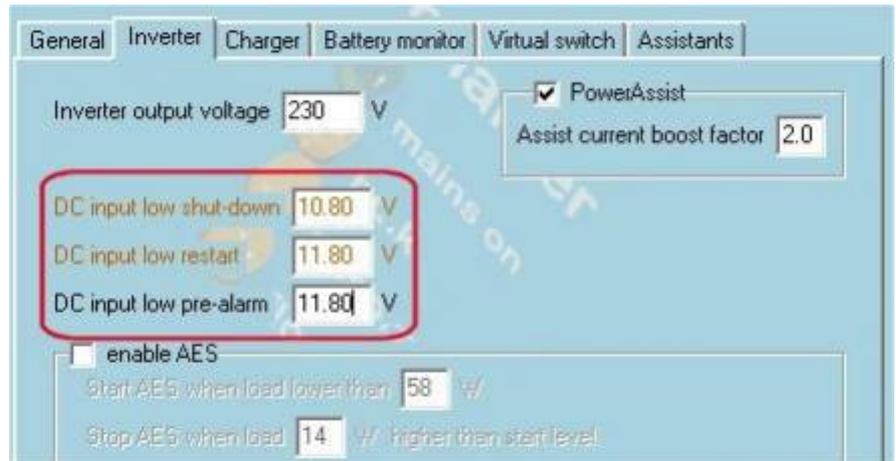

## DISQUS Comments

~~DISQUS~~

From:  
<https://www.victronenergy.com/live/> - Victron Energy

Permanent link:  
[https://www.victronenergy.com/live/drafts:sa\\_system:dcsolar1600-mp?rev=1429180211](https://www.victronenergy.com/live/drafts:sa_system:dcsolar1600-mp?rev=1429180211)

Last update: 2015-04-16 12:30



