

# Smart Battery Sense manual

## 1. Introduction

The Smart Battery Sense is a wireless voltage- and temperature- sensor for Victron MPPT Solar Chargers.

The Solar Charger uses the battery voltage & temperature information to optimize its charge parameters. This will improve charging-efficiency and prolong battery life.

The connection between the Smart Battery Sense and the Solar Charger(s) wireless: VE.Smart Network, a wireless technology that is based on Bluetooth Smart.

Its very simple to install & configure, the Smart Battery Sense comes with an inline fuse and pre-crimped eyelets. And adhesive tape on the back, to mount it on the battery.

- [Compatible Solar Chargers](#)
- The Smart Battery Sense is not needed, nor allowed, in systems that also have a Color Control GX or Venus GX, see [FAQ Q6](#) for more info.
- The Smart Battery Sense is not needed for installations that already have a BMV-712 with its temperature sensor accessory.
- For installations with a BMV-702 + temperature sensor accessory, consider adding a [VE.Direct Bluetooth Smart dongle](#) instead of a *Smart Battery Sense*.

## 2. Installation

Connect the unit's two eyelets to your battery terminals and attach it directly onto the battery-body using its self-adhesive strip.

For battery banks consisting of multiple individual batteries, connect the Smart Battery Sense unit on any one of the batteries.

In case the supplied bat+ and bat- cables are not long enough, their length can be increased. Make sure to use the same, or thicker, gauge cable.

## 4. Configuration

See this below video. A step by step procedure is documented in the [ve-smart-networking](#) manual.



## Video

### 5. Trouble shooting

See both the [VictronConnect manual](#) and the [VE.Smart Network manual](#).

### DISQUS

[View the discussion thread.](#)

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

[https://www.victronenergy.com/live/smart\\_battery\\_sense\\_manual?rev=1520197892](https://www.victronenergy.com/live/smart_battery_sense_manual?rev=1520197892)

Last update: **2018-03-04 22:11**

