

GX LTE 4G - Manual

NOTE: DRAFT MANUAL. FIRST STOCK EXPECTED IN 2020 Q4



TODD REPLACE BY GX LTE PICTURE

1. Introduction

1.1 Product description

The GX LTE is an accessory for [GX-devices](#). It is a cellular 2G, 3G and 4G modem; providing a mobile internet for the system and connection to [Victron Remote Management \(VRM\) portal](#). See also the [GX LTE Product Page](#) on our website.

There are three models:

Part number	Name	Region
GSM100100400	GX LTE 4G-E	For EMEA/Korea/Thailand
GSM100200400	GX LTE 4G-A	For North America
GSM100300400	GX LTE 4G-SA	For Australia/New Zealand/South America

More information about supported frequencies and bands are in chapter 7.1

It requires a SIM card of the [Mini-SIM format](#); and connects to the [GX-device](#) with an included 1 meter USB cable.

The GX LTE includes a built-in GPS receiver. When the optional GPS antenna is installed, the system can be tracked as well as Geo-fenced on the VRM Portal.

Watch this video to learn how to connect using LAN, WiFi, and the GX GSM, which is the same with the GX LTE:



Video

1.2 Antennas and accessories

(DRAFT - THIS SECTION NEEDS UPDATING. EITHER THE SAME EXTERNAL ANTENNA CAN BE USED OR A NEW ONE IS NECESSARY - WILL BE CLEAR SOON)

GSM: A small indoor GSM antenna is included. As an option we also sell an outdoor GSM antenna:

- GSM900100100 - Outdoor 2G and 3G GSM Antenna for GX LTE

GPS: The GX LTE includes a built-in GPS receiver. With the optional GPS antenna installed, the system can be tracked as well as Geo-fenced on the VRM Portal. The required accessory is the GSM900200100 - Active GPS Antenna for GX LTE.

Photos and specifications in [the antenna chapter](#).

1.3 Compatibility

The GX LTE can be used with any of the [GX Devices](#).

The GX LTE requires Venus OS v2.60 or newer to be installed on the GX Device.

1.4 When to use a mobile router instead

The GX LTE provides an internet connection for the [GX-device](#) only. There is no option to share the internet to laptops, phones, or other devices.

For installations where more devices need internet, such as a yacht or RV, consider installing a mobile router instead. [More information here](#).

2. Installation

Mount the device and connect the antenna. Consider using the outdoor antenna when installing the GX LTE in a closed metal enclosure or car or van.



Insert the SIM card. You will need to eject the SIM card tray with a pen or other pointy object. Be aware that the SIM card tray sits slightly recessed inside the unit. Be sure to push it all the way in.

Connect the GX LTE to the GX-device with the supplied USB cable. Use a USB hub if all USB sockets are already in use.

Connect DC power supply (8 to 70 VDC). A 1.4M wire is included, with M10 lugs and an inline XXX A fuse.

After power-up, the blue LED will be solid blue. Next, once it has registered on a network, it will start blinking slowly. Finally, when it has established the internet connection, it will be blinking fast.


3. Configuration

<	GSM	11:41
Internet	Online	
Carrier	vodafone NL 3G	
Signal strength		
Allow roaming	<input type="checkbox"/>	
Sim status	Ready	
IP address	10.164.191.132	
APN	Default >	
IMEI	863789022273241	
 Pages	^	Menu

When using a SIM card with its SIM-pin security disabled, the system will work without further configuration.


Setting a SIM pin helps reducing the risk of the SIM card being stolen and used. Use a mobile phone to set the SIM pin, and there after configure it on the GX-device.

Settings → GSM modem → PIN code

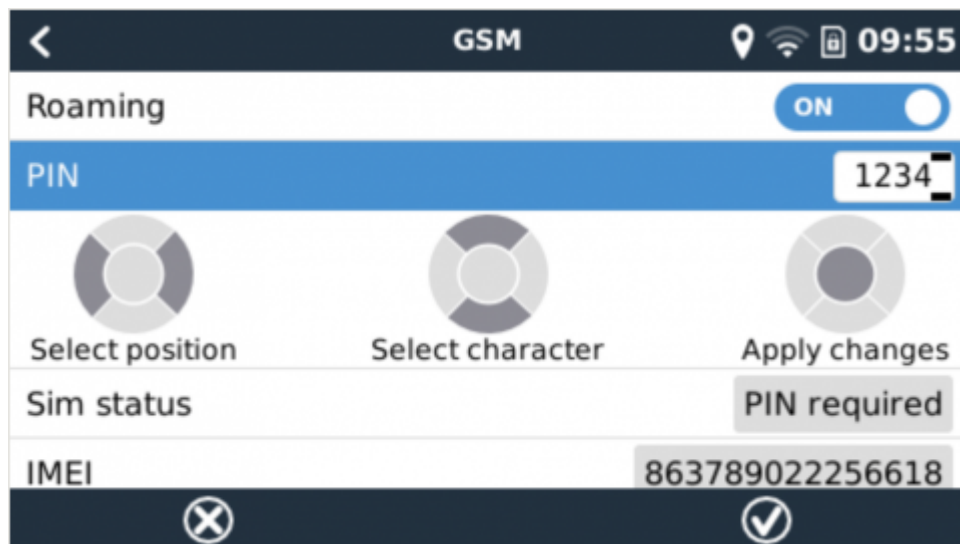





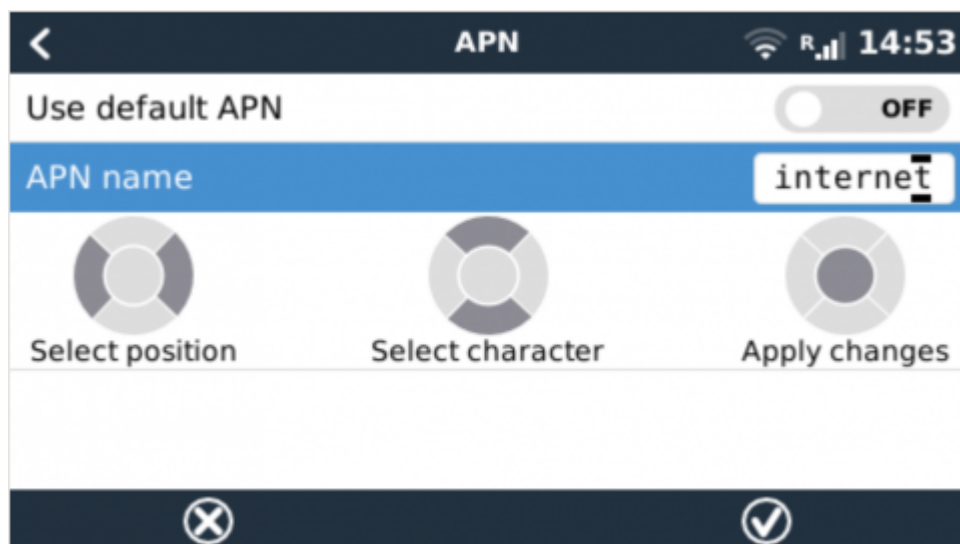


Some mobile networks require manual configuration of an APN specially when roaming. Contact your operator.

APN name can be configured in Settings → GSM Modem → APN.



4. GPS

When the optional antenna is added; the position will be visible like this:






		GPS	 3G R  12:51
Status	GPS OK (fix)		
Latitude	53° 13' 11.3" N		
Longitude	6° 36' 25.4" E		
Speed	2.0km/h		
Course	145.5°		
Altitude	-38.6m		
Number of satellites	9		
Format	52° 20' 41.6" N, 5° 13' 12.3" E		
Speed Unit	Kilometres per hour		
Device			
 Pages			 Menu

Also the position is sent to the [VRM Portal](#).

5. Status

Status Bar

GSM modem status can be checked at a glance by looking at the status bar.

Icon	Details
	GSM modem is connected to network, but not to the internet (no data connection). Either on purpose, because an ethernet or WiFi connection is available.
	GSM modem is properly configured, the 3G/E/etc icon reflects that the GSM modem internet connection is in use.
	WiFi is available and its internet connection is in use. WiFi has priority over GSM.
	SIM PIN code is required.
	Roaming, only informative. To use internet connection while roaming it needs to be enabled in Settings → GSM modem → Allow roaming.

SIM Status

Status	Description
Ready	SIM card is installed properly and registered to the network
SIM not inserted	SIM card is missing or not inserted properly. SIM tray might hang out a little.
PIN required	SIM card requires 4 digit PIN for unlock.

Status	Description
PUK required	SIM is locked due to wrong PIN inputs. 8 digit PUK is required to release the lock state.
SIM failure	SIM does not respond - might be broken
SIM busy	SIM is in busy state
SIM wrong	Type of SIM is not supported

[External Link](#)

6. Trouble shooting


There are many reasons for a modem internet connection to not work. Carefully go through each step of this trouble shooting guide. Make sure to start at the first step. When asking for help, make sure to mention each step taken and the result.

Step	Details
1 Power	Check that the blue LED is either lit continuous or blinking
2 USB connection	The modem must be connected to USB, and visible in the Settings → GSM modem menu
3 Simcard status	Check the SIM Status in the menu, it must show "Ready". It will show "SIM not inserted", or "PIN required", or "PUK required" and more related errors when there is a problem. Please refer to the SIM Status list for details.
4 Signal strength	1 bar minimum for VRM logging, 2 or 3 bars are necessary for a working remote console
5 Carrier registration	Check that a name of a Cellular provider is visible in the "Carrier" field. If it is not, check signal strength and otherwise contact your simcard provider and/or insert the simcard in a phone to double check its operation and subscription status.
6 Internet connection	Verify that the Internet shows "Online". Reasons for the system to not go "Online" whilst properly registered on the Network are: 1) APN not configured, contact the network operator for details. 2) The network is a different one than the home network (ie. roaming), and the setting to permit Roaming is disabled. 3) Signal strength is strong enough to register on the network, but not to open the data connection to the internet.
7 Connection to VRM Portal	Verify that the VRM Portal menu shows a recent last connection time. See Settings → VRM Portal. For more details, see the VRM Connection troubleshooting chapter of the GX Manual .

An [outdoor antenna](#) typically increases received signal by 15 dB to 25 dB.

Note that Ethernet and WiFi connections have priority over the cellular connection. Even when the available Ethernet or WiFi connection does **not** have a good connection to the internet. There is **no** automatic detection in place which in such case switches over to the GX LTE. In more technical language: when the cellular data connection is active, it is configured with a high routing metric. This way, the Linux kernel prioritises Ethernet or Wifi when these are available.

This screenshot shows how all details look when everything is OK:

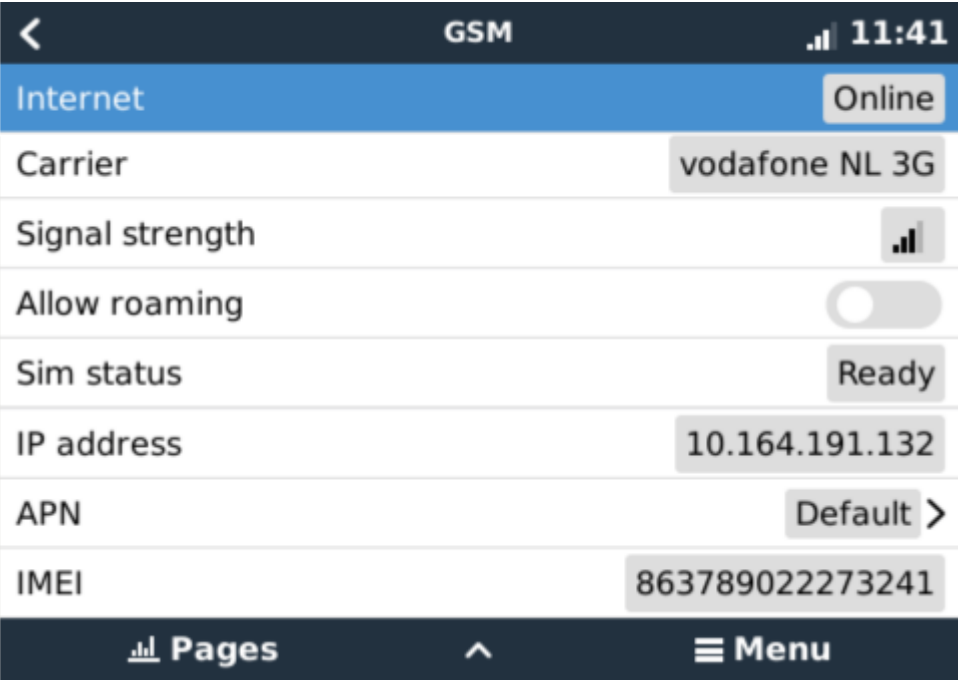

7. Supported Frequencies

7.1 Available models & their supported frequency bands

Part number	Name	Region	Used module
GSM100100400	GX LTE 4G-E	For EMEA/Korea/Thailand	Simcom SIM7600E-H
GSM100200400	GX LTE 4G-A	For North America	Simcom SIM7600A-H
GSM100300400	GX LTE 4G-SA	For Australia/New Zealand/South America	Simcom SIM7600SA-H

MANUAL PLS ADD INFORMATION ON THE FREQUENCY BANDS 2G/3G/4G.. Perhaps its too much for in above table?

7.2 Notes regarding regional coverage

A good reference to check frequencies is [4G world Coverage Map](#). Note that the page also contains 2G and 3G information, which is on its GSM World Coverage link on the top.

8. Technical Data

MANUAL PLS REVIEW

Outer dimensions (LxWxH)	106×42.5×22 mm (Drawing)
Voltage range	8..70 VDC
Power draw	2.5 W while 2G/3G data transfer <1.0 W in idle mode +0.4 W if GPS is enabled

Recommended fuse size	500 mA @ 12 V 250 mA @ 24 V 100 mA @ 48 V
Wire gauge (power cable)	0.5..1.5mm ² / AWG 28..16
Antenna connector	Type SMA Female
SIM card	Regular Mini SIM

9. Accessory / Antennas

Outdoor 2G and 3G GSM Antenna

NOTE WE ARE CHECKING WHAT ANTENNA TO USE



Part number	GSM900100100
Mounting option	Screw Mount
Cable Type	Rg-316
Cable Length	0.25 m
Connector	SMA Male Straight
Frequencies	800/900/1800/1900/2100 MHz
Signal Gain	3 dbi

Active GPS Antenna



Part number	GSM900200100
--------------------	--------------

Mounting option	Magnet
Cable Type	Rg-174
Cable Length	3.0 m
Connector	SMA Male Straight
Frequency	1575.42 MHz
Impedance	50 Ω

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

<https://www.victronenergy.com/live/venus-os:gx-lte?rev=1593086249>

Last update: **2020-06-25 13:57**

