

# GX SolarEdge Manual

## 1. Introduction

You can connect your [GX Device](#) with a SolarEdge PV solution, using the ModbusTCP Sunspec protocol. Sunspec is an industry standard protocol for exchanging PV Inverter yield information.

- Zero Feed-in for SolarEdge is not available when used with a Victron System,
- Frequency shift power control, as required in a [AC-Coupling system](#) might work, but has not been tested.

With those limitations, it is possible for the SolarEdge to be used in [ESS systems](#) where feed-in to the grid is allowed, but only when connecting the SolarEdge to the AC-input of the Victron inverter/charger. In other sorts of systems, for example Off-grid systems, or ESS systems in areas where grid feed-in is not allowed, using a SolarEdge PV solution is not supported by Victron.

## 2. How to configure

1. Ensure that the GX Device and the SolarEdge system are both on the same LAN or WiFi network.
2. Enable ModbusTCP support on your SolarEdge system. Consult the SolarEdge documentation for that.
3. On the GX Device, navigate to Settings → PV Inverters. Search for the Solar Edge and complete the configuration.

From:  
<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:  
[https://www.victronenergy.com/live/venus-os:gx\\_solaredge?rev=1554175911](https://www.victronenergy.com/live/venus-os:gx_solaredge?rev=1554175911)

Last update: **2019-04-02 05:31**

