

GX SolarEdge Manual

1. Introduction

You can connect your [GX Device](#) with a SolarEdge PV solution, using the ModbusTCP Sunspec protocol. Sunspec is an industry standard protocol for exchanging PV Inverter yield information.

- Zero Feed-in for SolarEdge is not available when used with a Victron System,
- Frequency shift power control, as required in a [AC-Coupling system](#) might work, but has not been tested.

With those limitations, it is possible for the SolarEdge to be used in [ESS systems](#) where feed-in to the grid is allowed, but only when connecting the SolarEdge to the AC-input of the Victron inverter/charger. In other sorts of systems, for example Off-grid systems, or ESS systems in areas where grid feed-in is not allowed, using a SolarEdge PV solution is not supported by Victron.

2. How to configure

1. Ensure that the GX Device and the SolarEdge system are both on the same LAN or WiFi network.
2. Enable ModbusTCP support on your SolarEdge system. Consult the SolarEdge documentation for that.
3. On the GX Device, navigate to Settings → PV Inverters. Search for the Solar Edge and complete the configuration.

Details:

1. The SE2200H - SE6000H range (HD-wave) was specifically tested, though several others are reported to work too.
2. The Modbus id has to be set at 126. This is done in the SE inverter menu, configuration, RS485-1 menu. Although this is in the RS485 menu it also sets the ID for modbus over TCP-IP
3. During testing, we found that the SolarEdge PV Inverter accepts just one concurrent TCP connection. Additional connections are rejected.

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/venus-os:gx_solaredge?rev=1558875928

Last update: **2019-05-26 15:05**

