

# VRM World


(draft)

<https://vrm.victronenergy.com/world/>

To publish your site on VRM World, it needs to:

- Site must have fresh data (?? hours)
- Configured lat/long location
- ?? (trimm to complete)

Then go to your site, click the Share icon

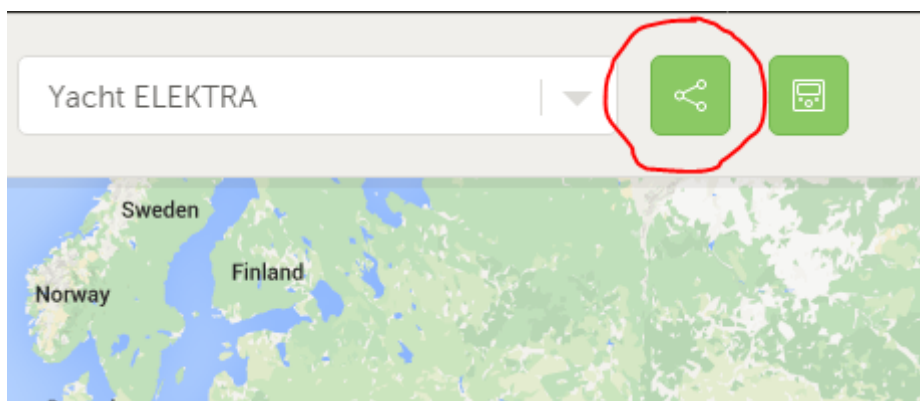

And enable the Show on Victron world button:

×

## Share your site

Enable site sharing

Password protect

Hide my exact location

Show on Victron World

---

Copy this private url to share:

<https://vrn.victronenergy.com/site/share/09bcb71>

Copy

---

Or, send the private url by email:

Send

In case you don't see the Show on Victron World button, double check above criteria.

## DISQUS

~~DISQUS~~

From:  
<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:  
[https://www.victronenergy.com/live/vrn\\_portal:vrn\\_world?rev=1453109410](https://www.victronenergy.com/live/vrn_portal:vrn_world?rev=1453109410)

Last update: **2016-01-18 10:30**

