

VRM World


(draft)

<https://vrm.victronenergy.com/world/>


To publish your site on VRM World, it needs to:

- Site must have fresh data (?? hours)
- Configured lat/long location
- ?? (trimm to complete)

Then go to your site, click the Share icon

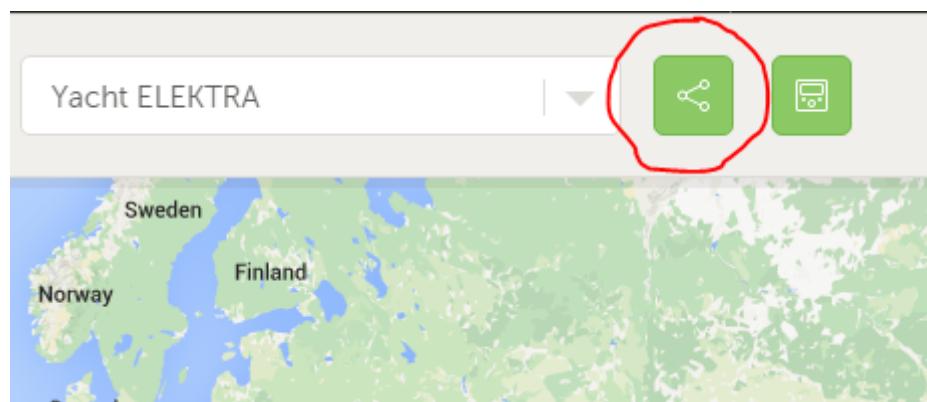

And enable the Show on Victron world button:

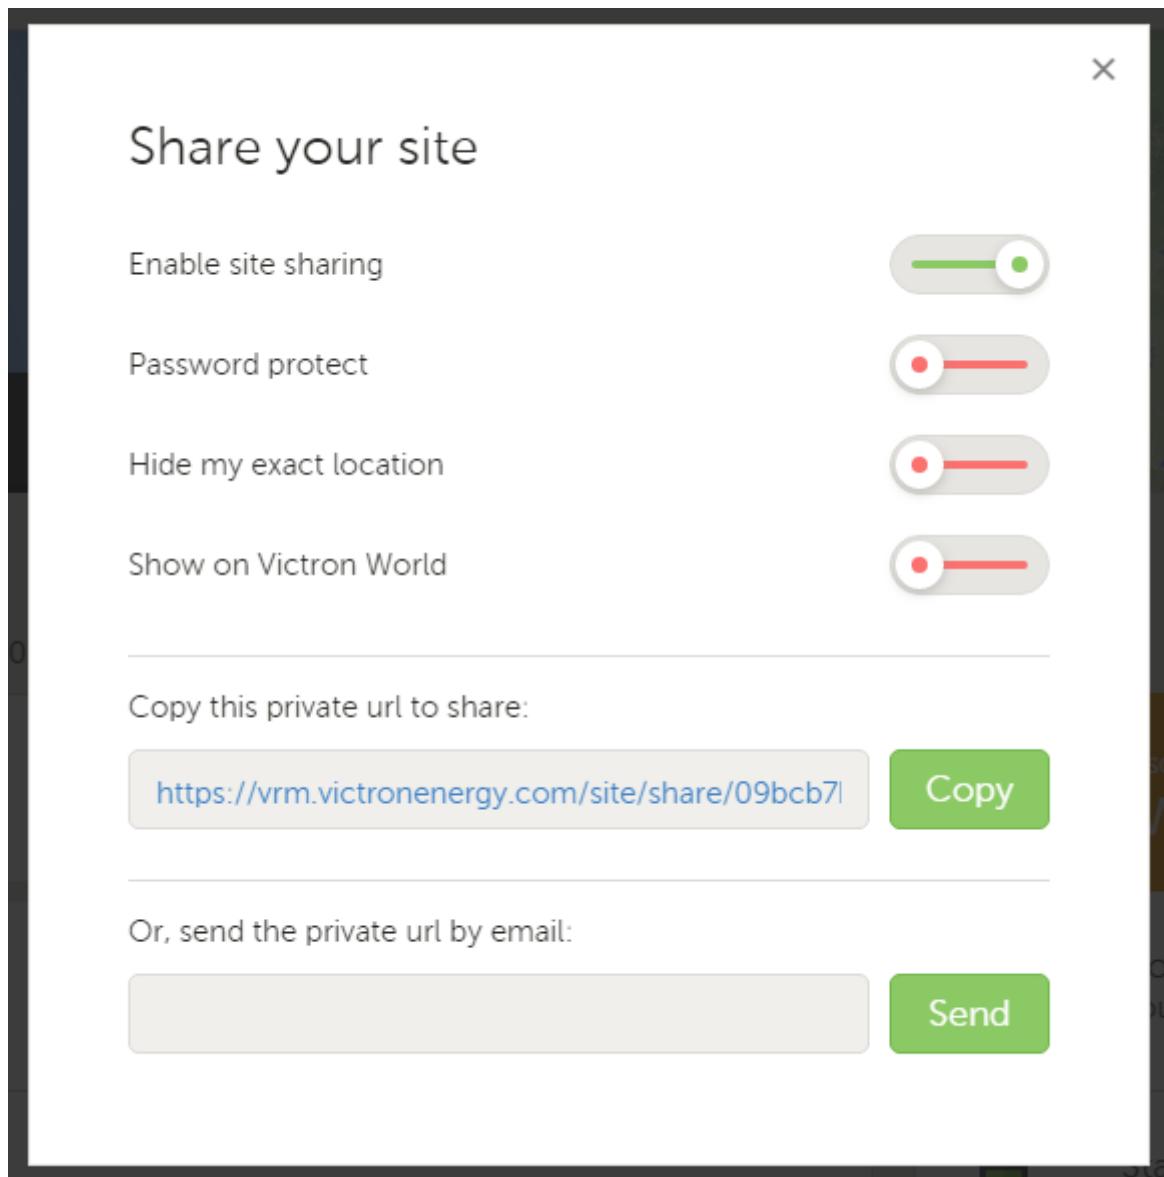

In case you don't see the Show on Victron World button, double check above criteria.

DISQUS

~~DISQUS~~

From:
<https://www.victronenergy.com/live/> - **Victron Energy**



Permanent link:
https://www.victronenergy.com/live/vrm_portal:vrm_world?rev=1453109410

Last update: **2016-01-18 10:30**