

VRM World


(draft)

<https://vrm.victronenergy.com/world/>

To publish your site on VRM World, it needs to:

- Site must have fresh data (?? hours)
- Configured lat/long location
- ?? (trimm to complete)

Then go to your site, click the Share icon

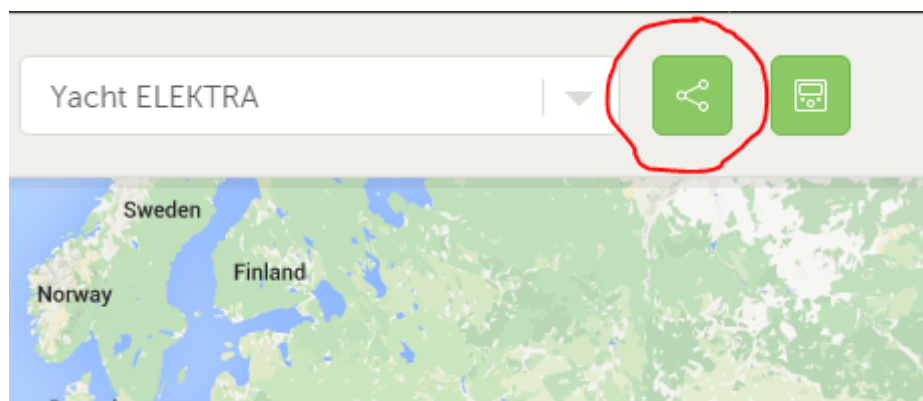

And enable the Show on Victron world button:

×

Share your site

Enable site sharing

Password protect

Hide my exact location

Show on Victron World

Copy this private url to share:

<https://vrm.victronenergy.com/site/share/09bcb7/>

Copy

Or, send the private url by email:

Send

In case you don't see the Show on Victron World button, double check above criteria.

What happens when you show your site on Victron World?

1. It is shown on the map
2. Anyone will be able to click the 'Visit' button and see all the data. The exact location will not be shown, settings will not be shown, etc.

DISQUS

~~DISQUS~~

<https://www.victronenergy.com/live/>

Printed on 2025-12-18 21:36

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/vrm_portal:vrm_world?rev=1453109520



Last update: **2016-01-18 10:32**