

Victron & Pytes

1. Product & System compatibility

1.1 A GX device is required, eg Cerbo GX, etc


It is essential to use the BMS-Can (500 kbit/s) connection type of a [GX device](#) with these batteries for communication of charge and discharge limits, error codes and state of charge.

It is possible to use either the BMS-Can or VE.Can ports with this battery. Depending which one you use will require additional configuration on the batteries side, please see the documentation linked below for instructions.

The minimum supported GX firmware version is v3.31. It is recommended to use the latest firmware version on new installations and when trouble shooting issues.

The minimum supported Pytes firmware version is 1.10.18. This is displayed at v110.0 on the GX device and VRM.

Connecting a Pytes battery to the GX device will require enabling DVCC, and disabling SVS and STS.

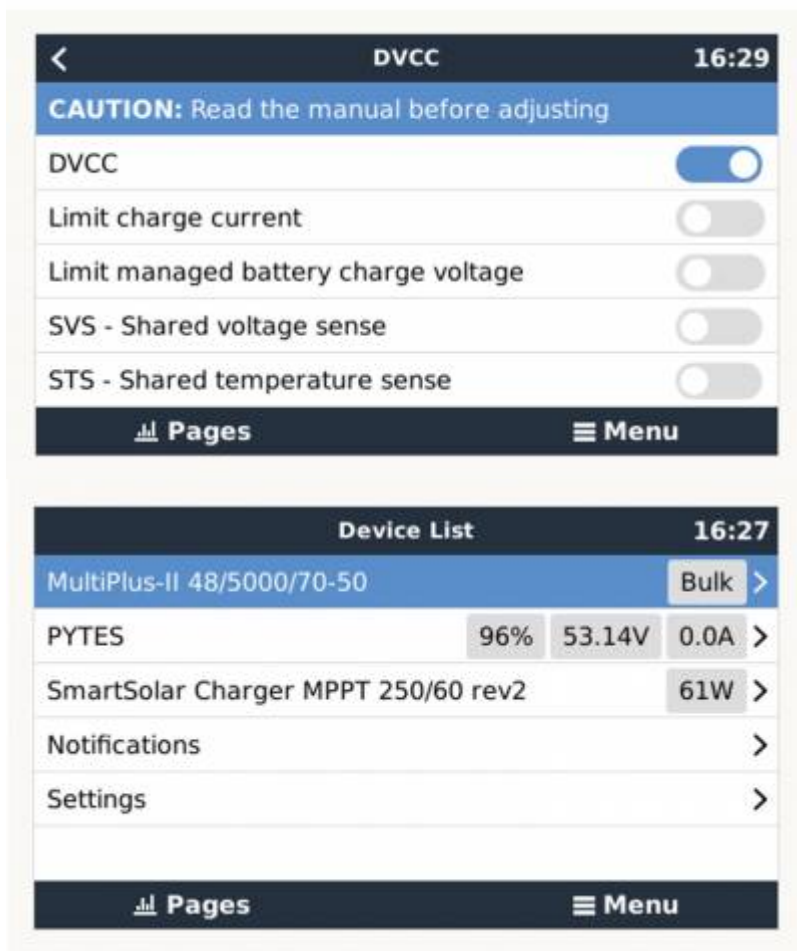

Details		16:28	
Lowest cell voltage	0800	3.321V	
Highest cell voltage	0500	3.327V	
Minimum cell temperature	0000	26°C	
Maximum cell temperature	0000	26°C	
Battery modules	1 online	0 offline	
Nr. of modules blocking charge / discharge	0	0	

Parameters		16:28	
Charge Voltage Limit (CVL)	53.8V		
Charge Current Limit (CCL)	12.5A		
Discharge Current Limit (DCL)	50.0A		



1.2 All 48V Multis, MultiPlus, Quattros and RS models are compatible

The minimum supported firmware version for VE.Bus models is 469. Minimum supported firmware for RS models is 1.16. Updating to the latest firmware is recommended for new installations, and troubleshooting issues.

These VE.Bus inverter/charger units must be connected to the [GX device](#) via the VE.Bus connection port.

In grid connected systems, advanced control functions are configurable in the ESS settings on the [GX device](#).

In off-grid systems, the control functions of the Battery Management System (BMS) are built into the latest version of the [GX device](#).

1.3 Solar Charger compatibility

All 48V BlueSolar and SmartSolar MPPT Chargers are compatible.

Some of our Solar Chargers feature a VE.Direct communication port, some feature a VE.Can communication port, and some feature both. Both of these types of communication ports can be used to connect the Solar charger to the GX Device. Such connection is mandatory, because it is used to regulate charge currents and voltages.

2. Minimum battery sizing

For reliable operation there are minimum numbers of batteries required for different Victron inverters. Please contact your battery supplier for these specifications.

3. Further system integration documentation

Installation and configuration manual with Victron Energy

Pytes Victron Guide

Victron VE.Configure3 settings with Pytes

Ebox Series manual

Further details about installation and configuration is available from your battery manufacturer.

Improvements CVL (Charge Voltage Limit) regulation were added to Pytes firmware versions 1.10.18. Earlier versions will still connect but are not supported, and may charge/discharge cycle when at

100% state of charge.

4. Support

Support for this battery should first come from your battery supplier. Pytes has a service email at ess_support@pytesgroup.com

Support from Victron is limited our online [Victron Community](#) page.

From:
<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:
https://www.victronenergy.com/live/battery_compatibility:pytes?rev=1718780155

Last update: **2024-06-19 08:55**

