

Linking to a dealer in VRM

Linking your VRM user account to your dealer allows for better service and support. Once linked, your dealer can access any site you can access, access additional diagnostic information for these sites, and is able to view your contact information.


Note that in most cases, your account will be linked to your dealer automatically when your dealer invited you via e-mail to register at VRM.

You can only link your VRM user account to a single dealer. Linking a dealer is completely optional and you can unlink from a linked dealer at any time.

There are two ways to link a dealer:

1. When registering using a invite from someone who has linked a dealer, you will have the option to link to this dealer as well.
2. When you already have a account, you can link to a dealer by entering their VRM dealer code in your profile settings.

You can view your current dealer in [your profile settings](#). To link a dealer you fill out their dealer code (which you can request from your dealer), and click the “Link dealer” button to link to the corresponding dealer.

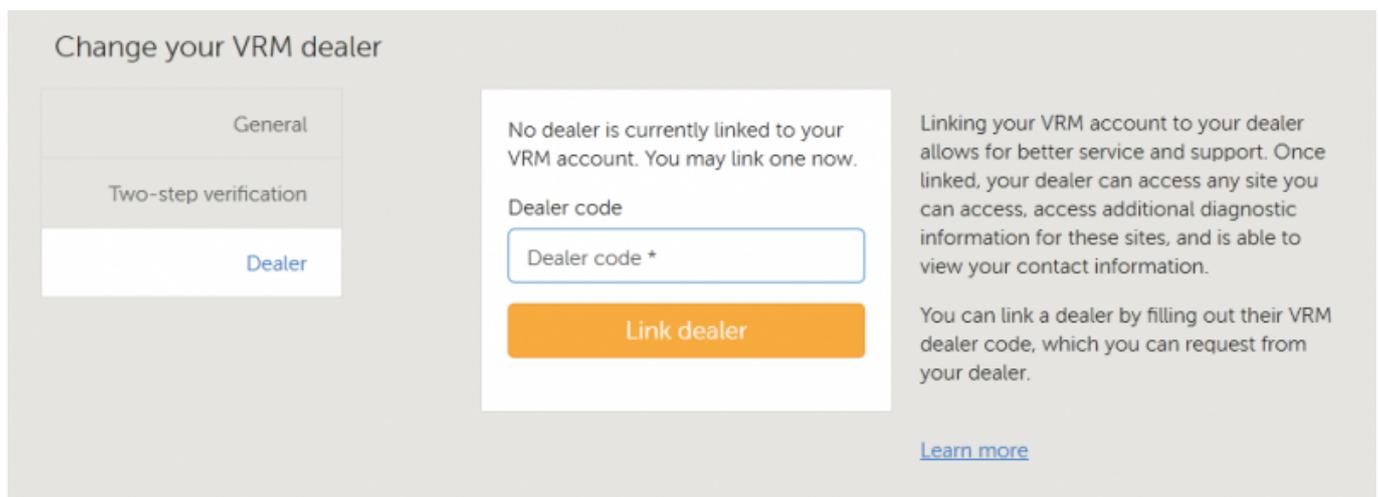

The screenshot shows a user interface for changing a VRM dealer. On the left, there is a sidebar with three menu items: 'General', 'Two-step verification', and 'Dealer'. The 'Dealer' item is highlighted in blue. The main content area is titled 'Change your VRM dealer'. It contains a message: 'No dealer is currently linked to your VRM account. You may link one now.' Below this message is a form with a label 'Dealer code' and a text input field containing 'Dealer code *'. Below the input field is an orange button labeled 'Link dealer'. To the right of the form, there is explanatory text: 'Linking your VRM account to your dealer allows for better service and support. Once linked, your dealer can access any site you can access, access additional diagnostic information for these sites, and is able to view your contact information.' Below this text, it says 'You can link a dealer by filling out their VRM dealer code, which you can request from your dealer.' At the bottom right of the form area, there is a blue link labeled 'Learn more'.

You can change your dealer by simply linking to another dealer: fill out their dealer code and click the “Change dealer” button. You can also unlink by clicking the “Unlink dealer” button. This will immediately unlink the current dealer from your VRM user account.

Change your VRM dealer

General

Two-step verification

Dealer

Current dealer: Example
Dealer code: abc123

Unlink dealer

New dealer code

New dealer code *

Change dealer

Linking your VRM account to your dealer allows for better service and support. Once linked, your dealer can access any site you can access, access additional diagnostic information for these sites, and is able to view your contact information.

You can link a dealer by filling out their VRM dealer code, which you can request from your dealer.

[Learn more](#)

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/vrn_portal:dealers?rev=1456738980

Last update: **2016-02-29 10:43**

