
VRM Portal alarms and monitoring


The VRM Portal constantly monitors and watches over your system and can also inform you by email if something is amiss. There are four categories of monitoring:

- The no data alarm: monitors the connection between the Portal and the Victron installation
- Automatic alarm monitoring: monitors a predefined list of parameters on all connected products
- Geofence: monitors location (requires a Color Control GX with a USB-GPS)
- User configurable alarms

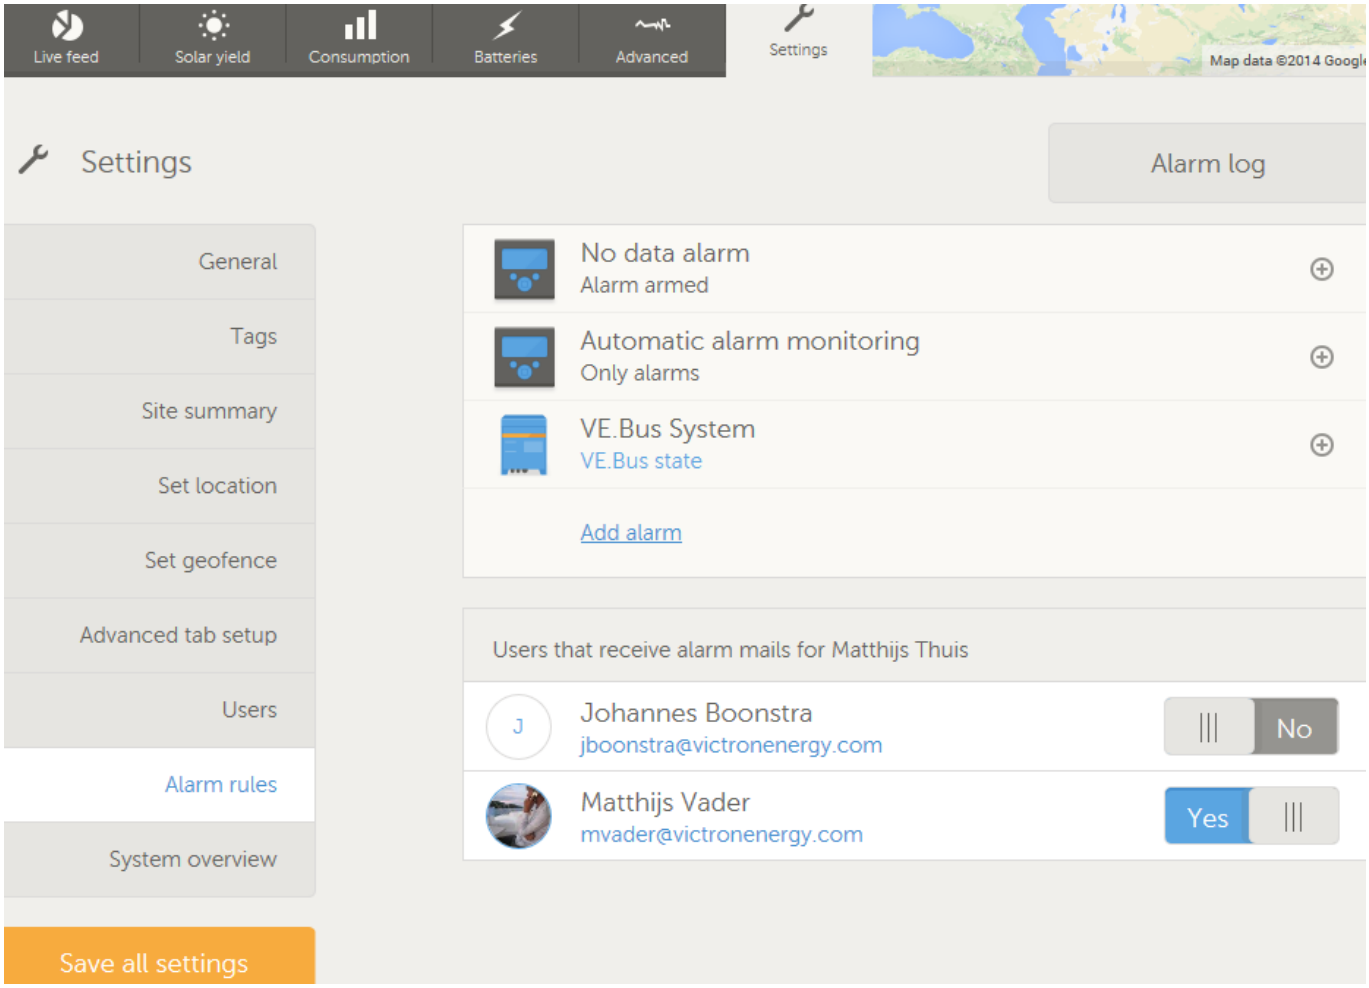

1. No data alarm


Typically used for land-based installations, such as off-grid farms and telecommunication sites.

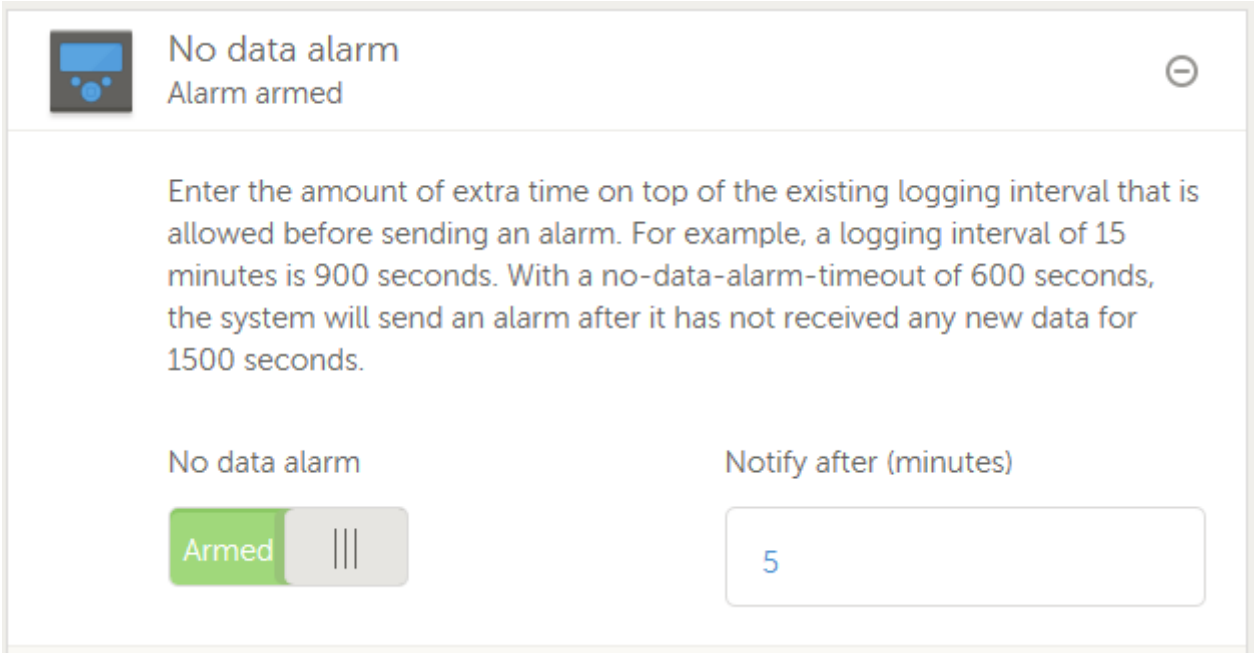

2. Automatic alarm monitoring

Monitors a predefined list of parameters on all connected products. With this feature, it is no longer necessary to manually configure alarm rules for all the different parameters. An email will be sent if any of the parameters listed below enters an Alarm state, and optionally for Warnings too. A recovery email will be sent if the parameter returns to its normal value.

You can set the monitor to send an email alert for alarms only, for warnings and alarms, or disable it entirely. The default for new sites is Only alarms:

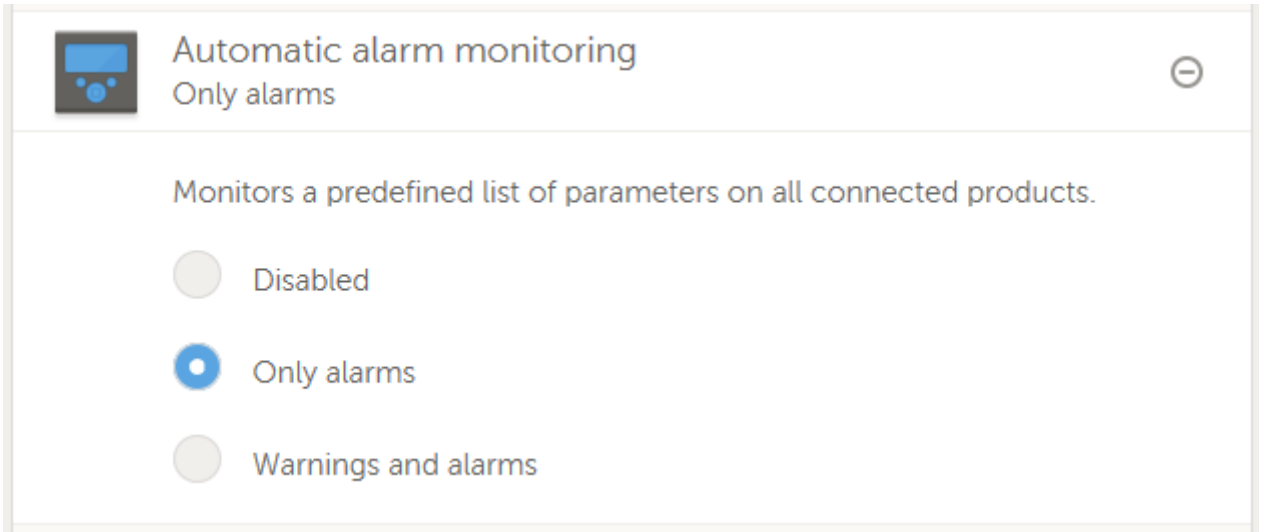

2.1 Predefined list of monitored parameters

2.1.1 VE.Bus products (Multi, Inverter and Quattro)

- VE.Bus state

- VE.Bus Error
- Temperature alarm
- Low battery alarm
- Overload alarm

2.1.2 BMV and Lynx Shunt VE.Can

- High voltage alarm
- Low voltage alarm
- High starter-voltage alarm
- Low state-of-charge alarm
- Low battery temperature alarm (BMV-702 only)
- High battery temperature alarm (BMV-702 only)
- Mid-voltage alarm (BMV-702 only)
- Low fused-voltage alarm (Lynx Shunt only)
- High fused-voltage alarm (Lynx Shunt only)
- Fuse blown alarm (Lynx Shunt only)
- High internal-temperature alarm (Lynx Shunt only)
- Low starter-voltage alarm (Lynx Shunt only)

2.1.3 Solar charger

- Charger fault
- Charge state
- Equalization pending
- Alarm condition
- Low voltage alarm
- High voltage alarm
- Error code

2.1.4 Skylla-i charger

- Charger fault
- Charge state
- Error
- Low voltage alarm
- High voltage alarm

2.1.5 Lynx Ion BMS

- Error code
- Error

3. User configurable alarms

Advanced rules, including hysteresis can be configured for all parameters available in the VRM

database.

3.1 How to properly configure high, low and their hysteresis

To understand what the hysteresis is, consider the following example: you want an alarm as soon as the battery voltage drops below 10 volt. And only when it rises again above 11.5 volts, you want the alarm to clear. These 11.5 V is the hysteresis.

A properly configured alarm rule meets the following criteria:

- The low hysteresis should be equal to or higher that the low alarm threshold
- The high hysteresis should be equal to or lower than the high alarm threshold
- The low hysteresis should be lower than the high alarm threshold (otherwise a high alarm will be triggered as soon as the low alarm is cleared)
- The high hysteresis should be higher than the low alarm threshold

Note November 2014: after rereading the exact meaning of hysteresis, I see that this is the concept. And not the right word for the value at which to clear an alarm. We'll rename these items on the and then also this text shortly: Low hysteresis → Clear low alarm above High hysteresis → Clear high alarm below

3.2 Receiving and alarm on mains failure


This is an alarm typically wanted in a backup system.

To set it up, configure an alarm on the VE.Bus State.

Set the Inverter state as 'Armed'.

4. Geofence

Typically used for rental vehicles and boats. The example below shows a Geofence that will give an alert when the boat leaves the lake. An alarm will also be generated when the location data is no longer being received, for example when the GPS receiver is unplugged. Use this in combination with the No data alarm for full coverage.

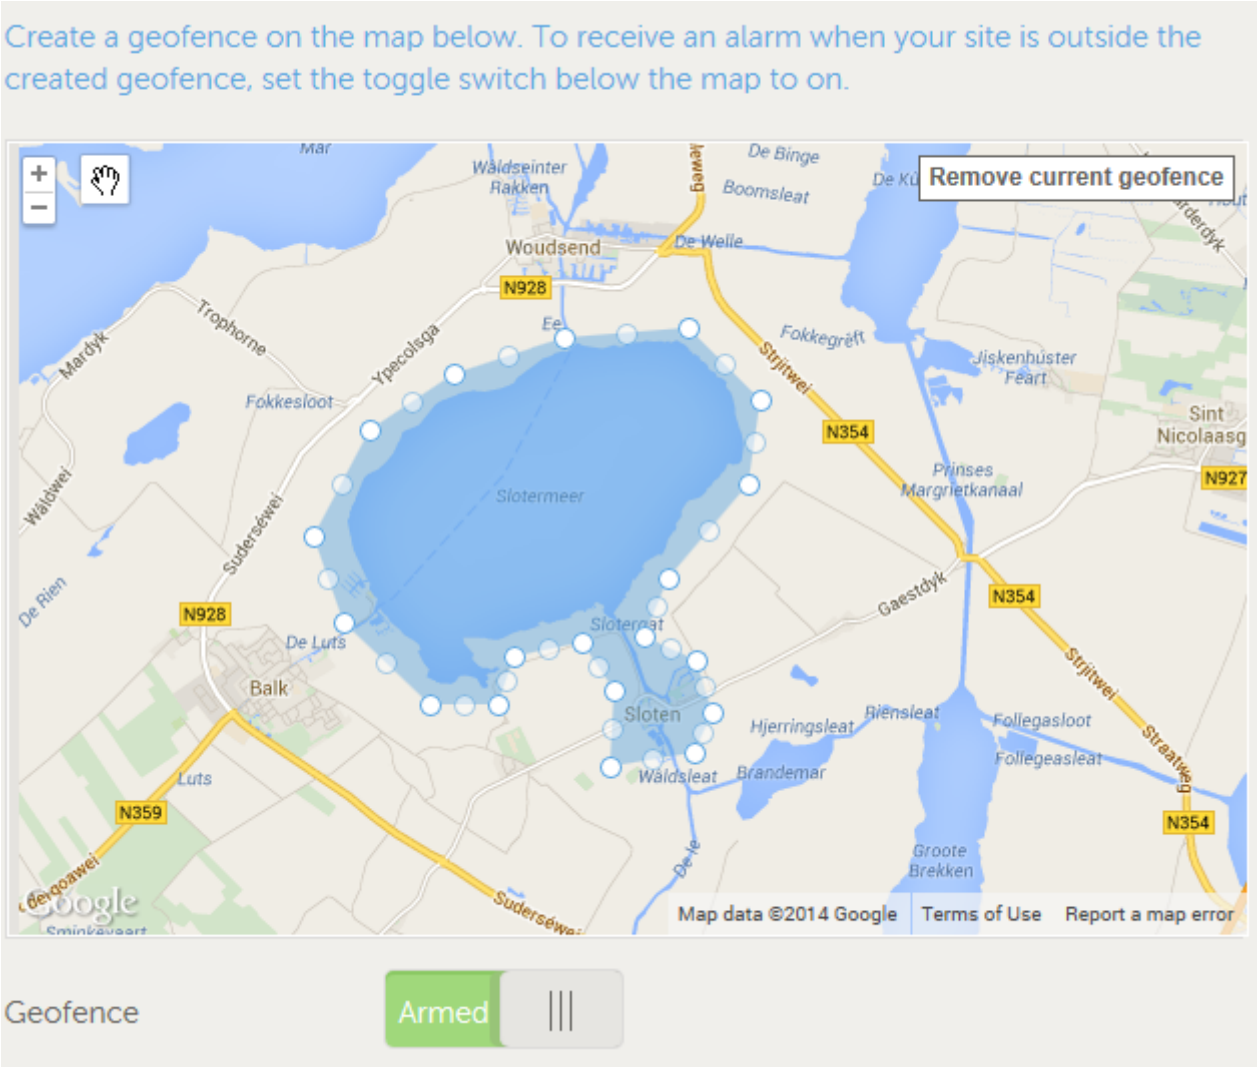

~~DISQUS~~

From:
https://www.victronenergy.com/live/ - **Victron Energy**

Permanent link:
https://www.victronenergy.com/live/vrm_portal:alarms?rev=1479162813

Last update: **2016-11-14 22:33**