

Victron & AXIstorage Li 7S / 9S

The combination of Victron products with the BMZ ESS 7.0 battery has been tested and certified by the R&D departments. The combination is actively supported by both companies. The AXIstorage 7S/9S is identical with the BMZ ESS hardware and software and therefore also compatible.



1. Introduction


1.1 Compatible Victron products

All 48V Multis and Quattros. And always a Color Control GX is necessary in the system, since that has the canbus port which is used for the (required!) communication between the ESS battery and the Victron system.

1.2 Notes

- AXIstorage batteries can only be used in a [Victron ESS installation](#) installation that uses the ESS Assistant.
- Paralleling multiple AXIstorage ESS batteries to expand capacity is possible. Contact AXIstorage for more information.
- Derating, based on the dynamic AXIstorage ESS charge- and discharge limits:
 - Minimum CCGX version is v1.72
 - The derating mechanism is not very precise yet. In other words, do not expect a discharge limit of 30A to result in a precise discharge of 30A.
 - Actual charge- and discharge limits are visible in the Parameters page. See screenshot below in Chapter 4.

1.3 System diagram

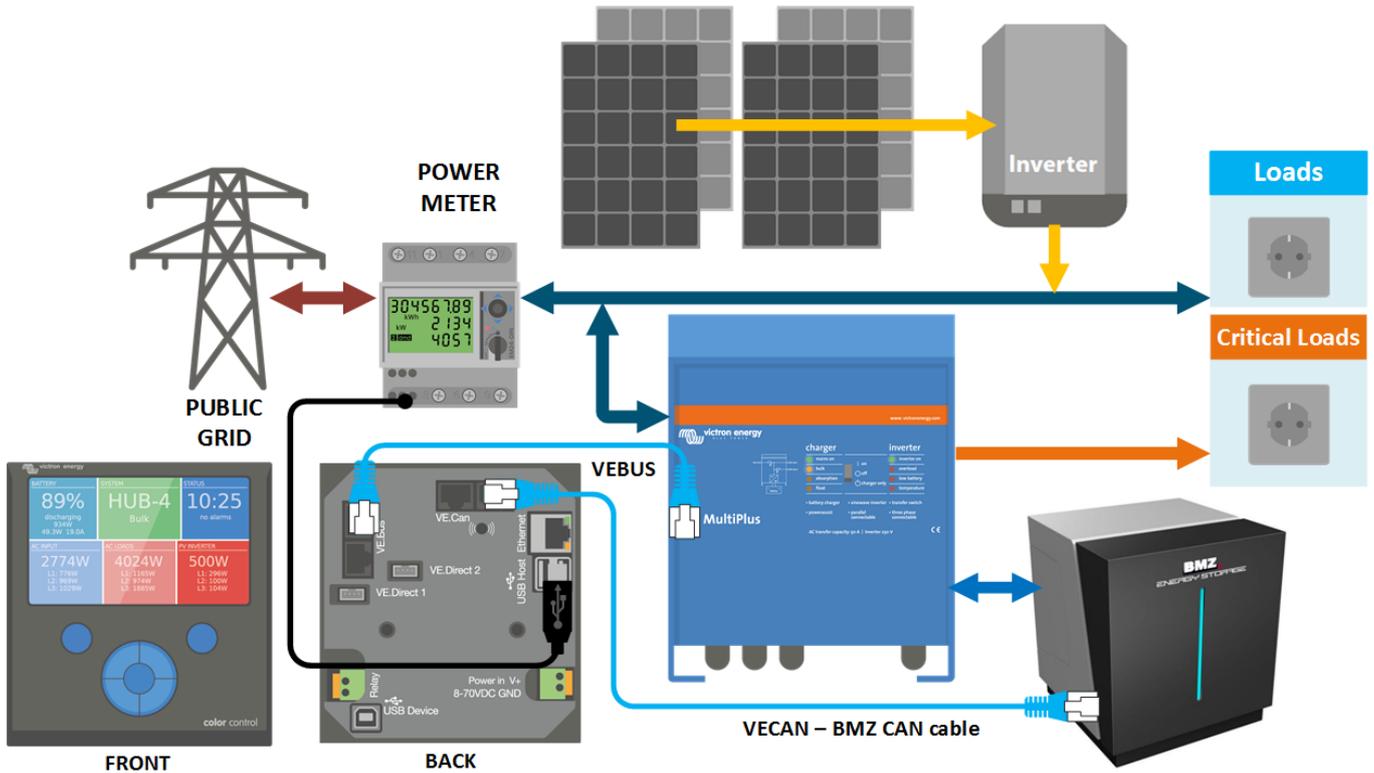

2. Wiring of communication cables

To use the AXIStorage ESS in Victron system, it is necessary to use a Color Control GX. The Color Control GX takes care of sending the necessary canbus keep-a-live message to the ESS battery. Without it, the battery will open its internal emergency relay after 10 minutes.

A special RJ-45 cable is necessary to connect the battery to the Color Control GX. Pinout:

Function	VE.Can RJ-45	AXIStorage RJ-45
GND	Pin 3	Pin 2
CAN-L	Pin 8	Pin 5
CAN-H	Pin 7	Pin 4

Place a VE.Can terminator in the empty socket on the CCGX

3. VEConfigure settings

3.1 Charge tab


Parameter	Setting
Battery type	Lithium
Charge curve	Fixed
Absorption voltage	60.75 V
Float voltage	60.00 V
Absorption time	1 Hr

Note: make sure to double check the float voltage after completing Assistants, and if necessary set it

back to 60.00 V.

3.2 ESS Assistant

Select the fourth battery type:

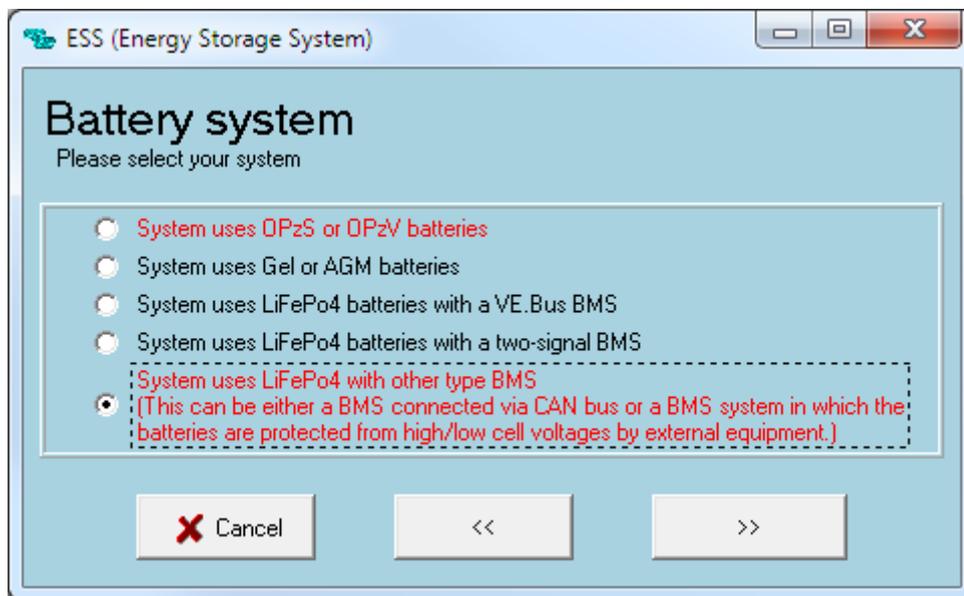


Then:


1. Enter the battery capacity:
 1. AXIstorage 75 - 121.5 Ah
2. Do not change the dynamic cut-off values, they have already been set correctly after selecting the lithium battery type.
3. Same for the restart offset: do not change that.

4. Color Control GX Configuration

- Enable the CAN-bus BMS Service in the CCGX. Menu path: *Settings* → *Services* → *CAN-bus BMS*. Note that this changes the function of a VE.Can port: it is not possible to connect both VE.Can products and a BMZ battery together.
- After properly wiring and setting up, the AXIstorage will be visible as a battery in the device list:

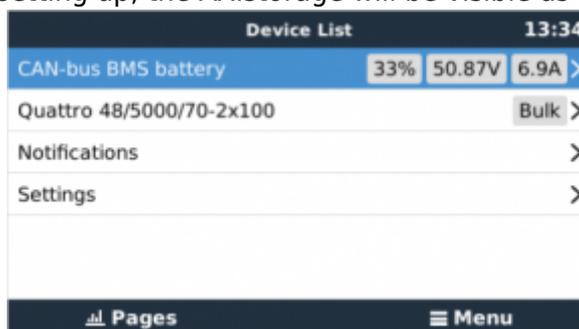

- The parameters option within the battery page shows the actual battery charge and discharge limits:

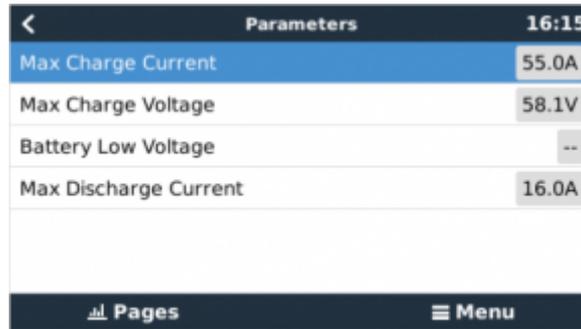

The screenshot shows a mobile application interface with a dark blue header. The header contains a back arrow on the left, the word "Parameters" in the center, and the time "16:15" on the right. Below the header is a list of battery parameters, each with a value in a light blue box on the right. The parameters are: "Max Charge Current" (55.0A), "Max Charge Voltage" (58.1V), "Battery Low Voltage" (--), and "Max Discharge Current" (16.0A). At the bottom of the screen, there is a dark blue bar with a "Pages" icon and text on the left, and a "Menu" icon and text on the right.

Parameter	Value
Max Charge Current	55.0A
Max Charge Voltage	58.1V
Battery Low Voltage	--
Max Discharge Current	16.0A

- Make sure to enable the *Synchronize VE.Bus SOC with battery* setting in the System Setup page in the CCGX: it will copy the State of Charge as reported by the AXIstorage to the Multi or Quattro, making Hub-4 work with that SOC.

DISQUS

~~DISQUS~~

From: <https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link: https://www.victronenergy.com/live/battery_compatibility:axistorage?rev=1492070542

Last update: **2017-04-13 10:02**

