


my-PV AC-Thor and Victron Energy ESS

When the batteries are full, we still have PV power available, but our grid operator doesn't allow feeding, that power is lost. We could use that power and send it to a boiler or something similar. For this we are using a device from my-PV called AC-Thor.

The schematic for the ESS system looks like this (the meter from my-PV is not needed in this setup):

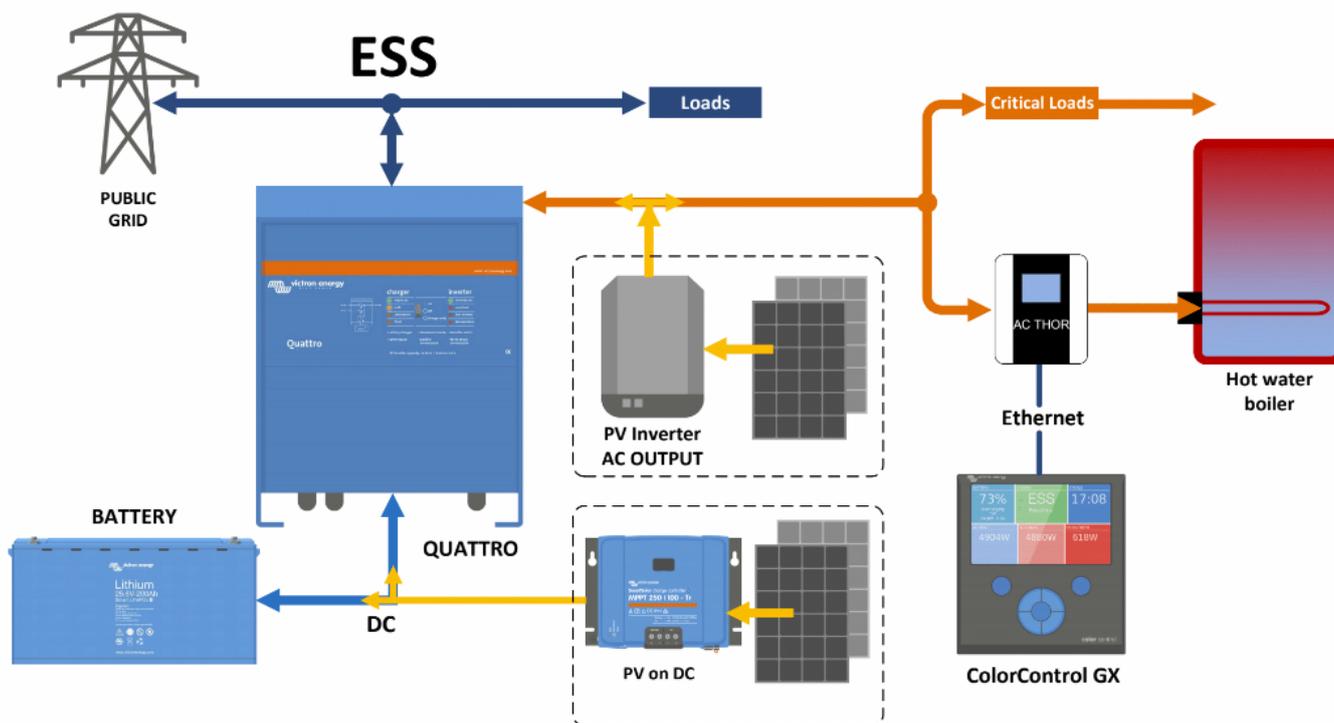

First setup:

AC-Thor device must be connected on the AC output of the Multi/Quattro.


Must be in the same LAN network as Color GX or Venus GX, with DHCP enable (default).

Using the device touch screen, select Information menu and go to the third screen to find the current IP address.



Open a browser, put that IP address into the address field and press enter

The webpage should look like this:

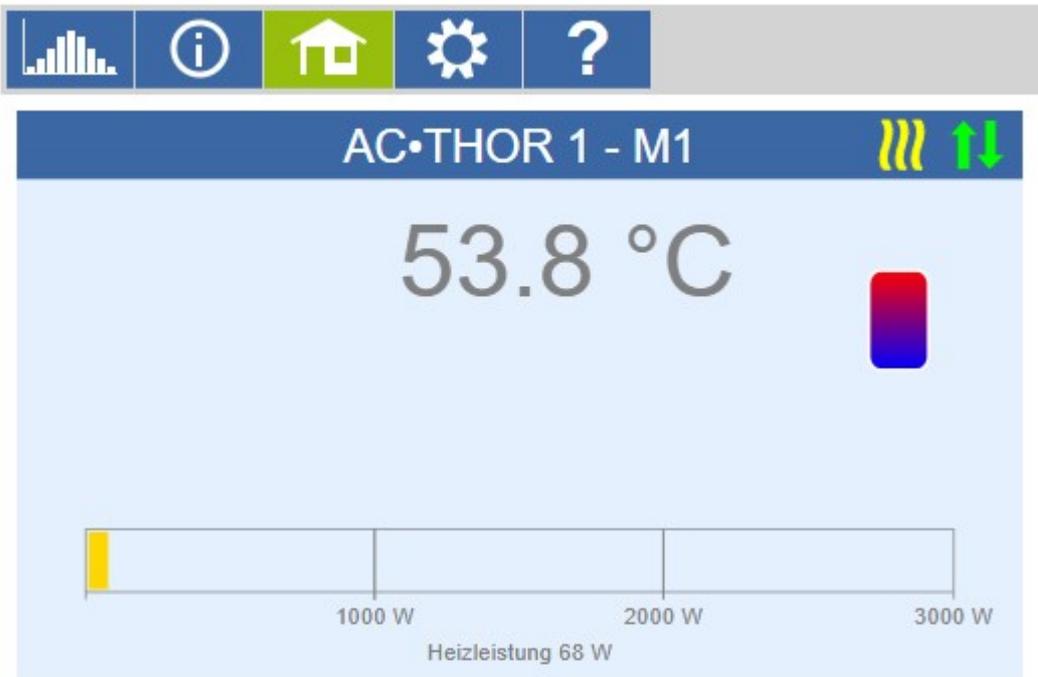

Device state

- Off
- On

Firmware Version: a0010103
 Internet connection required for help.
 © 2019 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com

Please check the firmware version on AC-Thor device, must be at least a0010006.

Firmware Version: a0010006
 Internet connection required for help.
 © 2018 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com

Go to setting and select the "Mode". For ESS select "Hot water 3KW", .

Access level

Level: Level 3 ▾ Password:

Mode

Mode: 1: Hotwater 3kW ▾

In order to have communication between the GX device (like ColorControl GX or Cerbo GX) and Ac-Thor, some parameters must be configured:

Control type	Victron 1ph Manual Victron 3ph Manual Victron 3ph Manual
Signal source: ACTHOR Number >1: only "Slave" selectable	Victron 3ph Manual
IP address of signal source:	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
Control status:	Conn. to Adj.Modbus P=-997
Power timeout:	10 Seconds
Control target: Negative value means feed-in. Only change this value if you are familiar with the control strategy - red Help for more details.	-50 W
Block Start-Hour:	0 Block Stop-Hour: 0
	Save

First you select which type of energy meter you are going to read from. Select 'Victron 1ph Manual' if you are using a single phase meter like the ET112 or select 'Victron 3ph Manual' if you are using a three phase meter like the EM24 or ET340.


On the background by choosing on of these setups communication will be done through ModbusTCP Port 502, the Device ID will be set to 0 and the ModbusTCP registers will be set to 820 for single phase or 820, 821 & 822 for three phase and values are in Int16 format & a minus value (-feed) will detect feedin energy.

On the IP address field, you have to put the GX device (like ColorControl GX or Cerbo GX) IP address. If you don't know how to obtain it, please check here:
<https://www.victronenergy.com/panel-systems-remote-monitoring/venus-gx#manuals>


On the Control target, recommended value is -50W.

Press Save to store the parameters.


On the GX device please be sure that Modbus TCP is enabled (Settings → Services → Modbus TCP)

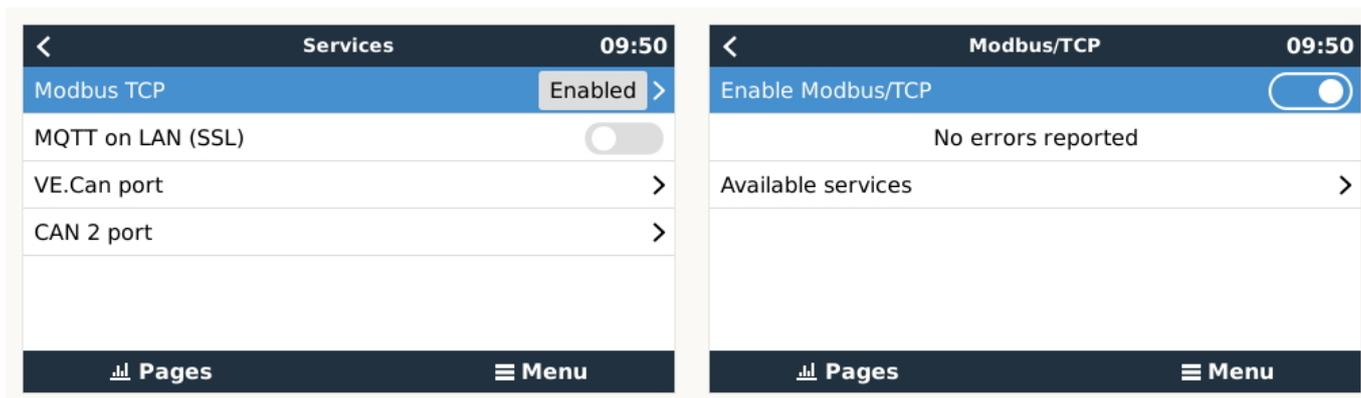

Feed in excess solar power must be enabled for the system with PV panels connected using MPPT's and Fronius Zero Feed-in must be disabled for systems with PV panels connected using Fronius PV Inverters.

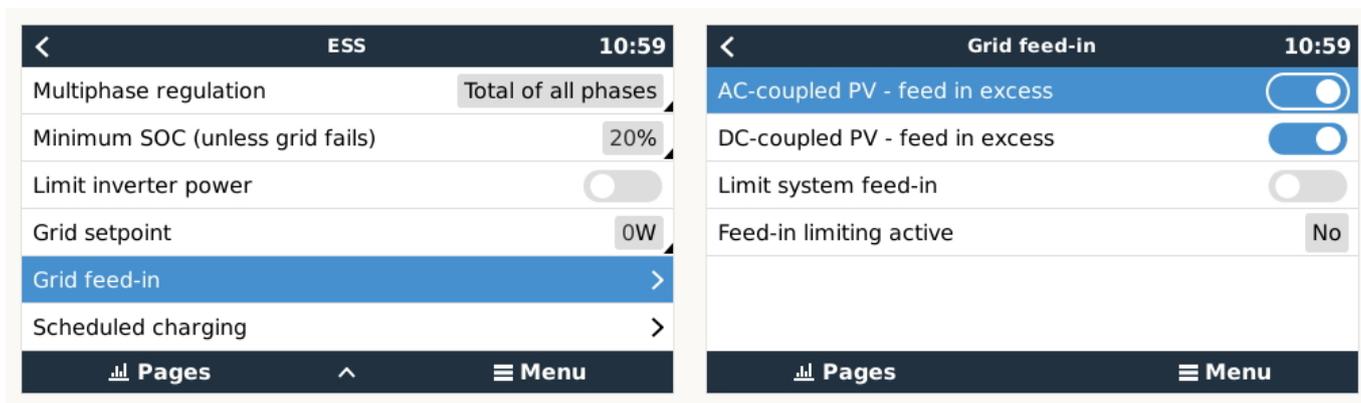

If everything is correctly configured, you should see in the information screen of the AC-Thor, the grid consumption/feed displayed as Meter measured value, positive for consumption and negative for feed in:

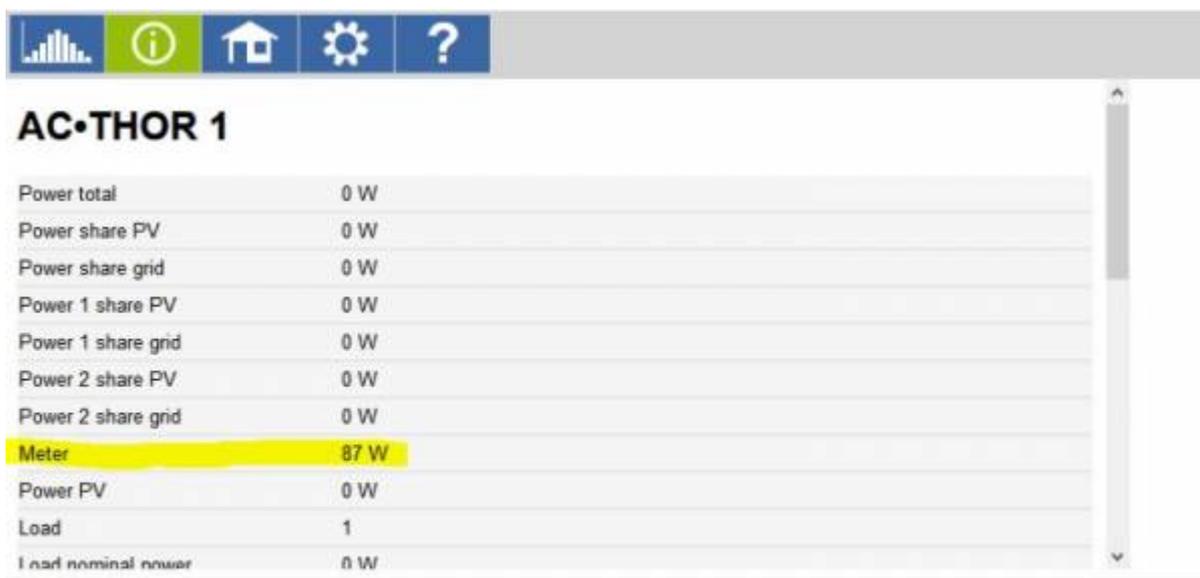

© 2018 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com



© 2018 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com

AC-Thor will control the energy sent to the boiler so that the energy sent to the grid is approximately

50W.



To prevent boiler to over heat, please be sure the temperature sensor is connected to AC-Thor and installed inside the boiler. The temperature parameters can be configured in the settings menu:

Hotwater

Temperature:	max °C	Min °C
	60	50
Boost-Mode:	<input checked="" type="radio"/> Off	<input type="radio"/> On
Timeframe:	start hour	stop hour
	17	23
Weekday	<input type="checkbox"/> Mon	<input type="checkbox"/> Tue
<input type="button" value="Save"/>		

AC-THOR Technical specifications:

- mains voltage 230 V, 50 Hz
- outputs 0-3000 W infinitely variable + switching output 16 A
- mains connection Single-phase, earthing contact plug
- consumer connection Protective contact socket for resistive loads
- display Color Graphics, Touch Screen 2.83 “
- connection cable 2,8 m
- dimensions (W x H x D) 135 x 210 x 65 mm

From: <https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link: https://www.victronenergy.com/live/actor_ess?rev=1613557406

Last update: **2021-02-17 11:23**

