

# Victron Energy and BlueNova Energy LiFePo4 Batteries

The BlueNova Energy ([www.bluenova.co.za](http://www.bluenova.co.za)) range of Lithium Iron Phosphate batteries is compatible with Victron products in various systems.

## 1.1 Product and System Compatibility

Victron + BlueNova can be used for the following systems

1. Off Grid 2. Backup 3. Energy Storage

## 1.2 Colour Control GX or VenusGX is required

When used with BlueNova Batteries the minimum firmware version for the Colour Control / Venus G X is v2.02. It is recommended to always use the latest Firmware version for the Colour Control/Venus GX.

## 1.3 All 48V Multi's, MultiPlus, MultiPlus II, Multigrids and Quattros are compatible

When the BlueNova battery is installed in a Victron ESS installation, which is the best solution for Energy Storage Systems, there is no need for additional control wiring. For other systems, such as off-grid systems and backup systems, the internal BMS controls will control deep discharge and overcharge conditions. Please contact BlueNova for more information. For more Victron-related settings see the VEConfigure section below

## 2. BlueNova Energy product range

The BlueNova range is supplied with a BMS as standard on all current models of batteries. See the BlueNova product page for more details on the various options.

## 3. Wiring of Can.Bus cable between BlueNova and CCGX.



No RJ45 cable is supplied for this connection.

Plug the CCGX/VenusGX side of the cable into one of the VE.Can sockets on the back of the CCGX/VenusGX. Plug the other end into the battery at one of the RJ45 CANbus ports. A VE.Can terminator is not necessary for the other VE.Can socket on the CCGX/VenusGX. Without properly connecting this cable, the battery will stop charging/discharging after several minutes. Also, the battery will not show up on the display of the CCGX/VenusGX.


## 4. VEConfigure settings

### 4.1 Charge parameters

Parameter	Setting
<u>Batt. type</u>	User defined
Charge curve	Fixed
<u>Absorbption voltage</u>	56,2V
Float voltage	55,5V
<u>Absorbption time</u>	60 min.



### 4.2 ESS Assistant

Select the fourth battery type:

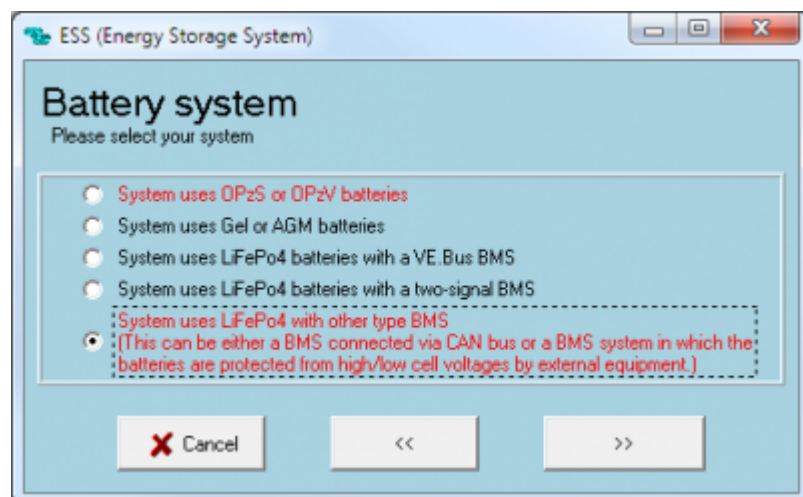


## 5. Color Control GX Configuration

Select the *VE.Can & CAN-bus BMS (250 kbaud)* CAN-profile in the CCGX. Menu path: *Settings* → *Services* → *CAN-profile*. Note that this changes the function of a VE.Can port: it is not possible to connect both VE.Can products and a Bluenova battery together.

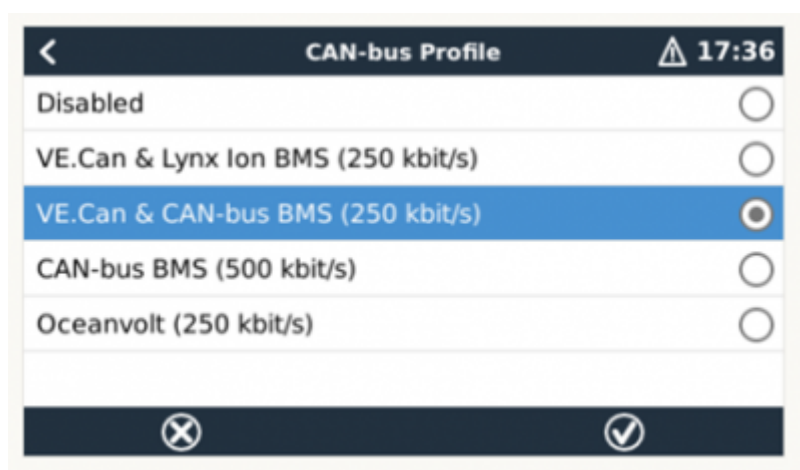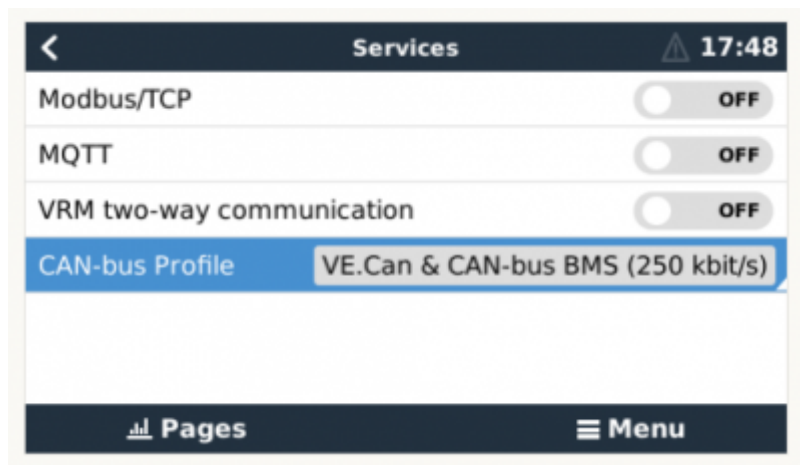

After properly wiring and setting up, the BlueNova will be visible as a battery in the device list:

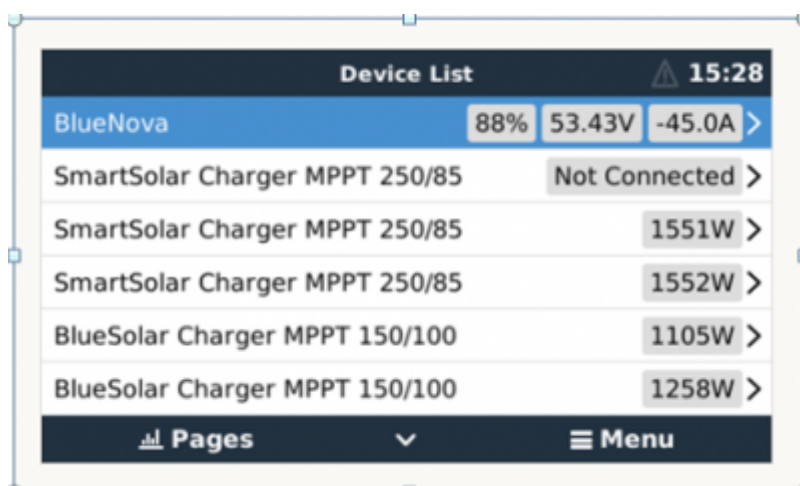


If you have multiple batteries, a single entry will show up, which represents all batteries. The parameters option within the battery page shows the actual battery charge and discharge limits.

==== **6. BlueNova Energy battery setup with DVCC enabled** (DVCC - Distributed Voltage and Current Control) =====

Introduction and features

Enabling DVCC in a setup containing a BlueNova Energy battery, changes the GX device from a passive monitor into an active controller.

The GX device receives the Charge Voltage Limit (CVL), Charge Current Limit (CCL), Discharge Current Limit (DCL) as well as the Battery Low Voltage from the battery and relays that to the connected inverter/chargers and solar chargers. These then disable their internal charge algorithms and simply do what they're told by the battery. There is no need to set-up charge voltages or choose the charge algorithm type.

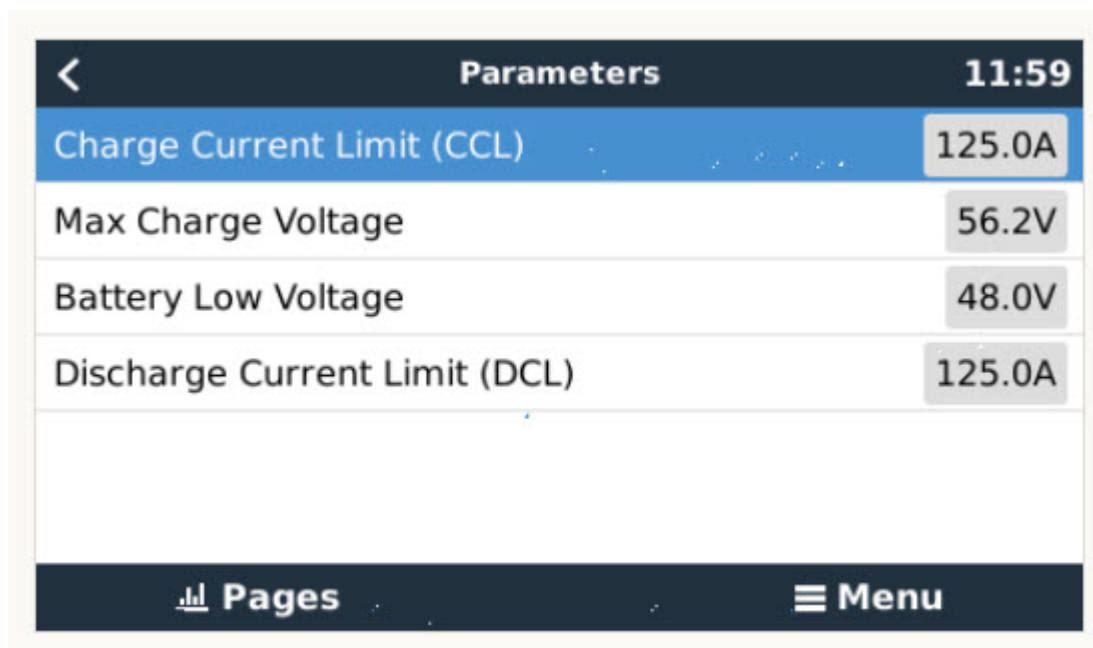

Parameters		11:59
Charge Current Limit (CCL)		125.0A
Max Charge Voltage		56.2V
Battery Low Voltage		48.0V
Discharge Current Limit (DCL)		125.0A
Pages		Menu



Shared Voltage Sense (SVS) Works with VE.Bus devices and VE.Direct Solar Chargers.

The system automatically selects the best available voltage measurement. It will use the voltage from the BlueNova Energy battery BMS or a BMV battery monitor, if possible, otherwise it will use the battery voltage reported by the VE.Bus system. The voltage displayed on the GUI reflects the same voltage measurement.

**Shared Voltage Sense (SVS)** is by default enabled when DVCC is enabled. It can be disabled with a switch in the Settings → System Setup menu.

**Limit charge current** - This is a user-configurable maximum charge current setting and can, in majority of cases, be disabled for BlueNova Energy batteries. It works across the whole system. MPPT Solar Chargers are automatically prioritized over the mains/generator.

To enable or disable DVCC, see Settings → System Setup in the menus.

### DVCC Requirements :

Battery compatibility -

DVCC has extensively been tested on BlueNova Energy batteries and is therefore fully supported .

### Firmware versions :

Do not use DVCC in cases where these requirements(Victron) are not met. In all cases we recommend to install the latest available firmware during commissioning. Once running well, there is no need to pro- actively update firmware without reason. In case of difficulty, the first action is to update

firmware.

## Required minimum firmware versions:

BlueNova Energy 123SmartBMS : v5.12

BlueNova Energy BMMC : V3.5

Multi/Quattro: 422

MultiGrid: 424

CCGX / Venus GX: v2.12 VE.Direct MPPTs: v1.29

VE.Can MPPT Solar Chargers cannot be used: they do not yet support the new control mechanisms.

Lynx Ion + Shunt: v2.04 Lynx BMS: v1.09

In case of an ESS System, the ESS Assistant needs to be version 164 or later (Released in November 2017).

## 7. Recommended Maximum Charge / Discharge Values

	Charge Power (continuous)		Discharge Power (continuous)	
	Recommended (C4)	Maximum (C2)	Recommended (C10)	Maximum (C2)
<a href="#">BN13V-154-2k mini-HP</a>	500W	1 000W	200W	1000W
<a href="#">BN13V-310-4k NG</a>	1 000W	2 000W	400W	2 000W
<a href="#">BN26V-77-2k mini-HP</a>	500W	1 000W	200W	1 000W
<a href="#">BN26V-154-4k NG</a>	1 000W	2 000W	400W	2 000W
<a href="#">BN26V-230-6k NG</a>	1 500W	3 000W	600W	3 000W
<a href="#">BN26V-310-8k NG</a>	2 000W	4 000W	800W	4 000W
<a href="#">BN26V-460-12k NG</a>	3 000W	6 000W	1 200W	6 000W
<a href="#">BN26V-920-24k NG</a>	6 000W	8 320W	2 400W	8 320W
<a href="#">BN26V-1540-40k NG</a>	10 000W	13 000W	4 000W	13 000W
<a href="#">BN39V-77-3k NG</a>	750W	1 500W	300W	1 500W
<a href="#">BN39V-154-6k NG</a>	1 500W	3 000W	600W	3 000W
<a href="#">BN39V-230-9k NG</a>	2 250W	4 500W	900W	4 500W
<a href="#">BN39V-310-12k NG</a>	3 000W	6 000W	1 200W	6 000W
<a href="#">BN39V-460-18k NG</a>	4 500W	9 000W	1 800W	9 000W
<a href="#">BN39V-770-30k NG</a>	7 500W	15 000W	3 000W	15 000W
<a href="#">BN39V-1250-48k NG</a>	12 000W	24 000W	4 800W	24 000W
<a href="#">RacPower BN52V-100-5.2k BP</a>	< 2 600W	2 600W	< 3 640W	3 640W
<a href="#">RacPower BN52V-100-5.2k DU</a>	< 3 120W	3 120W	< 5 200W	5 200W
<a href="#">BN52V-77-4k NG</a>	1 000W	2 000W	400W	2 000W
<a href="#">BN52V-154-8k NG</a>	2 000W	4 000W	800W	4 000W
<a href="#">BN52V-230-12k NG</a>	3 000W	6 000W	1 200W	6 000W
<a href="#">BN52V-310-16k NG</a>	4 000W	8 000W	1 600W	8 000W
<a href="#">BN52V-460-24k NG</a>	6 000W	12 000W	2 400W	12 000W
<a href="#">BN52V-690-36k NG</a>	9 000W	16 640W	3 600W	16 640W
<a href="#">BN52V-770-40k NG</a>	10 000W	20 000W	4 000W	20 000W
<a href="#">BN52V-920-48k NG</a>	12 000W	16 640W	4 800W	16 640W
<a href="#">BN52V-1250-65k NG</a>	16 250W	32 500W	6 500W	32 500W

## 8. Configure MPPT

1. Disable Autodetect voltage
2. Set Battery voltage to 48V.

It is recommended to make these settings using the VictronConnect App and Bluetooth.

\*\* - All latest GX devices applicable.

# DISQUS

~~DISQUS~~

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

[https://www.victronenergy.com/live/battery\\_compatibility:bluenova?rev=1598541706](https://www.victronenergy.com/live/battery_compatibility:bluenova?rev=1598541706)

Last update: **2020-08-27 17:21**

