


MyPv Ac-Thor and Victron Energy ESS

When the batteries are full, we still have PV power available, but our grid operator doesn't allow feeding, that power is lost. We could use that power and send it to a boiler or something similar. For this we are using a device from My PV called AC-Thor.

The schematic for the ESS system looks like this:

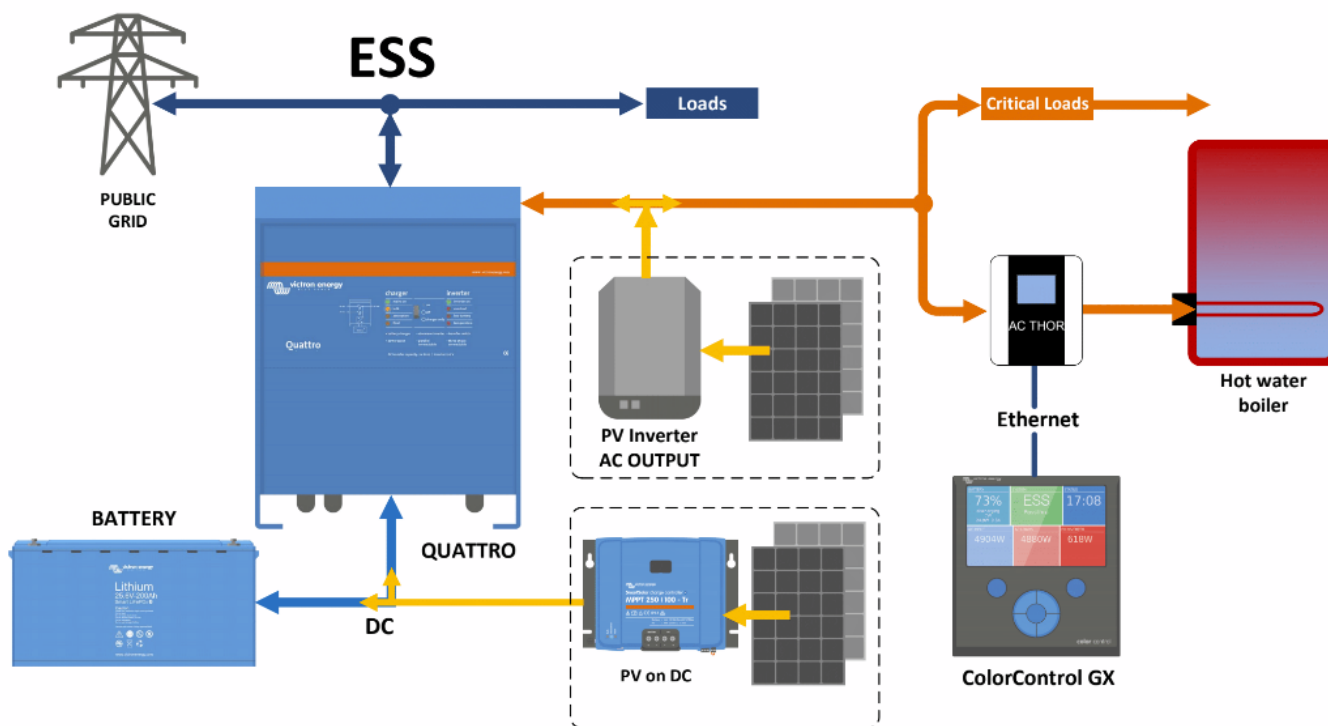

First setup:

Ac-Thor device must be connected on the AC output of the Multi/Quattro.


Must be in the same LAN network as Color GX or Venus GX, with DHCP enable (default).

Using the device touch screen, select Information menu and go to the third screen to find the current IP address.



Open a browser, put that IP address into the address field and press enter

The webpage should look like this:

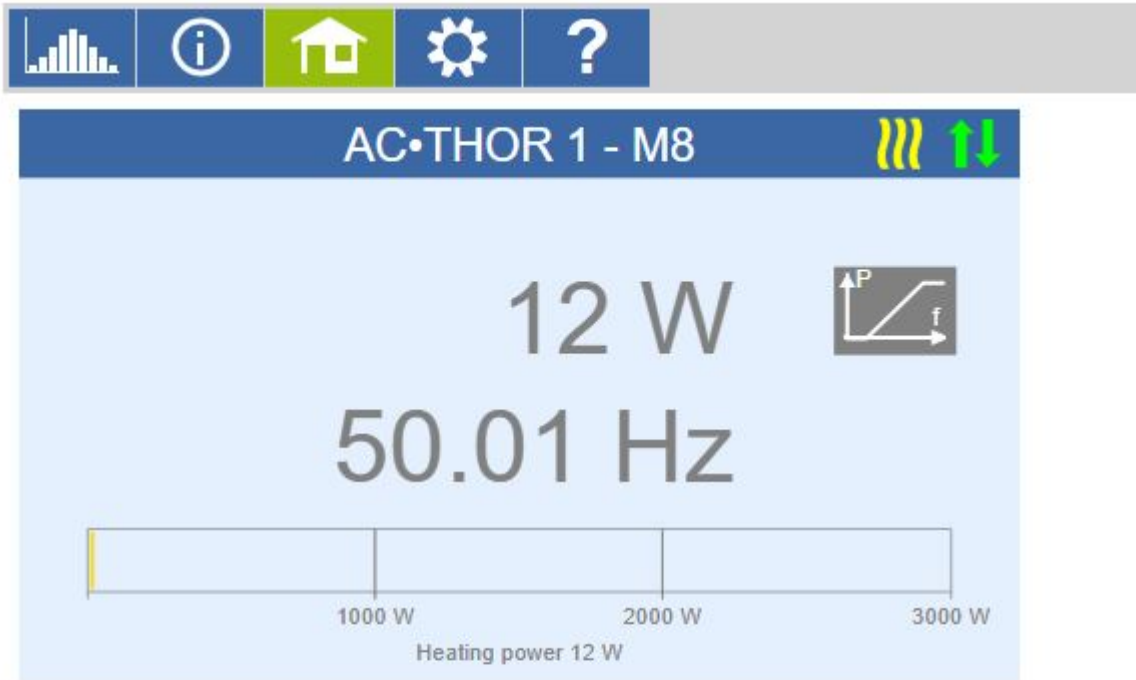

Device state

- Off
- On

Firmware Version: a0010006
 Internet connection required for help.
 © 2018 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com

Please check the firmware version on AC-Thor device, must be at least a0010006. Go to setting and select the "Mode". For ESS select "Hot water 3KW", .

Access level

Level: Password:

Mode

Mode:

In order to have communication between the Color/Venus GX device and Ac-Thor, some parameters must be configured:

On Signal Source, select "Adjustable Modbus TCP(Sunspec etc)".

Device ID must be 0.

Metter Register 820, Int16 and -feed in.

For Scale Register, don't select anything.

For Modbus Port, leave the default value (502).

On the IP address field, you have to put the VenusGX/CCGX IP address. If you don't know how to obtain it, please check here: <https://www.victronenergy.com/live/venus-gx:start>

On the Control target, recommended value is -50W.

Control type


Signal source: <small>ACTHOR Number >1: only "Slave" selectable</small>	Adjustable Modbus TCP (Sunspec etc) ▼
<input type="button" value="Save"/>	

Control settings

Device ID:	<input type="text" value="0"/>			
Meter Register:	<input type="text" value="820"/>	Int16 ▼	- feed in ▼	
Scale Register / Factor:	<input type="text" value="1001"/>	none ▼		
Modbus Port:	<input type="text" value="502"/>			
IP address of the signal source:	<input type="text" value="10"/>	<input type="text" value="10"/>	<input type="text" value="11"/>	<input type="text" value="155"/>
Control status:	No Control			
Power timeout:	<input type="text" value="10"/>	Seconds		
Control target: <small>Negative value means feed-in. Only change this value if you are familiar with the control strategy - red Help for more details.</small>	<input type="text" value="-50"/>	W		
Block Start-Hour:	<input type="text" value="0"/>	Block Stop-Hour:	<input type="text" value="0"/>	
<input type="button" value="Save"/>				

Press Save to store the parameters.

On the Venus/Color GX please be sure that Modbus TCP is enabled (Setting, Services, Modbus/TCP)

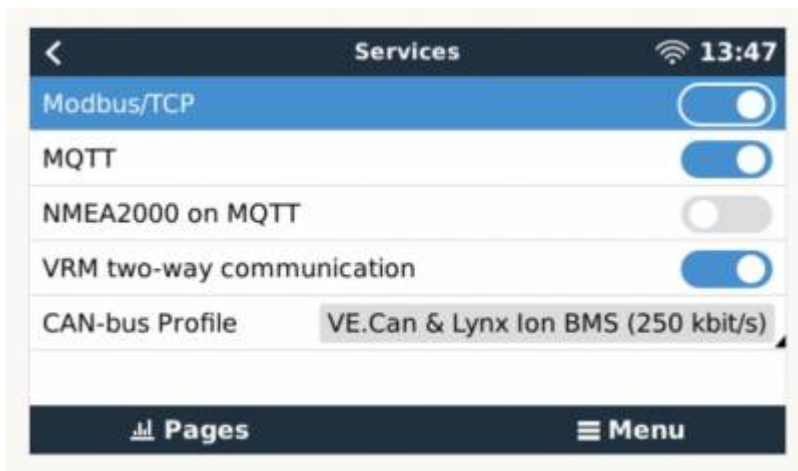

Also in Setting /ESS, Feed-in excess solar power must be enabled for system with PV panels connected using MPPT's and Fronius Zero Feed-in must be disabled for systems with PV panels connected using Fronius PV Inverters.



If everything is correctly configured, you should see in the information screen of the Ac-Thor, the grid consumption/feed displayed as Meter measured value, positive for consumption and negative for feed in:


Power total	0 W
Power share PV	0 W
Power share grid	0 W
Power 1 share PV	0 W
Power 1 share grid	0 W
Power 2 share PV	0 W
Power 2 share grid	0 W
Meter	87 W
Power PV	0 W
Load	1
Load nominal power	0 W

© 2018 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com

Power total	447 W
Power share PV	447 W
Power share grid	0 W
Power 1 share PV	447 W
Power 1 share grid	0 W
Power 2 share PV	0 W
Power 2 share grid	0 W
Meter	-430 W
Power PV	0 W
Load	1
Load nominal power	0 W

© 2018 my-PV GmbH, Austria. All Rights reserved. www.my-pv.com

AC-Thor will control the energy sent to the boiler so that the energy sent to the grid is approximately 50W.

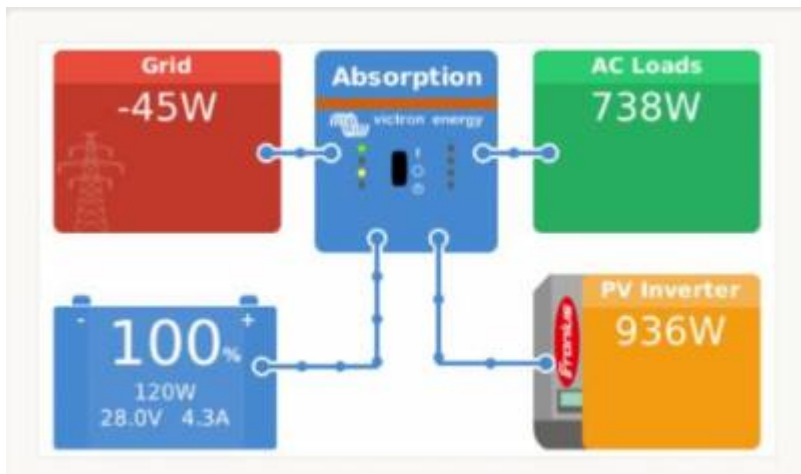

To prevent boiler to over heat, please be sure the temperature sensor is connected to AC-Thor and installed inside the boiler. The temperature parameters can be configured in the settings menu:

Hotwater

Temperature:	max °C	Min °C
	60	50
Boost-Mode:	<input checked="" type="radio"/> Off	<input type="radio"/> On
Timeframe:	start hour	stop hour
	17	23
Weekday	<input type="checkbox"/> Mon	<input type="checkbox"/> Tue
	<input type="button" value="Save"/>	

AC-THOR Technical specifications:

- mains voltage 230 V, 50 Hz
- outputs 0-3000 W infinitely variable + switching output 16 A
- mains connection Single-phase, earthing contact plug
- consumer connection Protective contact socket for resistive loads
- display Color Graphics, Touch Screen 2.83 "
- connection cable 2,8 m
- dimensions (W x H x D) 135 x 210 x 65 mm

From: <https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link: https://www.victronenergy.com/live/actor_ess?rev=1558697388

Last update: **2019-05-24 13:29**

