


PV Inverter Assistant in a three phase installation on 2xx

Notes

- This page shows VE.Bus System Configurator. Note that it is also possible to use VE,Bus Quick Configure.
- The channels configuration, which is what makes this a bit more complicated than usual, is only necessary on 2xx firmware. On new firmware (4xx), this is all done automatically behind the scenes.


Step by step instructions


Select Phase 1 and right click on the Multi icon to access VE Configure:

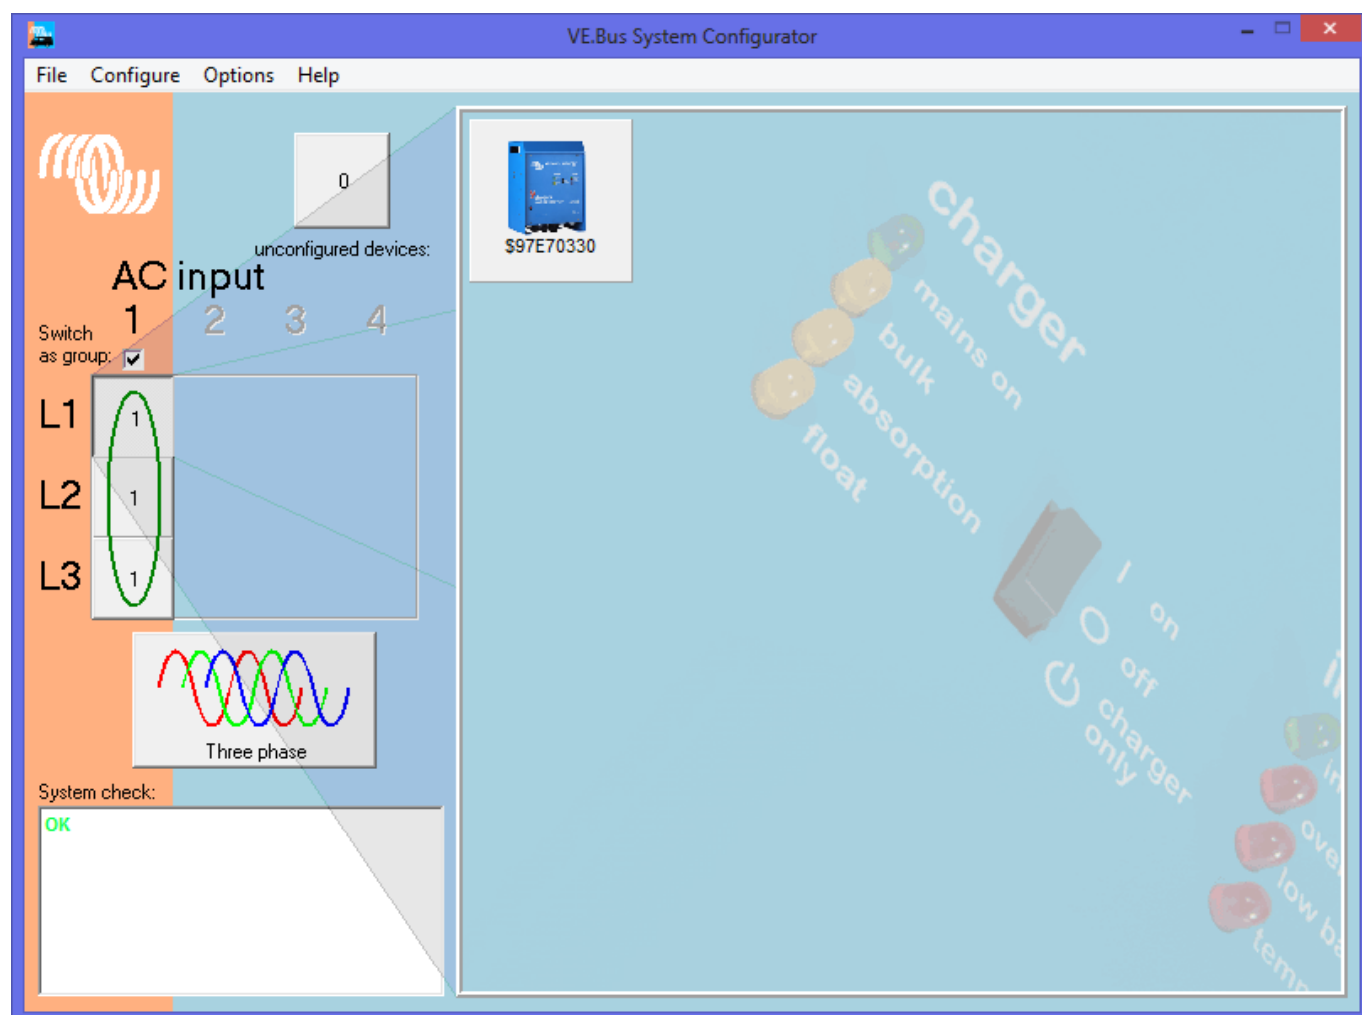


Last update:

2019-01-22 assistants:three_phase_pv_inverter_assistant https://www.victronenergy.com/live/assistants:three_phase_pv_inverter_assistant
10:16

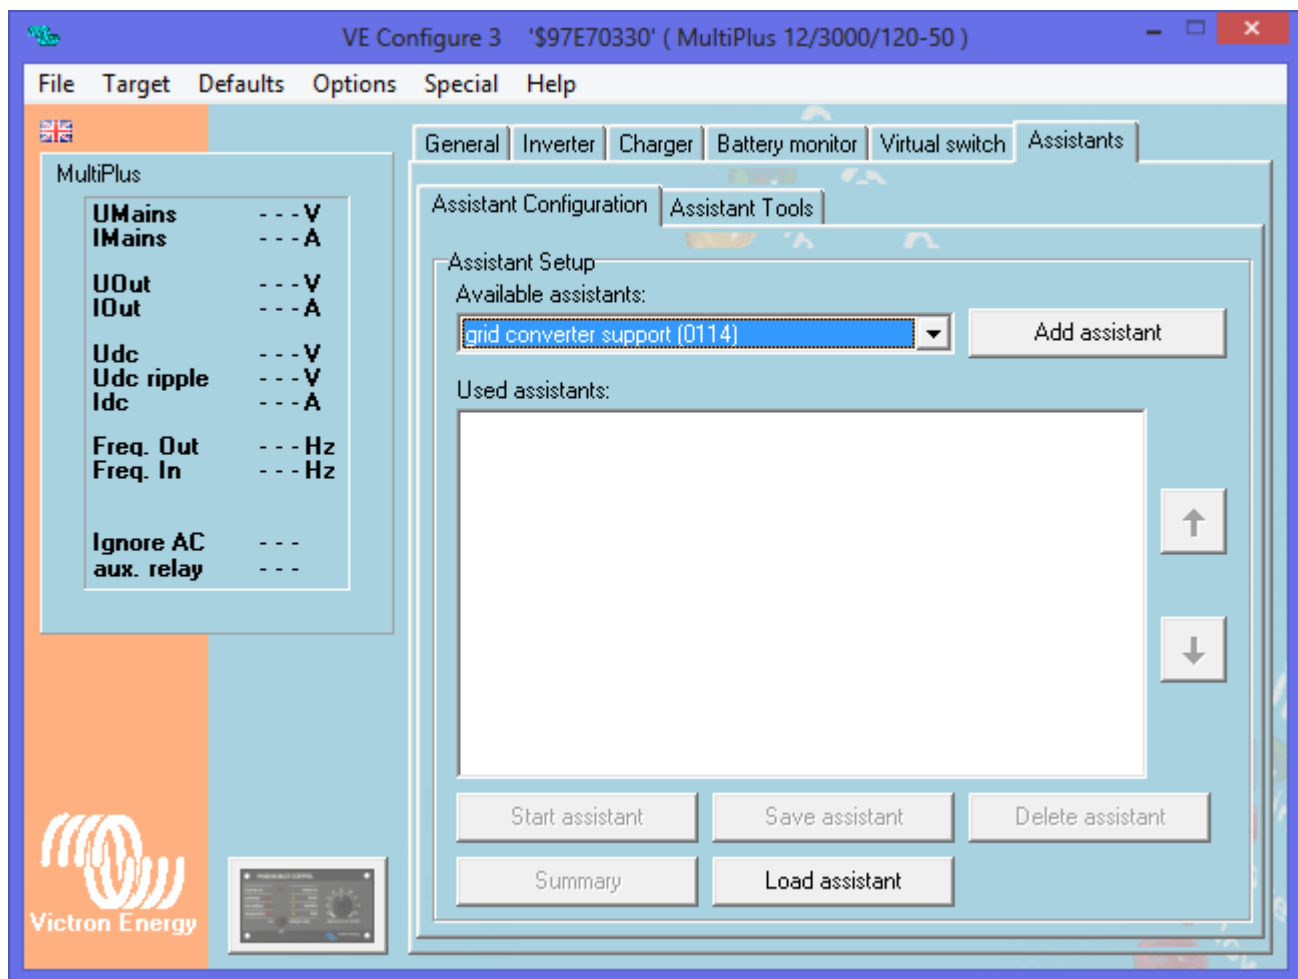


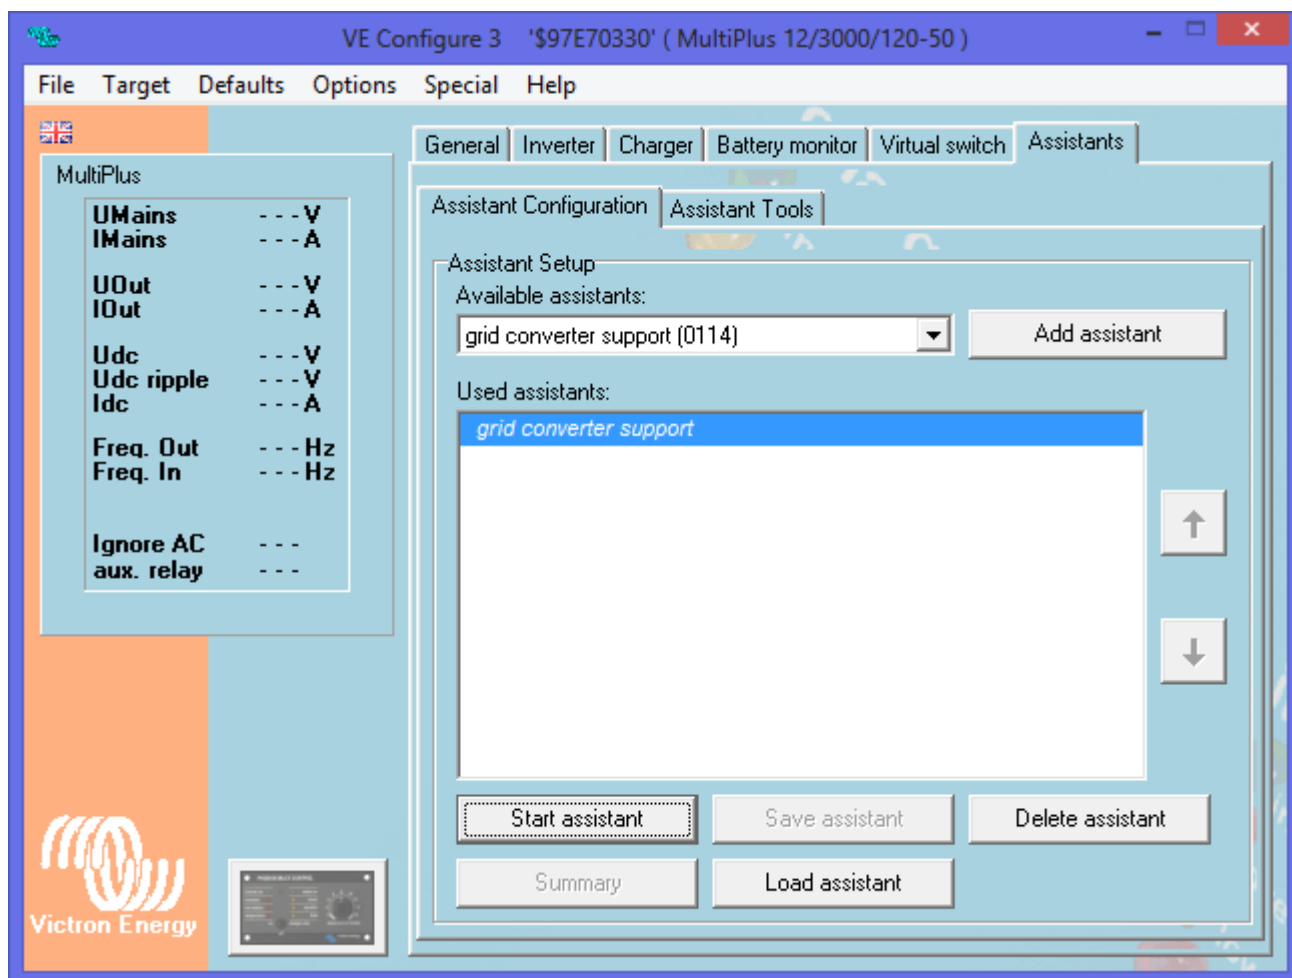

Start the assistant, read the welcome page carefully!

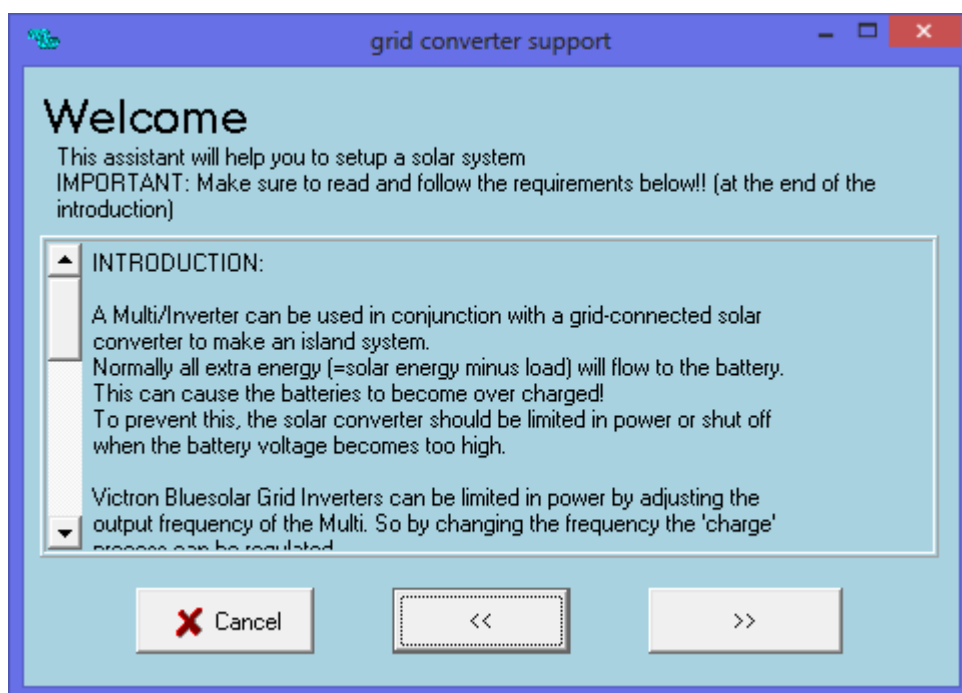

The Solar Charge Channel must stay at channel 2.

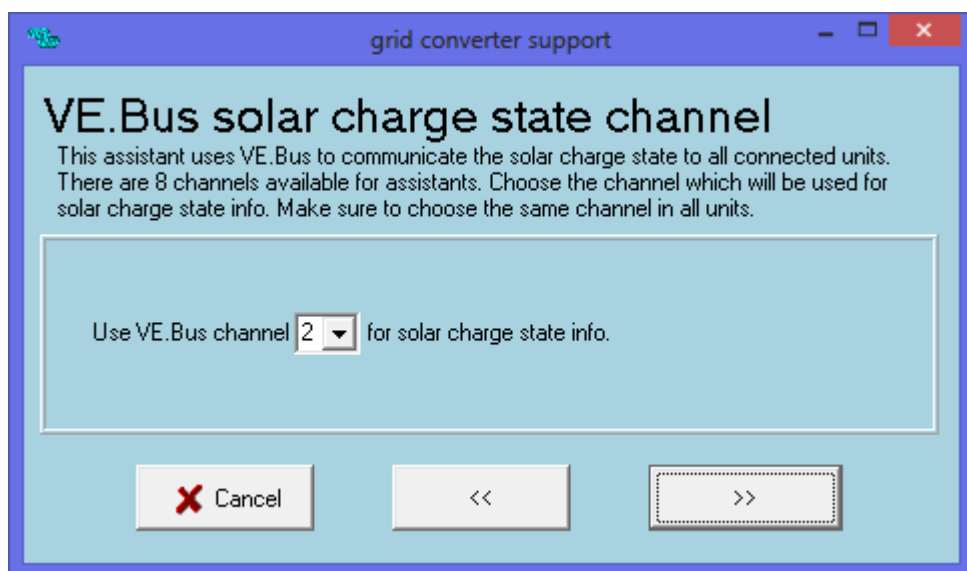


grid converter support

VE.Bus solar charge state channel

This assistant uses VE.Bus to communicate the solar charge state to all connected units. There are 8 channels available for assistants. Choose the channel which will be used for solar charge state info. Make sure to choose the same channel in all units.

Use VE.Bus channel for solar charge state info.

Phase 2 Solar Channel stays at 3

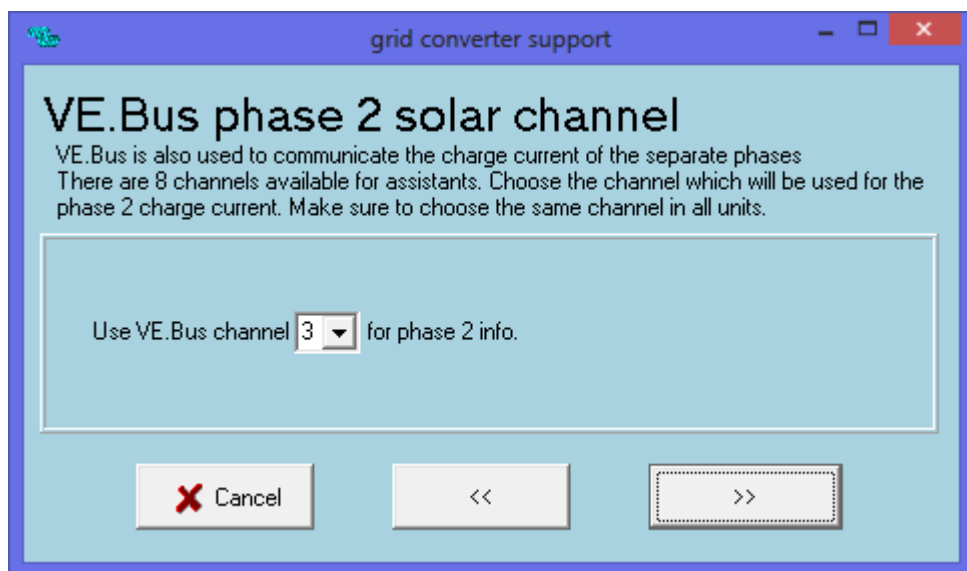


grid converter support

VE.Bus phase 2 solar channel

VE.Bus is also used to communicate the charge current of the separate phases. There are 8 channels available for assistants. Choose the channel which will be used for the phase 2 charge current. Make sure to choose the same channel in all units.

Use VE.Bus channel for phase 2 info.

Phase 3 Solar Channel stays at 4

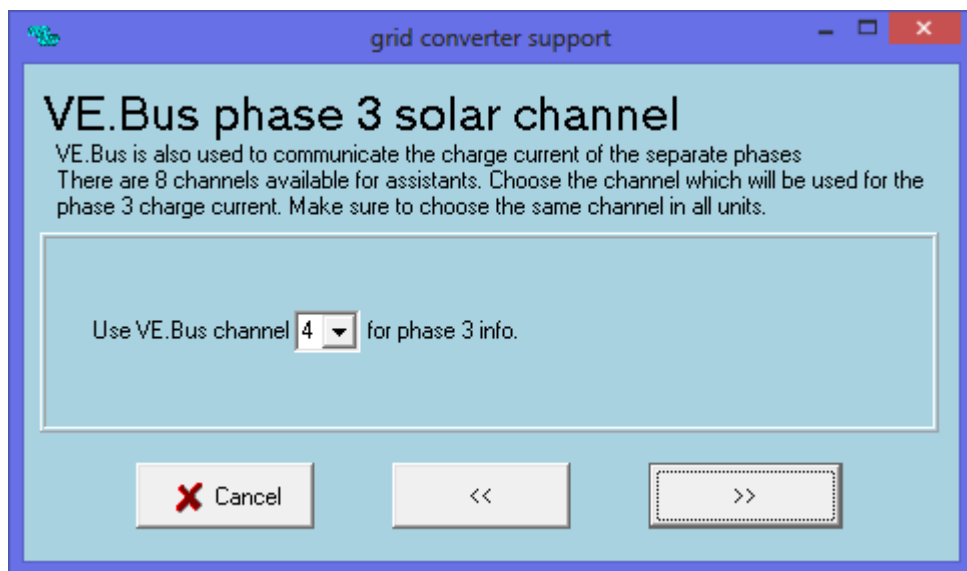

grid converter support

VE.Bus phase 3 solar channel

VE.Bus is also used to communicate the charge current of the separate phases. There are 8 channels available for assistants. Choose the channel which will be used for the phase 3 charge current. Make sure to choose the same channel in all units.

Use VE.Bus channel for phase 3 info.

The Settings inside the Grid Inverter for Frequency control must be known, in smaller systems the start setting can be from 50.2 to 50.8 more or less and in bigger systems it can start at 51Hz. The Inverter/charger will only shift its frequency to just below the shutdown point to ensure the Grid Inverter stays on but stops producing power. In Smaller systems the shutdown point can be around 52hz and then again for bigger systems around 53Hz, these levels are only indications.

grid converter support

Disconnect frequency

Enter the frequency at which the grid converter disconnects.
Note: the assistant assumes that:

- * solar power will be reduced to minimum at (Disconnect frequency - 0.2Hz)
- * solar converter will be switched off at (Disconnect frequency + 0.1Hz)

The solar converter disconnects at 52.90 Hz.

Cancel << >>

This value is the total installed PV Power divided by the number of Inverter/chargers.

grid converter support

Relative solar power

Please calculate the relative solar power as:
Total installed solar converter power / Total nr of Multis or Quattros

Relative solar power is 2498 Watts.

Cancel << >>

DISQUS

~~DISQUS~~

Last update:

2019-01-22 10:16 assistants:three_phase_pv_inverter_assistant https://www.victronenergy.com/live/assistants:three_phase_pv_inverter_assistant

From:

<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:

https://www.victronenergy.com/live/assistants:three_phase_pv_inverter_assistant



Last update: **2019-01-22 10:16**