

Furuno MFD Integration

1. Introduction

This document explains how to connect to Furuno MFDs using an Ethernet connection.

Make sure to also study the [Marine MFD Integration by App chapter in the manual](#).

Note that there is an alternative method to connect, which is NMEA2000. See the [NMEA2000 chapter in the main manual](#).

2. Compatibility

Furune MFD software requirements: TDB

The MFD integration is compatible with the following models:

- NavNet TZtouch3 TZT12F
- NavNet TZtouch3 TZT16F
- NavNet TZtouch3 TZT19F
- Navnet TZtouch2 TZT2BB Black box

Note that the Navnet TZtouch2 TZTL models are **not** supported.

3. Wiring


The Furuno device needs to be connected to the [GX device](#) using Ethernet. Its not possible to connect over WiFi. For the ethernet connection, a standard ethernet cable can be used.

4. Configuration

4.1 Ethernet configuration

On the Victron GX Device, go to *Settings* → *Ethernet*, and change the following settings:


Setting	Value
IP Configuration	Manual
IP address	172.31.201.12
Netmask	255.255.0.0
Gateway	0.0.0.0 or the IP address of the router in your network
DNS server	0.0.0.0 or the IP address of the router in your network

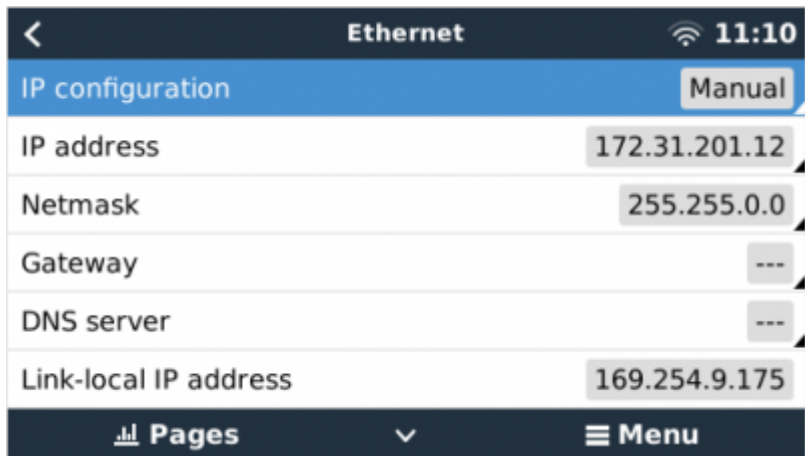

It is possible to connect the a router to the same LAN; and that way connect the GX Device to the internet. Make sure the *Gateway* setting of the GX is set to the IP address of the router.

4.2 Services configuration


On the Victron GX Device, go to *Settings* → *Services*, and there enable both *MQTT on LAN (SSL)* and

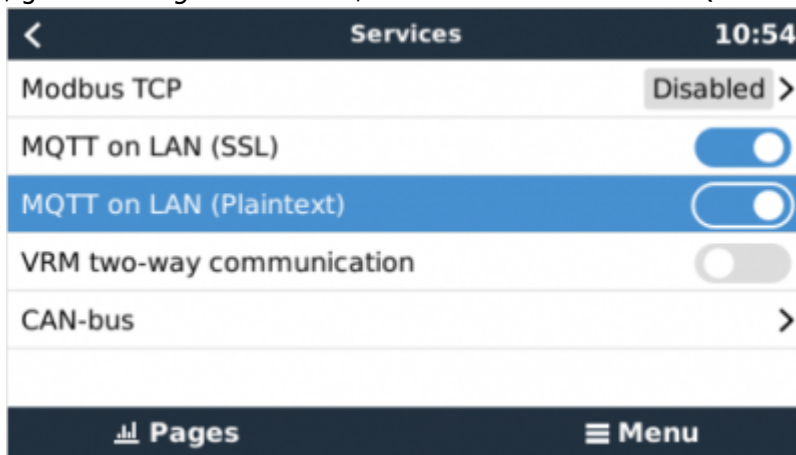

MQTT on LAN (Plaintext).

Next, go to *Settings* → *System Setup* → *Scroll to the bottom* → *Marine MFD App configuration*. And there set up what batteries you want to see on the MFD; and by what name.



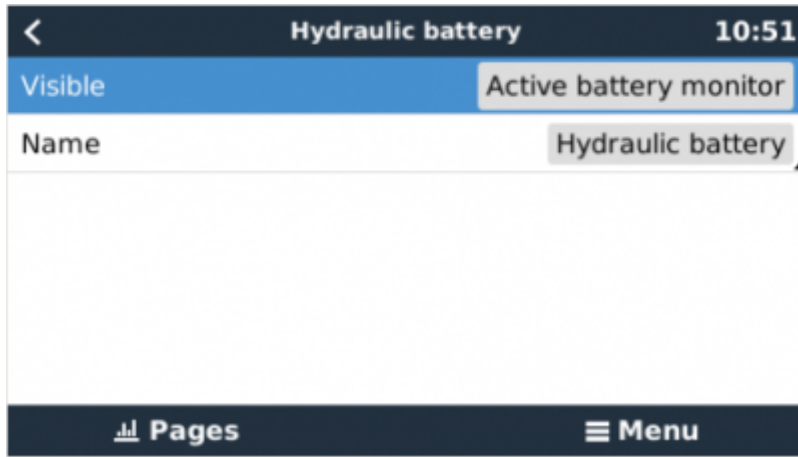

5. Configuring Multiple Battery Monitors



Video

From:
<https://www.victronenergy.com/live/> - **Victron Energy**

Permanent link:
<https://www.victronenergy.com/live/venus-os:mfd-furuno?rev=1591780863>

Last update: **2020-06-10 11:21**

